
 


NetBotz[®] Vibration Sensor (NBES0306) Installation Instructions

Inventory

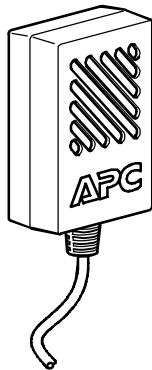


Vibration sensor with 3.65-m (12-ft)
cable (1)




22-mm (7/8-in) hook and loop
fastener (1)



203-mm (8-in) tie wrap (10)

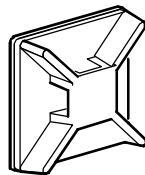

Adhesive cable tie holder (5)

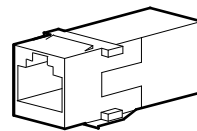

RJ-45 coupling (1)

Installation




Caution: Make sure you connect this sensor to a **Sensor** port on applicable NetBotz products. See your NetBotz product documentation for details.



Note: The typical location for the vibration sensor is on a main support in the top half of the enclosure. Avoid installing the sensor near a cooling unit, which could cause the sensor to give false alarms.



Note: You can extend the length of the sensor cable up to 30.5 m (100 ft) using the RJ-45 coupling and standard CAT-5 cabling.

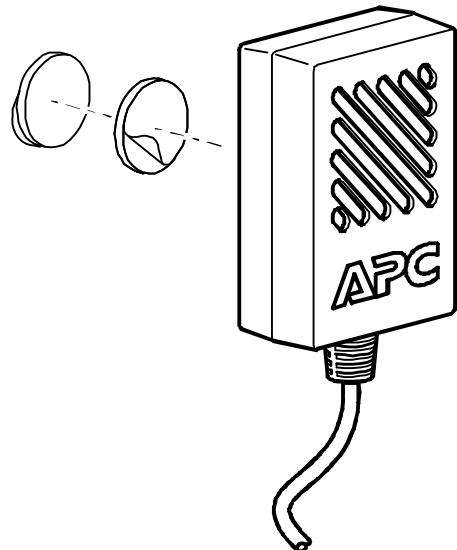

Customer support and warranty information is available at the APC Web site, www.apc.com.

© 2008 American Power Conversion. All rights reserved. All APC trademarks are property of American Power Conversion. Other trademarks are property of their respective owners.

990-3376

5/08

