

# Power Fail Monitor Quick Start Guide



**T**hank you for purchasing the Raptor Power Fail Monitor (PFM). This guide describes how to install the PFM.

If you need further assistance, contact RLE Technologies on our website at <http://www.rletech.com/> (go to the **Support Link**) or by calling 970.484.6510, Option 2.

**Raptor**

**RLE**  
Technologies

## Installation and Setup



The PFM is in its normal state when power is applied. The state noted on the Form C output relay is the state of the output when the PFM is energized.

To install the PFM:

- 1 Wire the relay output to the appropriate input on the Falcon system, RA1x2, or other equipment that will accept a digital dry contact input.
- 2 Plug the PFM into a 120V outlet.

©2010 RLE Technologies. All rights reserved. RLE is a registered trademark, and SeaHawk, Falcon, and Raptor are trademarks of RLE Technologies. All other trademarks or registered trademarks are the property of their respective companies. Although the information contained in this document is believed to be accurate and correct, RLE Technologies assumes no responsibility, and disclaims all liability, for any damages resulting from the use of this information or any error or omission in this document. RLE Technologies does not warrant, guarantee, or make any representations as to the performance, fitness for use, safety, or reliability of any existing or future wiring, equipment, additions or modifications to equipment, or any other component of the original or modified system. Specifications are subject to change without notice. Part number 120056 Rev. 1.0 6/2010

**RLE**  
Technologies

104 Racquette Drive  
Fort Collins, CO 80524  
970.484.6510  
[www.rletech.com](http://www.rletech.com)