


ONE-PIECE TELEPHONE

Model 9150

OPERATING INSTRUCTIONS



FEATURES OF YOUR TELEPHONE

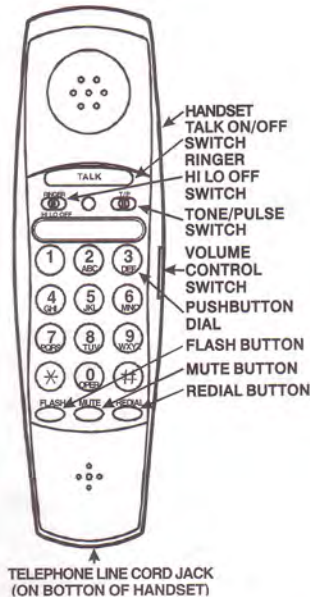

Hearing-Aid Compatible Handset The handset on your telephone is equipped with a TONE/PULSE switch, RINGER HI LO OFF switch, MUTE, FLASH AND REDIAL buttons, and a receiver that works with magnetically-coupled hearing aids.

Ringer Volume Control The 3-position switch is used to set ringer volume. You can select high volume (HI), low volume(LO), or you can silence the ringer(OFF).

TONE/PULSE Switch The TONE/PULSE switch is used to set the type of dialing for your telephone to match the local service from your telephone company. The PULSE position is for Pulse dialing service. The TONE position is for Tone dialing service. (Some telephone companies cannot accept Tone dialing.)

Push Button Dial The push button dial is used to dial numbers using either pulse or tone dialing. The dial light is on when you lift the handset.

MUTE Button You can press and hold the MUTE button so that the other party cannot hear the conversation at your telephone. You can continue to listen to the other party.


FLASH Button The FLASH button sends an interrupt signal to the telephone service provider which tells the office that you wish to use an available feature. The results of a FLASH signal will depend on the services you have available.

REDIAL Button Your telephone stores the last number dialed (32 digits maximum) in memory. You can dial the stored number by lifting the handset and pressing the REDIAL button.

You can erase the number stored in memory by lifting the handset and dialing any digit.

SETTING THE VOLUME

Slide VOLUME to HI or LO to control the volume you hear through the handset.

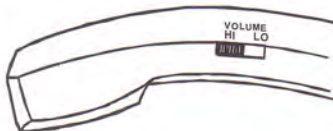

INSTALLING YOUR TELEPHONE

Plug the coiled end of the line cord into the end of the telephone. The straight end of the line is plugged into the wall telephone jack.

CHECK FOR DIAL TONE

Lift the handset and press Talk/On/Off button. The button will light and you will hear a dial tone. The telephone is ready for use. After using, press Talk On/Off button again. The light will shut off, and the telephone will hang up.

BEFORE USING YOUR TELEPHONE

1. **Set the ringer volume control.** If the control is set to OFF, you will not hear the ringer when someone calls you.
2. **Your telephone has a TONE-PULSE switch.** Set the switch to match the dialing service from the telephone company.
 - If you have pulse service, set the Tone-Pulse switch to PULSE.
 - If you set the switch for TONE service, you must have TONE service or you cannot dial.
 - If you set the switch for PULSE service and you have TONE service, you can dial numbers, but you cannot use services, such as bank-by-phone, which require TONE signals.
 - If you have PULSE service and your telephone has a TONE-PULSE switch, you can set the switch to PULSE and dial a service and then set the switch to TONE to use the service, BE SURE TO SET THE SWITCH TO PULSE WHEN YOU FINISH THE CALL.

SAFETY AND MAINTENANCE INSTRUCTIONS

IMPORTANT! PLEASE READ BEFORE USE.

To keep your telephone in good working condition, please follow the instructions below:

- Do not keep this unit in direct sunlight, moisture, in humid areas, or near appliances that give off excessive heat.
- Use a soft cloth dampened with water to clean the unit. Be sure to unplug the line from the unit before cleaning. Do not use strong solvents or cleaning agents such as abrasives or powder, which may damage the phone exterior.
- Do not use the telephone while in a bathtub, shower, or pool. Immersion of the telephone in water could cause electrical shock.
- Avoid using the telephone or touching any telephone wires during an electrical storm. There is a risk of dangerous electrical shock from lightning.

* **"CAUTION** - Always disconnect all telephone lines from the wall outlet before servicing or disassembling this equipment".

* **"FUSE** - Listed (JDYX), rated 0.5A, 250V ac, pig-tail fuse".