 



## CM276A INSTALLATION INSTRUCTIONS

©Panduit Corp. 2002

Printed in U.S.A.



CMBRC5

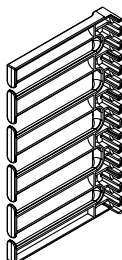


CMBRC5E

### CABLE CAPACITY

MANAGER	UTP Cable .187" Dia per RU
CMBRC5	24
CMBRC5E	48

### Rack Mounting

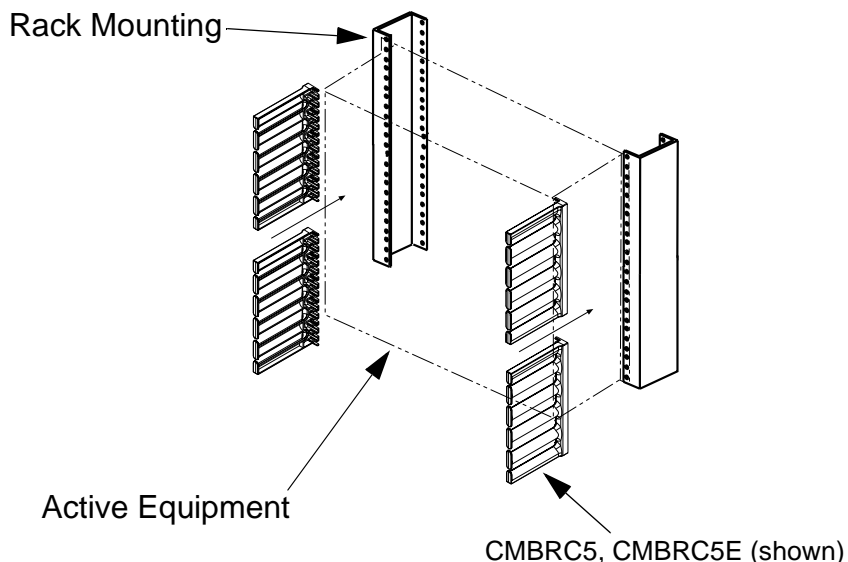


Use screws provided with active equipment to mount CMBRC5 or CMBRC5E on rack over the active equipment by loosening screws so edge of manager can slide under the screwhead, then retighten screws.

When routing the cables from the active equipment into the manager, either of the following two methods is recommended to help maintain cable bend radius.


**METHOD 1:** Route half of the cables from the active equipment cards horizontally through the finger spaces into the vertical pathway. Repeat process for the other half of the cables routing them in the opposite direction.

**METHOD 2:** Route all cables in one direction from the cards horizontally through the finger spaces into the vertical pathway.

### METHOD 1

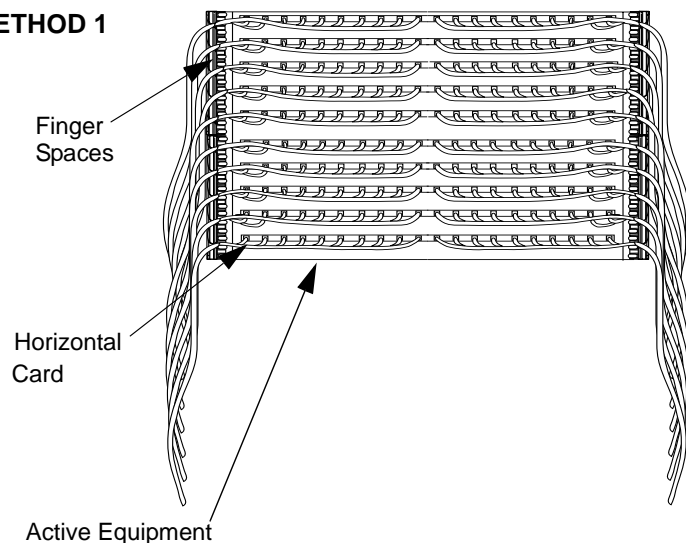

### METHOD 2

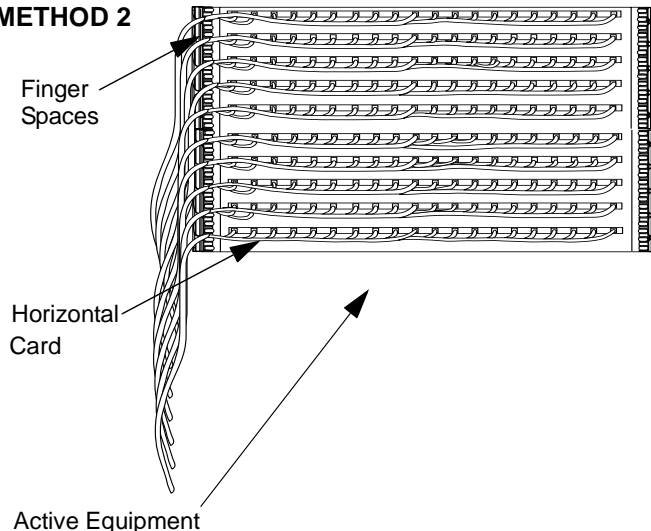

WORLDWIDE SUBSIDIARIES AND SALES OFFICES



NETWORK CONNECTIVITY GROUP

412 Rockwell Court  
Burr Ridge, Illinois 60521

Technical Support: 866-405-6654  
Fax: 708-444-6993

E-mail: [netconnsupport@panduit.com](mailto:netconnsupport@panduit.com)  
Web site: [www.panduit.com/ncg](http://www.panduit.com/ncg)