



## PAN-WAY T702 TRANSITION FITTING



## FOR USE WITH PANDUIT T702 SURFACE RACEWAY ROUTING SYSTEM

PART NUMBERS: T702TRL, T702TR, T702TRI


### INSTALLATION INSTRUCTIONS

©Panduit Corp. 2006




Printed in U.S.A.

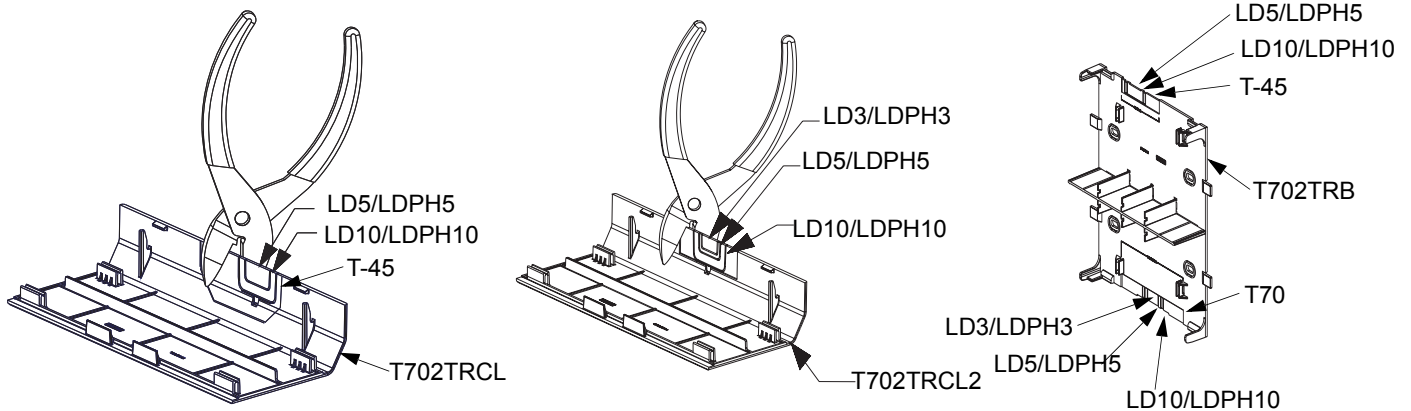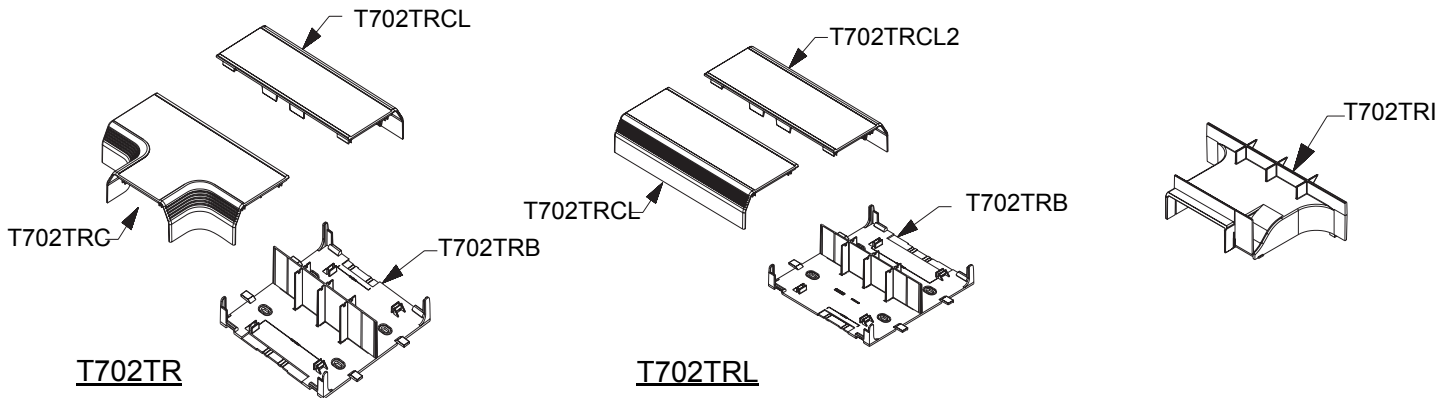

### POWER OR DATA(TRANSITION TO LD)

 

The mounting hardware used to secure the raceway shall be appropriate for the mounting surface.

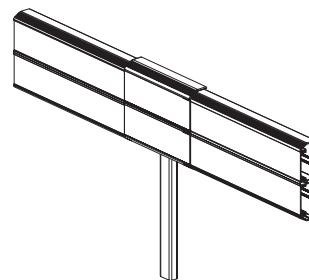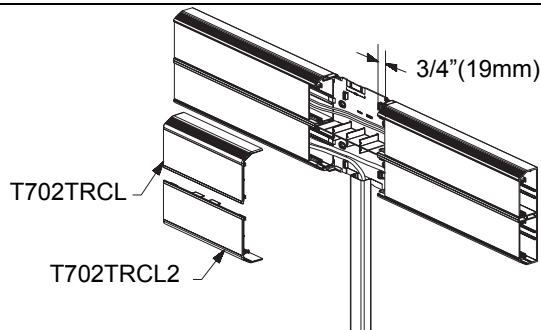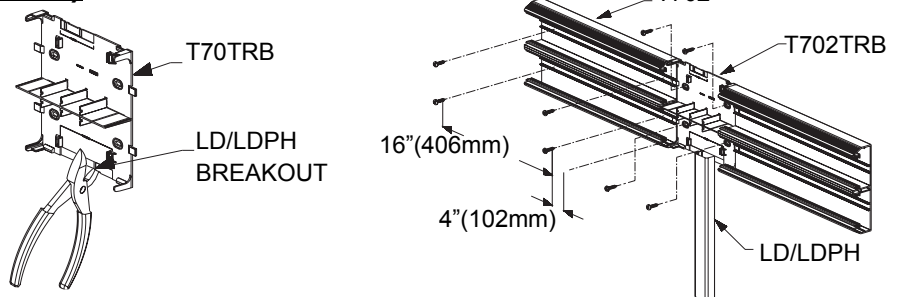

For Technical Assistance call: 866-405-6656





---

# T702 TRANSITION FITTING INSTALLATION INSTRUCTIONS

---

## POWER OR DATA(TRANSITION TO T70)





---

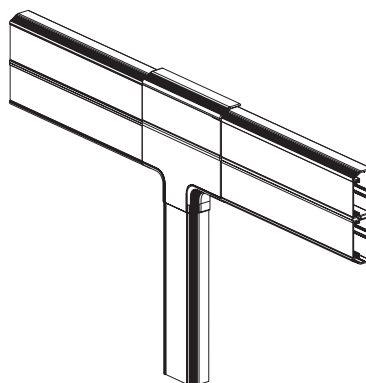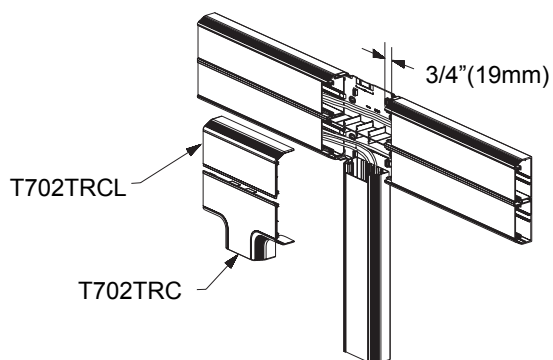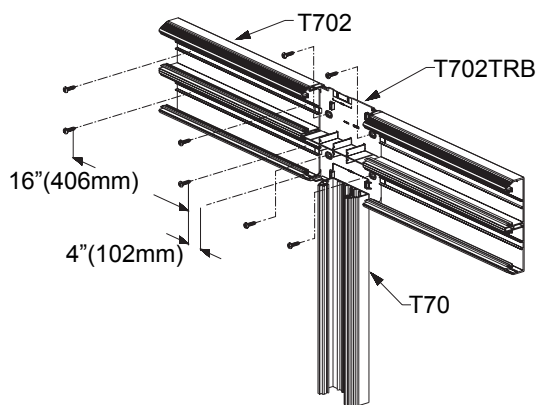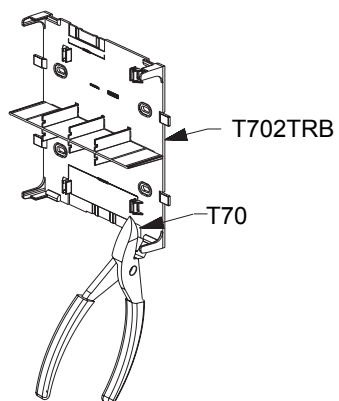

---

## UNDIVIDED TRANSITION W/CROSSOVER

 ---

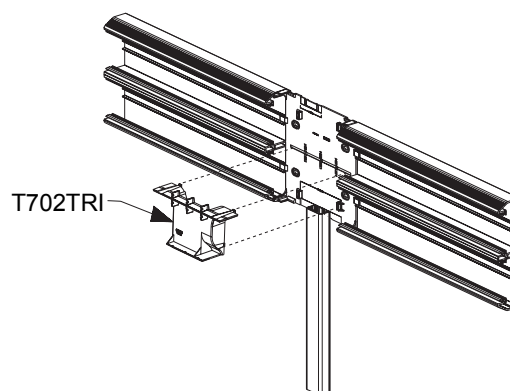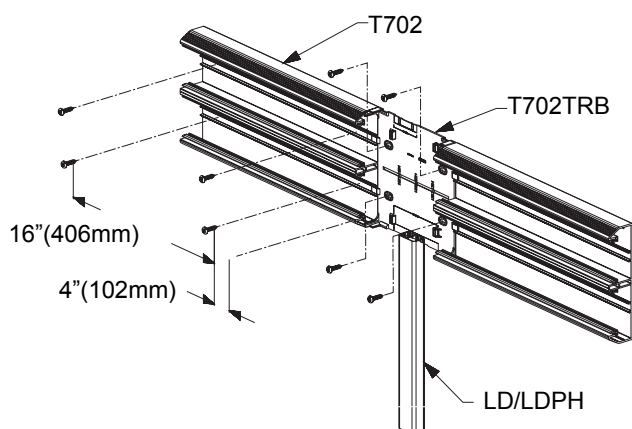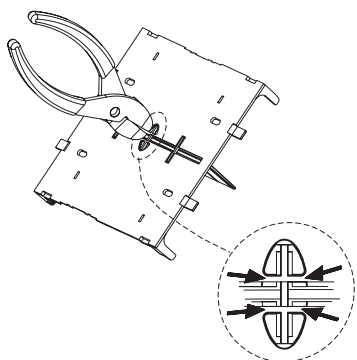


---

# T702 TRANSITION FITTING INSTALLATION INSTRUCTIONS

---

## UNDIVIDED TRANSITION W/CROSSOVER (LD VERSION)CONTINUED


---

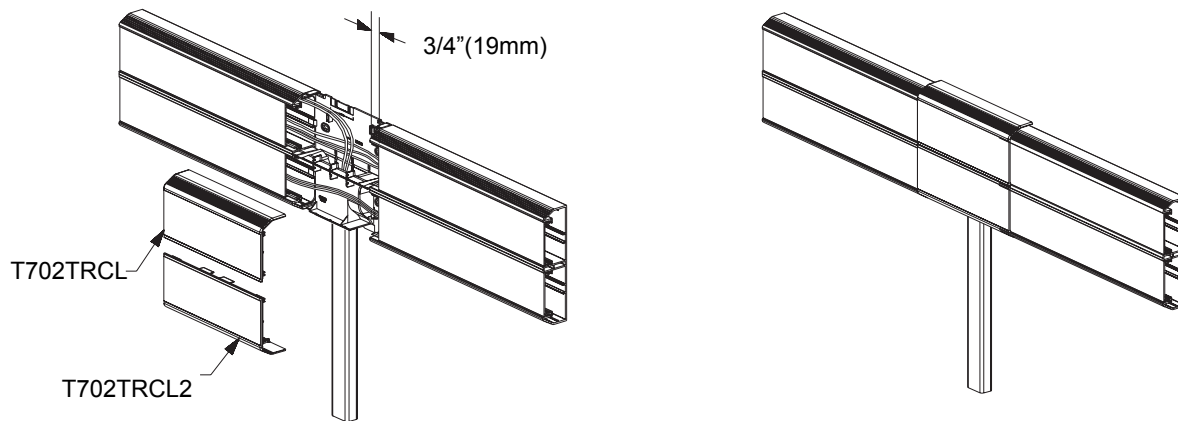

---

## UNDIVIDED TRANSITION W/CROSSOVER (T70 VERSION)


---

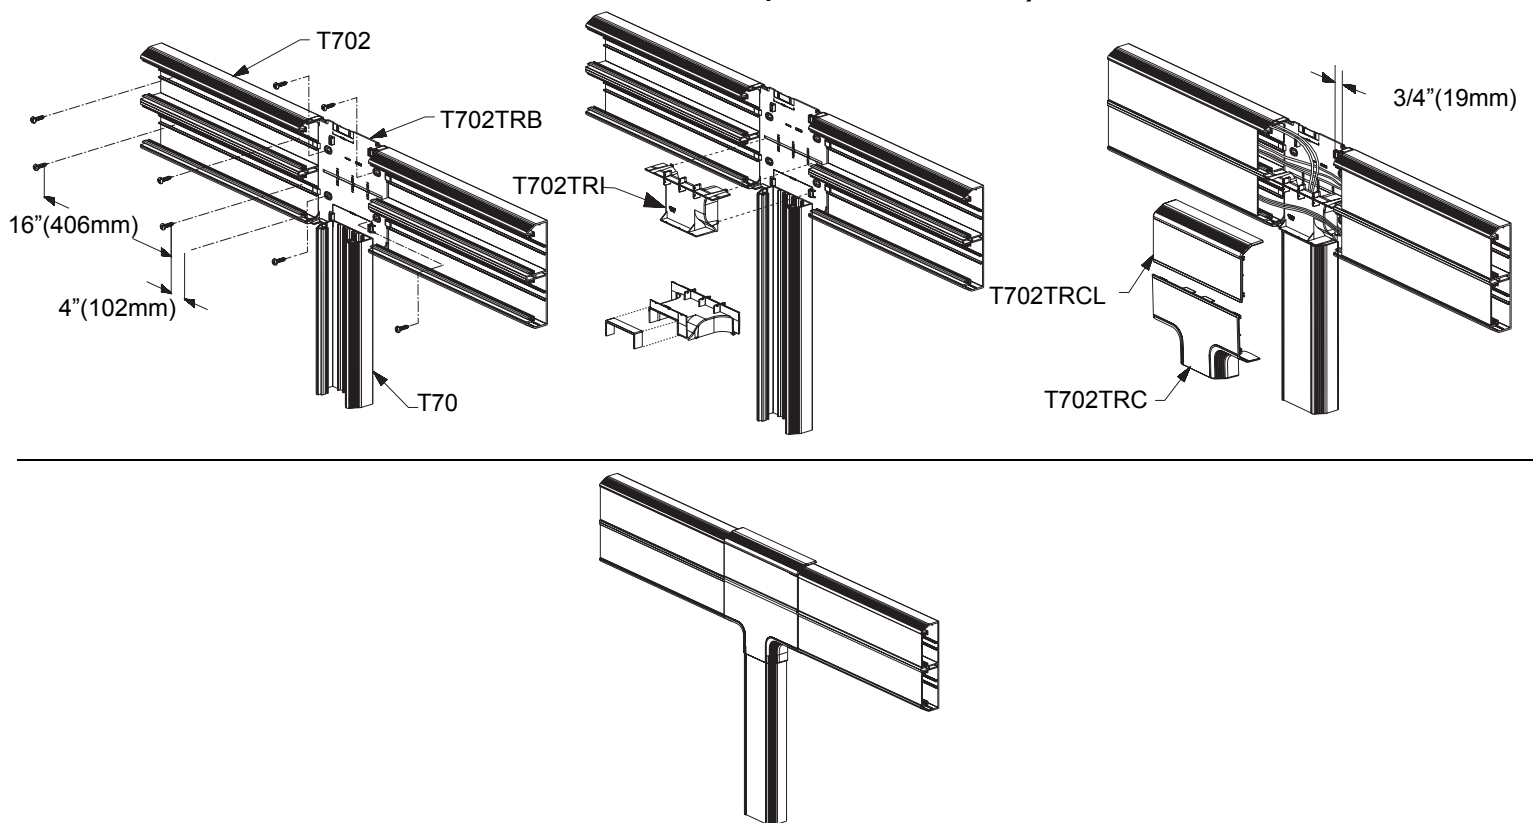

---


## DIVIDED TRANSITION (LD OR T45 VERSIONS)

---

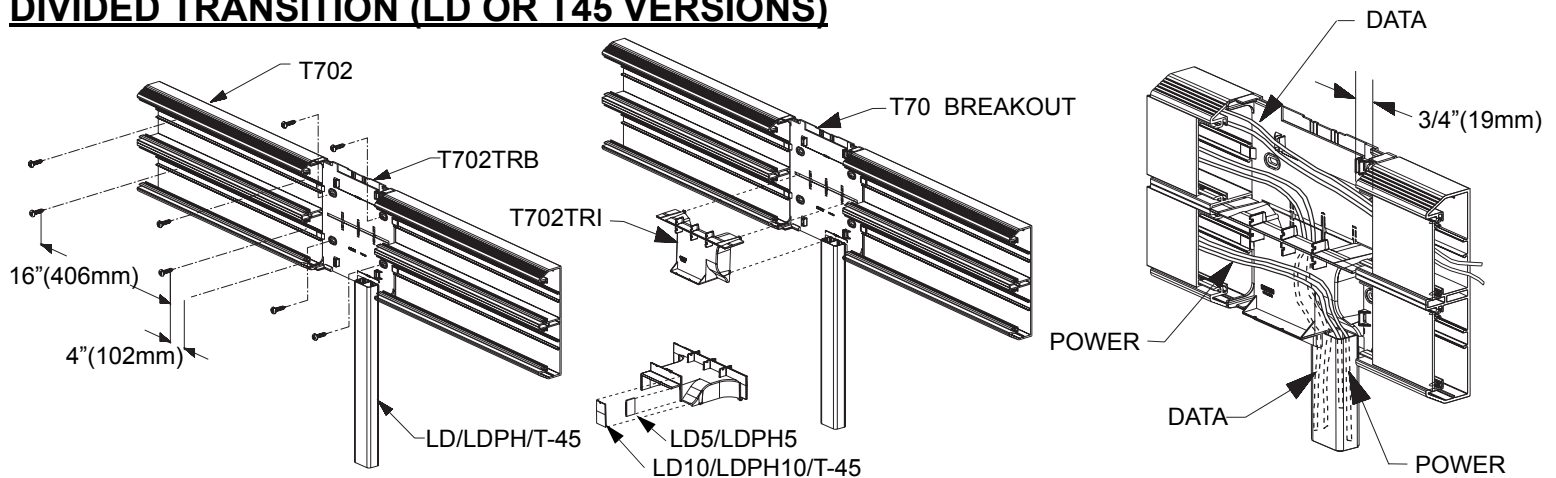


# T702 TRANSITION FITTING INSTALLATION INSTRUCTIONS

## DIVIDED TRANSITION (LD VERSION)

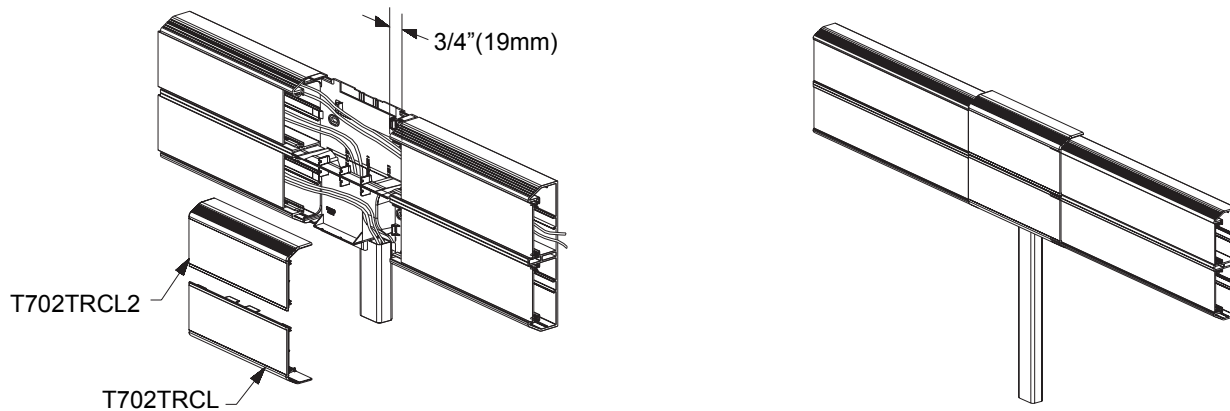

## DIVIDED TRANSITION (T70)

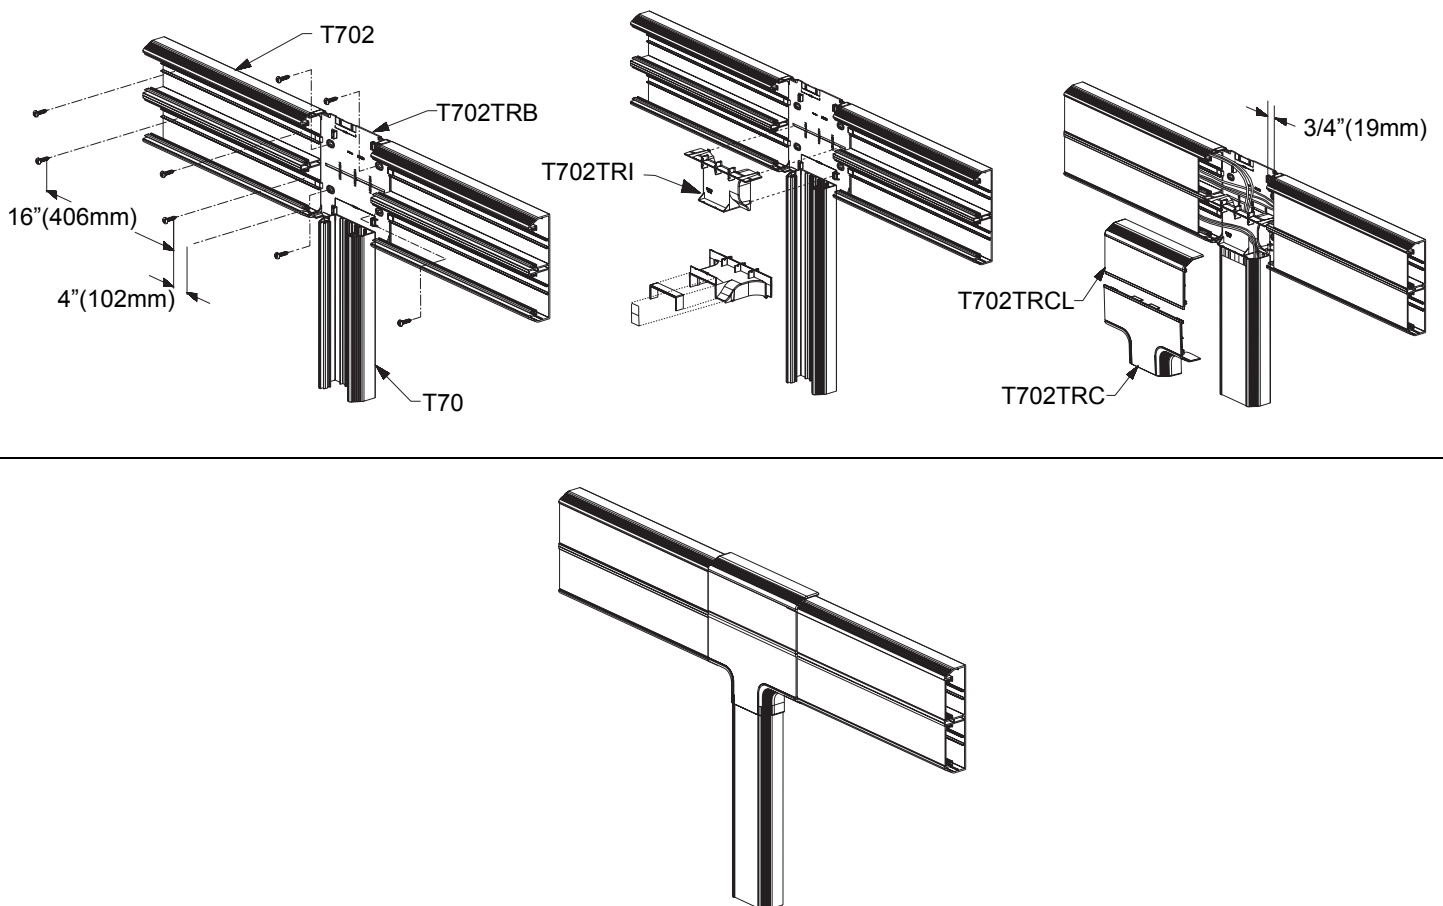

INSTRUCTION SHEET RW12C

### WORLDWIDE SUBSIDIARIES AND SALES OFFICES

17301 Ridgeland Avenue  
Tinley Park, IL 60477-3091  
Web Site: [www.panduit.com](http://www.panduit.com)



Technical Support: 866-405-6656  
Fax: 866-449-1702  
Email: [netconnsupport@panduit.com](mailto:netconnsupport@panduit.com)