


** Denotes color.


Mini-Com TX6 PLUS Jack Modules


Part Numbers: CJ688TP**, CJD688TP**, KJ688TP**


INSTALLATION INSTRUCTIONS PN307H © Panduit Corp. 2011 1 2 T568A T568B (25.4mm) 3 4 T568A T568B T568A T568B 5 6 **T568A** T568B 8 7 CWST CGJT


TERMINATION CAP REMOVAL

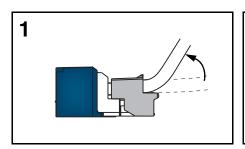


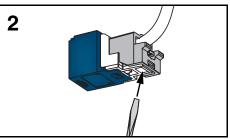

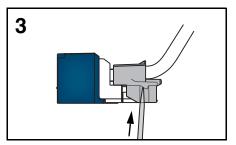

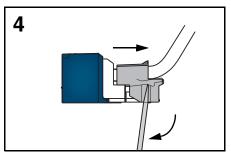

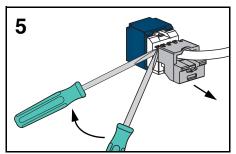

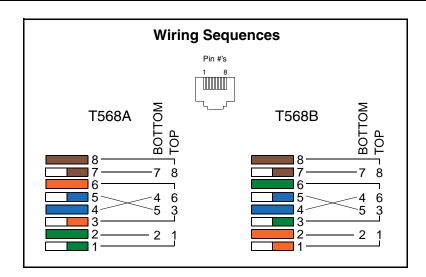

Notes:

- 1. For specified performance, follow ANSI/NECA/BICSI-568-2006 installation guidelines.
- Jack Modules can terminate PVC or Plenum rated 22-24 AWG solid or stranded IWC cable with insulated conductor outside diameter ranging between 0.035 inch (0.88mm) and 0.048 inch (1.2mm).
- 3. Jack Modules may be re-terminated a minimum of 10 times.
- 4. For technical and performance information, consult Panduit Technical Support.
- 5. For TX6 Plus Shielded Jack Module instructions, refer to PN346*.

As with all Wiring Accessories, the following statements apply:

- 1. Never install communications wiring during a lightning storm.
- 2. Never install communications wiring in wet locations unless the jack is specifically designed for use in wet locations.
- 3. Never touch uninsulated communications wiring or terminals unless the communication line has been disconnected at the network interface.
- 4. Use caution when installing or modifying communication wiring.

For Instructions in Local Languages and Technical Support:

PANDUIT www.panduit.com

E-mail: techsupport@panduit.com Phone: 866-405-6654

www.panduit.com/resources/install_maintain.asp