



Fuse Insertion Instructions for *DPoE* Power Chassis

Part Numbers: DPOEPWRCU

© Panduit Corp. 2009

INSTALLATION INSTRUCTIONS PN385B

To install the GMT style fuse in the fuse holder of the *DPoE* Power Chassis, hold the fuse vertically (as shown in Figure 1) with the contact and alarm spring on the top.


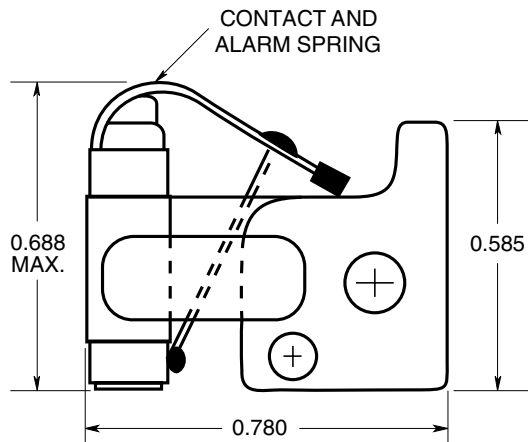


Figure 1

Slide the fuse into the fuse holder in the direction shown in Figure 2.

NOTE: Significant pressure may be required to seat the fuse.

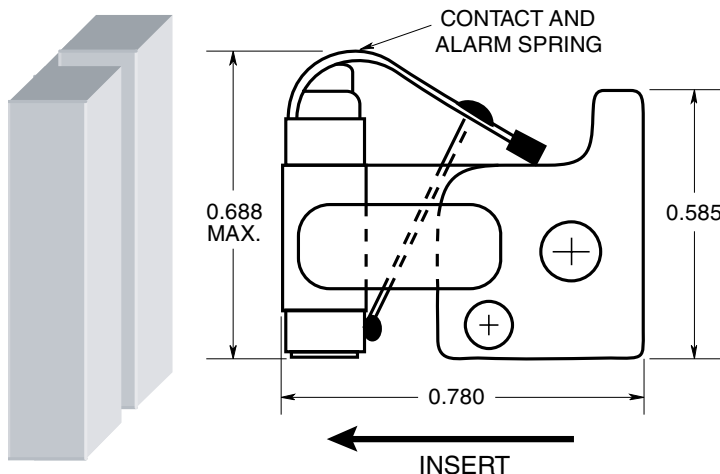

DPOEPWRCU
Fuse Holder

Figure 2

For Technical Support: www.panduit.com/resources/install_maintain.asp

INSTALLATION INSTRUCTIONS PN385B

DPOE DEVICES DEPLOYED		INSTALLED RECTIFIER CAPACITY for DPOE DEVICES DEPLOYED		NOMINAL FUSE SIZE PER DPOE DEVICE
QUANTITY	DEVICE	QUANTITY	DEVICE	FUSE
1	DPOE8S2XG (8 Port PoE+)	1	DPOEPWRR500 (500 W)	5.0 A
1	DPOE24U1XG (24 Port)	1	DPOEPWRR500 (500 W)	5.0 A
1	DPOE24U1XG (24 Port)	1	DPOEPWRR1250 (1250W)	7.5 A
2 or more DPoE Devices Deployed		1 or more	DPOEPWRR1250 (1250W)	7.5 A

NOTE: Maximum fuse for DPOEPWRR500 500W recifier is 5.0A

PANDUIT Part #	FUSE SIZE	CATALOG SYMBOL	COLOR CODE
DPOEPWRF5	5.0A	GMT-5A	Green
DPOEPWRF7.5	7.5A	GMT-7.5A	Black/White

For Instructions in Local Languages
and Technical Support:

www.panduit.com/resources/install_maintain.asp



www.panduit.com

E-mail:
cs@panduit.com

Fax:
(708) 444-6993