

AMP-TWIST^(*) 6AS SL Jack

Dust cover replacement

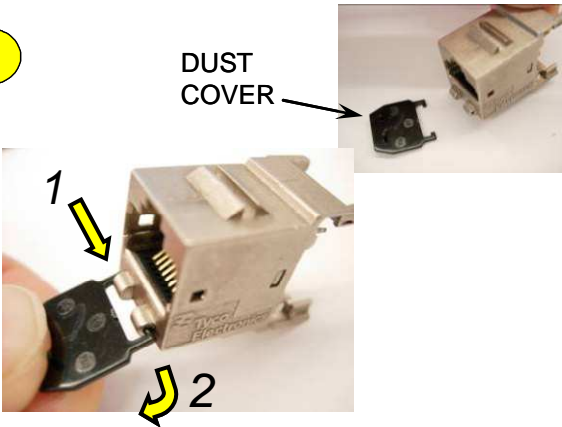
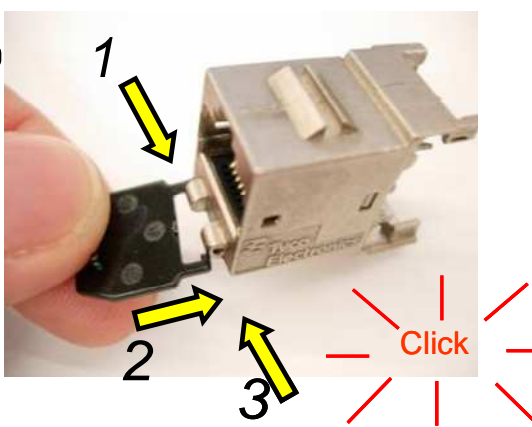
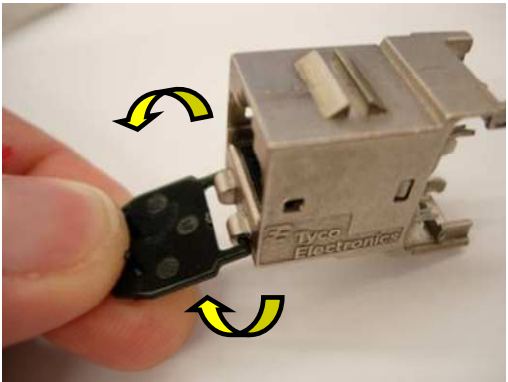

1. INTRODUCTION.

This document describes dust cover replacement procedure for AMP-TWIST* 6AS SL Jack. Dust cover related: 1711691-X (depending of colour).

2. REFERENCE DOCUMENTS.

Tyco Electronics AMP NETCONNECT* customer drawing (C-1711592) is available from service network. The information contained in customer drawings takes priority if there is any conflict with this specification or with any other technical documentation supplied by AMP NETCONNECT.

3. DUST COVER REPLACEMENT PROCESS.

<p>1</p>  <p>DUST COVER</p> <p>For <u>disassembling</u> the existing dust cover, press one side against the hinge and pivot the other side while turning it toward the front.</p>	<p>2</p>  <p>Take the new dust cover. For <u>assembling</u> the new one, place one side into the hinge and pivot the other side while pushing in.</p>
<p>3</p>  <p>Check both sides are fully inserted and the dust cover is functional and rotates.</p>	<p>4</p>  <p>It's already finished.</p>

4. REVISION SUMARY.

Rev. A: Initial release.