


The EXB models
EX EXB 1000/1500 and
EX EXB RT2U 1000/1500 must
be used together with
UPS Pulsar series models
EX 1000,
EX 1000 RT2U,
EX 1500 and
EX 1500 RT2U.


EX EXB

Installation manual


1 x EXB RT

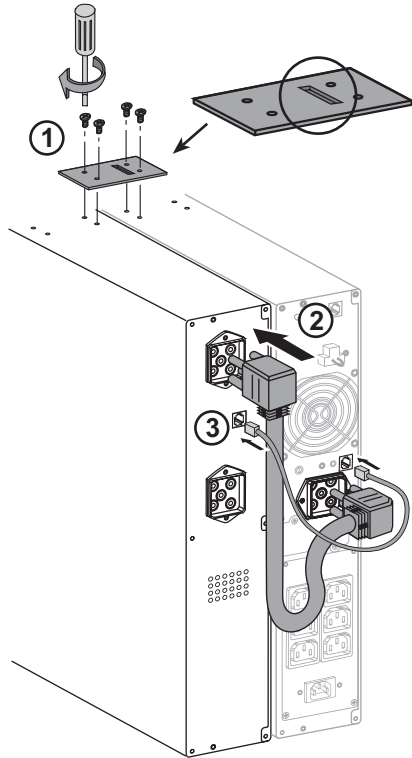

4 x EXB RT

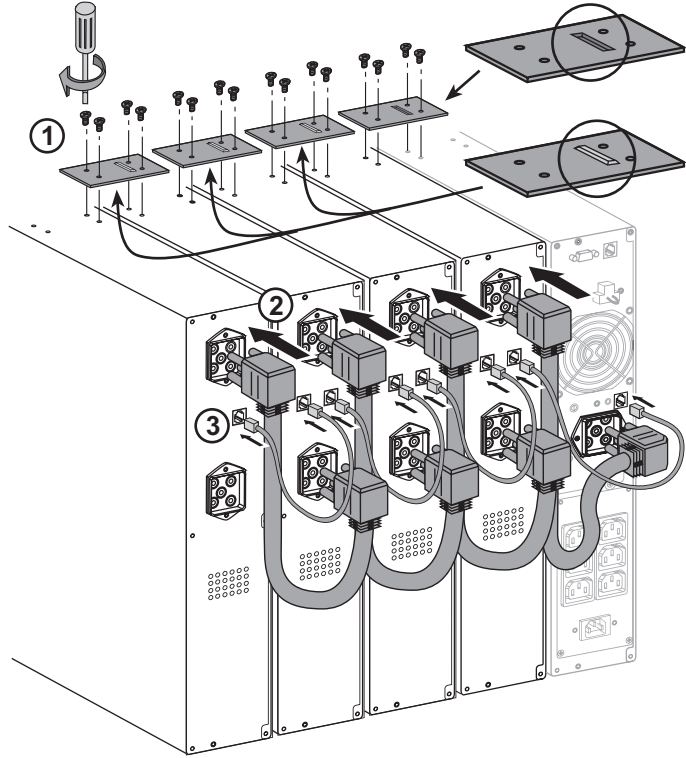


3400817200/AF

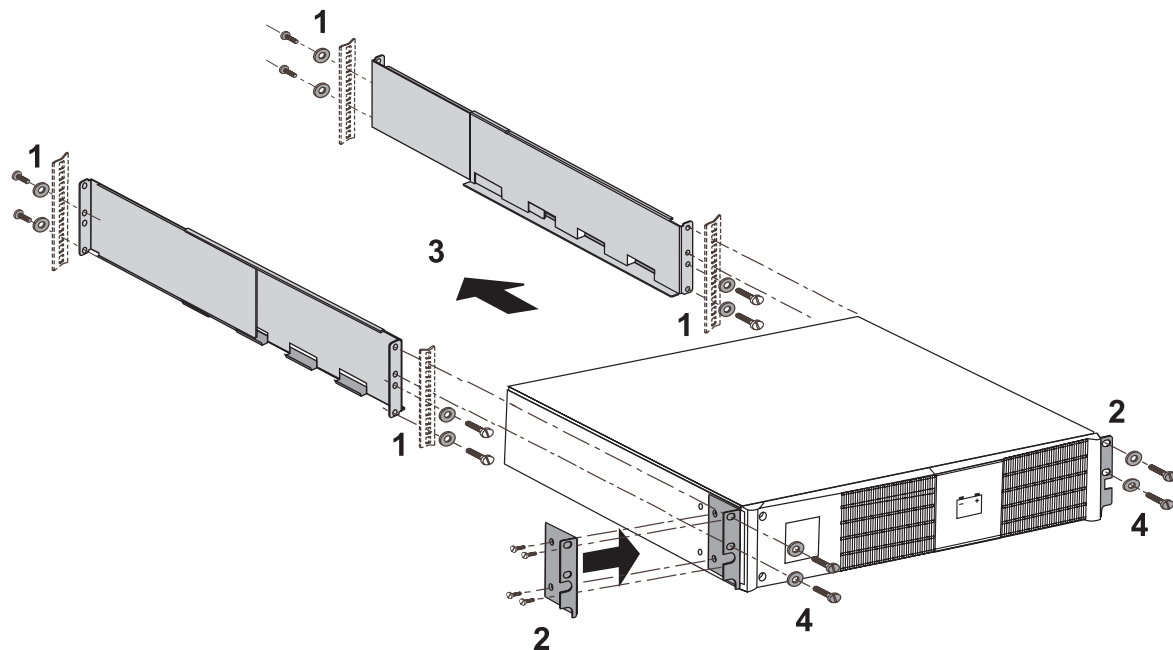


The EXB models EX EXB 1000/1500 and EX EXB RT2U 1000/1500 must be used together with UPS Pulsar series models EX 1000, EX 1000 RT2U, EX 1500 and EX 1500 RT2U.


1 x EXB

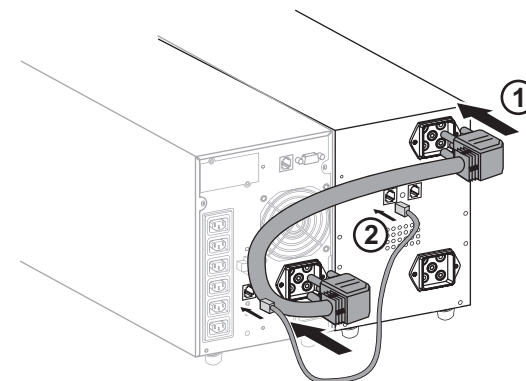

1 x EXB RT

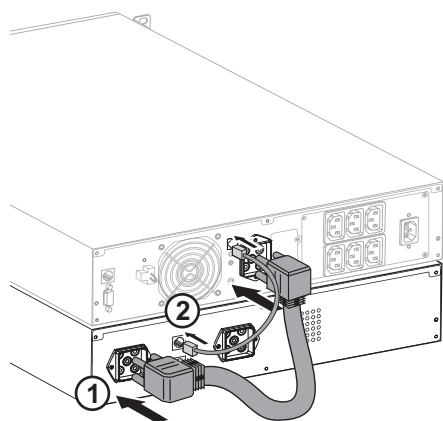

4 x EXB RT

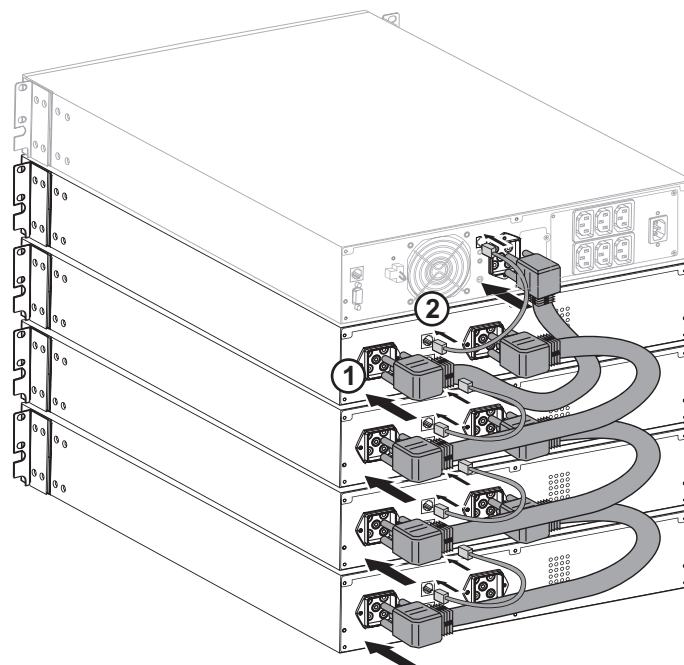

4 x EXB

