



## Floor Stand Kit

**Hoffman Enclosures Inc.**  
2100 Hoffman Way  
Anoka, MN 55303-1745  
(763) 422-2211  
[www.hoffmanonline.com](http://www.hoffmanonline.com)

**Pentair Electronic Packaging**  
170 Commerce Drive  
Warwick, RI 02886  
(401) 732-3770  
[www.pentair-ep.com](http://www.pentair-ep.com)

**Mexico**  
Hoffman Enclosures Mexico  
Federico T. de la Chica No. 8 Piso 4 A  
Circuito Comercial Plaza Satélite  
Ciudad Satélite,  
Naucalpan, México C.P. 53100  
011-52-55-5393-8263

**Canada**  
Hoffman-Schroff  
111 Grangeway Avenue, Suite 504  
Scarborough, Ontario M1H 3E9  
(416) 289-2770  
1-800-668-2500 (Canada only)

**Germany**  
Schroff GmbH  
Langenalber Str. 96-100  
75334 Straubenhardt  
49 (07082) 794-0 [www.schroff.de](http://www.schroff.de)

**Great Britain**  
Schroff UK Ltd.  
Maylands Avenue  
Hemel Hempstead, Herts HP2 7DE  
44 (01442) 240471 [www.schroff.co.uk](http://www.schroff.co.uk)

**Sweden**  
Schroff Scandinavia AB  
Box 2003  
12821 Skärnäck  
46 08683 61 00 [www.schroff.se](http://www.schroff.se)

**France**  
Schroff Sas  
Z.I., 4 rue du Marais  
67660 Betschdorf  
33 03 88 90 64 90 [www.schroff.fr](http://www.schroff.fr)

**Italy**  
Schroff srl  
Viale Milano, 119  
21013 Gallarate (Varese)  
39 0331 79 40 03

**Singapore**  
Hoffman-Schroff Pte. Ltd.  
#01-68/71 German Centre  
25 International Business Park  
Singapore 609916  
65 5 62-78 90

**Japan**  
Schroff K.K.  
Nisso No. 13 Bldg. 4F  
2-5-1 Shinyokohama  
Kohoku-Ku, Yokohama shi  
Kanagawa 222-0033  
81 (045) 476-02 81

**Finland**  
Schroff Scandinavia AB  
Peraisementie 8  
03100 Nummela  
358 09 222 68 00

**Norway**  
Schroff Scandinavia AB  
Bjørnerudveien 24  
1266 Oslo  
47 022 76 33 60

### WARNING

To avoid electric shock, do not energize any circuits before all internal and external electrical and mechanical clearances are checked to assure that all assembled equipment functions safely and properly.

### INSTALLATION INSTRUCTION:

1. Check the depth of the floor stand ("C" dimension) to verify it matches the enclosure depth dimension.
2. Anchor six 3/8 inch diameter studs (not provided with kit) securely in the floor as shown in figure 1.
3. Drill the appropriate hole pattern in the bottom of the enclosure as shown in figure 2.
4. Bolt the floor stand to the enclosure as shown in figure 3 using the 3/8-16x.75 hex head screws, washers, and nuts provided. Firmly tighten all fasteners.
5. Position the enclosure and attached floor stands over the anchored floor studs, extending the studs through the base holes in the floor stands.
6. Secure the floor stands to the anchored floor studs with 3/8 inch nuts and lockwashers or with 3/8 inch locknuts and washers (not provided with kit). Firmly tighten all fasteners.

This accessory maintains UL/CSA Type 12,4,4X when installed per these instructions.  
This accessory is covered by UL file E61997 and CSA file LR42186.

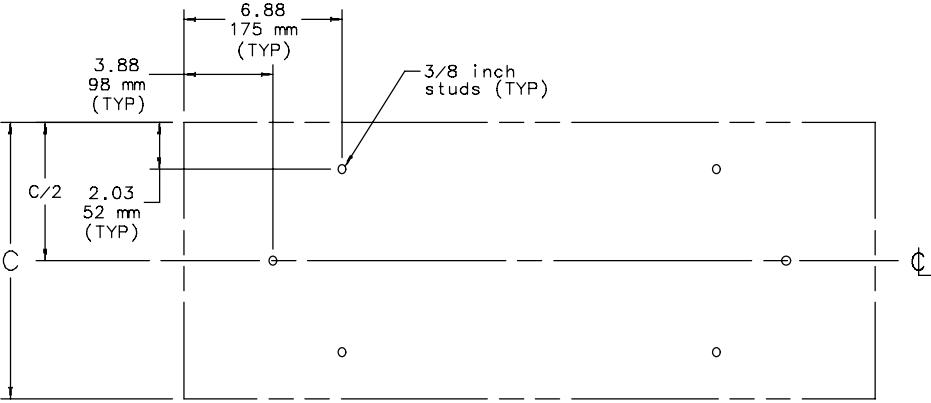


Figure 1 – Floor Stud Hole Pattern

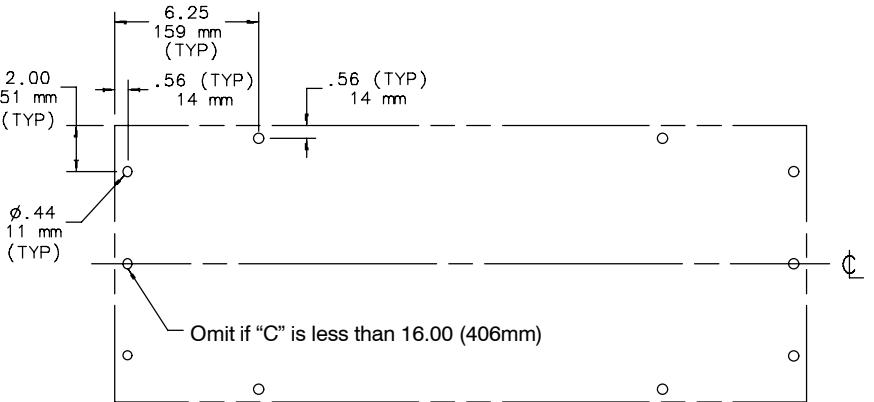


Figure 2 – Enclosure Bottom Hole Pattern

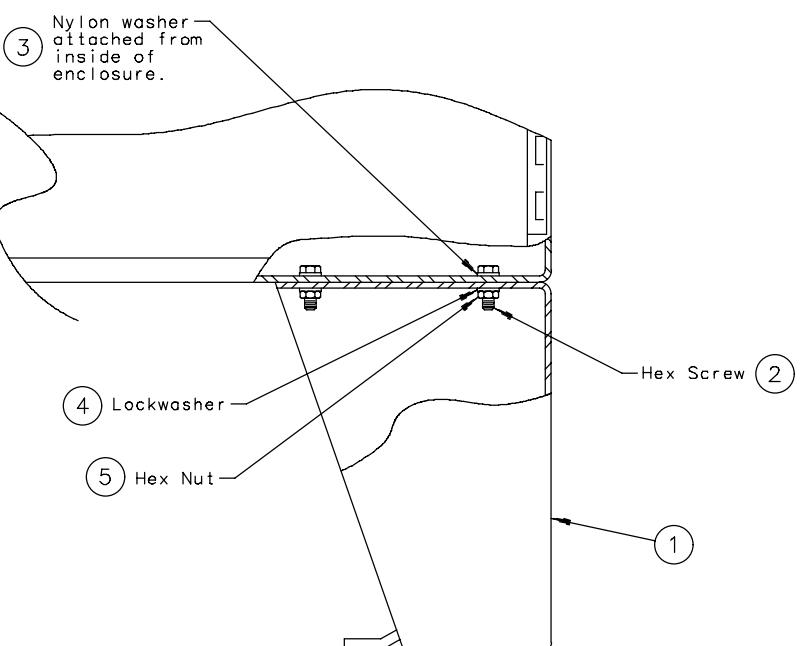


Figure 3

|   |             |            |
|---|-------------|------------|
| 1 | .3/8-16x.75 | (8x) (10x) |
| 2 |             |            |
| 3 | 3/8         | (8x) (10x) |
| 4 | 3/8         | (8x) (10x) |
| 5 | 3/8         | (8x) (10x) |

| Catalog Number | "C"   |
|----------------|-------|
| AFK0608        | 8.06  |
| AFK1208        |       |
| AFK1208SS      |       |
| AFK1808        |       |
| AFK2408        |       |
| AFK0610        | 10.06 |
| AFK1210        |       |
| AFK1210SS      |       |
| AFK1810        |       |
| AFK2410        |       |
| AFK2410SS      |       |
| AFK0612        | 12.06 |
| AFK1212        |       |
| AFK1212SS      |       |
| AFK1812        |       |
| AFK2412        |       |
| AFK2412SS      |       |
| AFK1224SS      |       |
| AFK1216        | 16.06 |
| AFK1216SS      |       |
| AFK1816        |       |
| AFK2416        |       |
| AFK1220        | 20.06 |
| AFK0618        | 18.06 |
| AFK1218        |       |
| AFK1218SS      |       |