

# Acoustic Glassbreak Detector

## 5812-RND



### Installation Instructions

#### Description

The 5812-RND is an acoustic glassbreak detector designed to detect breaking glass from framed windows in the perimeter of a building. The detector is mounted in the building interior and uses a power supply from a 12VDC control panel. The detector is available in a low-profile round housing.

#### Features

The detector provides the following features:

- **Range** - 5 to 25 feet (1.5 to 7.6 m)
- **Alarm memory** - After an alarm and until power is cycled, the alarm memory can be checked with the hand-clap test.
- **LED indicator** - Red LED provides detector test and status indication.
- **Tamper resistant** - Provides a screw that secures the cover to the base to prevent tampering.
- **Hand-clap test** - In addition to a test mode, you can confirm the operation of the microphone by clapping your hands.

#### What You Will Need

You need the following tools and parts to install the detector:

- 5812-RND detector including screw to secure the cover to the base
- Screws and wall anchors
- Flat-blade screwdriver
- Phillips screwdriver
- Sentrol 5709C hand-held tester

#### Selecting a Location for the Detector

The detector can be mounted on ceilings or on walls opposite or adjacent to the window to be protected. See Figure 2.

Use the following guidelines to determine the best location to install the detector.

- Mount at least 5 feet (1.5 m) from glass windows being protected.
- Windows must be at least 12 x 24 inches (30.5 x 61 cm) square.

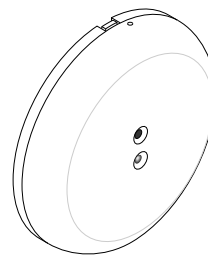


Figure 1. 5812-RND

- Avoid locations where lined, insulating, or sound deadening drapes are used.
- Mount 12 inches (30.5 cm) away from wall corners.
- Avoid locations where interior closed wooden shutters are used.
- Locate in a suitable environment as follows:
  - Temperature between 32° and 122°F (0° and 50°C)
  - Humidity between 10 and 90% non-condensing
- Mount the detector on a stable surface up to 25 feet (7.6 m) from the farthest point on the glass surface. See Figure 2.
- Avoid locations that expose the detector to possible false alarm sources such as:
  - Glass airlocks and vestibule areas
  - Kitchens
  - Residential car garages
  - Small utility rooms
  - Stairwells
  - Bathrooms
  - Small acoustically live rooms
  - Air vents

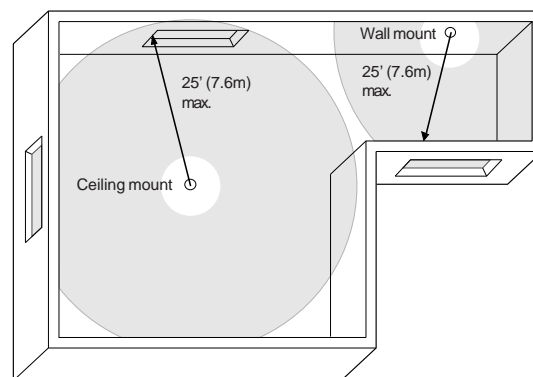


Figure 2. Mounting Locations

## Selecting the Best Location for Multiple Window Coverage

The detector has a 360degree coverage pattern that can be used to cover several windows in a single room as follows:

- Draw an imaginary line from the center of each window to be covered in towards the center of the room.
- Mount the detector as close to where the lines intersect as possible. See Figure 3.
- Do not mount the detector at more than a 60 degree angle from the center of any window to be protected. See Figure 3.

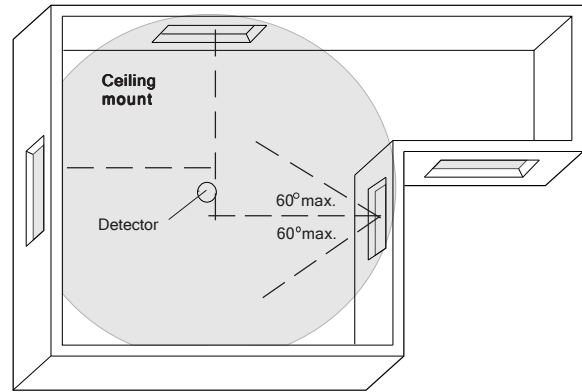


Figure 3. Multiple Window Coverage

## Installing the Detector

All wiring must conform to the National Electric Code (NEC) and/or local codes having jurisdiction.

### Important !

**If you are unsure about a location, connect a 9V battery to the detector and test it before permanently mounting. See *Testing the Detector*.**

Use the following steps to install the detector:

1. Run the security system wiring to the detector location.
2. To remove the front cover, press the release tab on the lip of the base, twist the cover counter clockwise, and lift off. See Figure 4.
3. Remove the appropriate wiring and mounting knockout holes from the base. See Figure 6.
4. Pull the wires through the knockout holes and use two screws to attach the base to the surface. Use wall anchors if necessary.
5. Strip 1/4 inch of insulation from each wire.
6. Connect the system wires to the appropriate screw terminals on the base and tighten the screws. See Figure 7.
7. To replace the cover, line up the tabs on the base with the corresponding tabs on the cover, press together and turn clockwise until the cover snaps firmly into place. See Figure 5.
8. Apply power. The red LED should flash once.
9. Test the detector. See *Testing the Detector*.

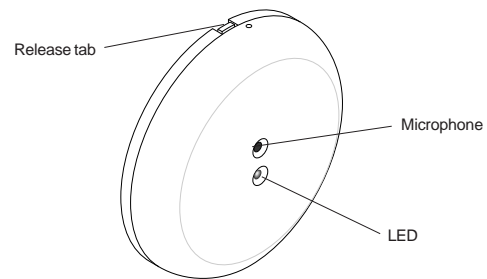


Figure 4. Housing Parts

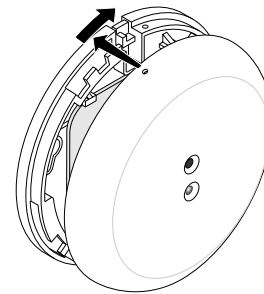


Figure 5. Attaching the Cover

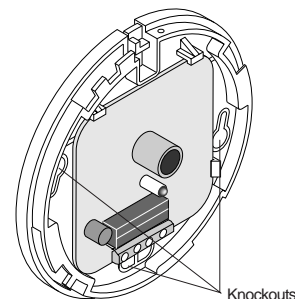


Figure 6. Detector Knockout Locations


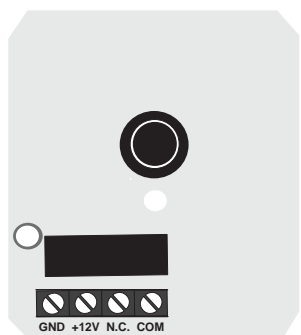


Figure 7. Wiring Terminals

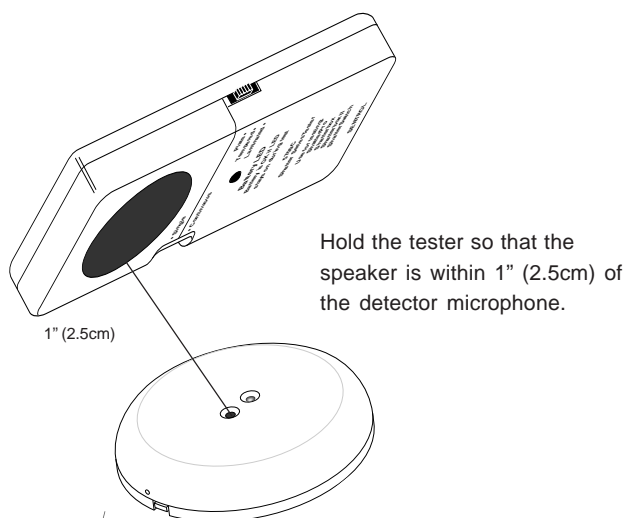

When the detector is in test mode, the LED lights steady for 4 seconds, then flashes for 60 seconds. Time resets after each valid test.

Figure 8. Using the Tester

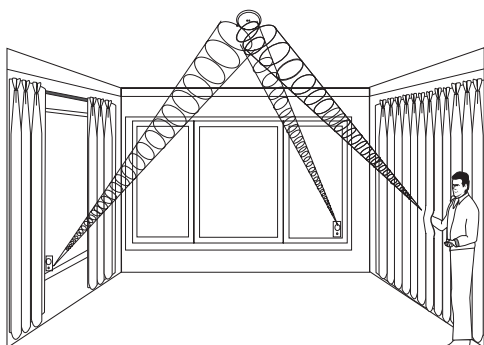


Figure 9. Testing the Range

## Testing the Detector

To verify detector range and operation, you need the Sentrol 5709C hand-held tester.

Use the following steps to test the detector:

1. Set the tester to the appropriate glass-type setting. Use the **tempered** setting if you are unsure about the glass type.
2. Put the detector in test mode as follows:
  - Hold the tester 1" from the detector. See Figure 8.
  - Activate the tester.

The LED on the detector lights for 4 seconds and then starts flashing to indicate the detector is in test mode. The relay opens for 4 seconds, then returns to standby.

3. Hold the tester near the surface of the glass to be protected and aim the speaker at the detector. Be sure the tester is at the point on the glass farthest from the detector. If closed drapes or curtains are present, hold the tester behind them. See Figure 9.
4. Press the test button on the tester. The LED on the detector should stay on for 4 seconds to indicate the glass is within detection range of the detector. **If the LED does not stay on for 4 seconds**, move the detector and retest.

## Understanding the LED

The red LED located on the front of the detector indicates the status of the unit as follows:

Status	LED Indication
Power on	Flashes once when power is applied.
Clap test/Alarm memory	In response to the clap test: Flashes twice to indicate the detector has power and is functioning properly.  <b>or</b> On for 4 seconds to indicate the detector has alarmed.
Alarm	On for 4 seconds with relay when breaking glass is detected.
Test mode	On for 4 seconds with relay, then flashes for 60 seconds. Each test trigger resets the test mode clock and the LED starts over flashing for 60 seconds.

## Using the Hand-Clap Test and Alarm Memory

The alarm memory and microphone operation can be checked with the hand-clap test as follows:

1. Standing under the detector, clap your hands together.
2. Observe the LED on the detector.

**If the detector has power and is functioning properly**, the LED quickly flashes twice.

**If the detector has alarmed**, the LED will light for 4 seconds. Cycle the power to clear the alarm memory.

The hand-clap test is intended as a functional test, does not open the relay, and is not an accurate indication of detector range.

## Maintaining the Detector

When installed and used properly, the detector provides years of service with minimal maintenance. You should test the detector annually to ensure proper operation.

Clean the cover with a damp (water) cloth as needed to keep it free of dust and dirt. Always test the detector after cleaning.

## FCC Compliance

This device complies with Part 15 of the FCC rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

## Specifications

Input voltage .....	12 VDC Nominal
Current	
Typical .....	15mA
Maximum .....	25mA
Electrical configuration .....	Form A
Relay rating .....	16V, 50mA max.
Detection range .....	5' - 25' (1.5m - 7.6 m) x 360° (use for rooms 100 sq. ft. and larger)
Alarm response .....	4 sec.
Minimum glass size .....	12" x 24" (30.5 cm x 61 cm)
Recommended glass thickness:	
Plate .....	3/32" - 1/4" (2.4 mm - 6.4 mm)
Tempered .....	1/8" - 1/4" (3.2 mm - 6.4 mm)
Wired .....	1/4" (6.4 mm)
Laminated .....	1/4" (6.4 mm)
Operating temperature .....	32° - 122° F (0° - 50°C)
Relative humidity .....	10 - 90% non-condensing
Dimensions:	
Depth .....	0.81" (2.1 cm)
Diameter .....	4.0" (10.2 cm)
Color .....	White
Field wiring size .....	18-24 AWG
Listing .....	C-UL US

## Product Ordering

Model Number	Description
5812-RND	Acoustic glassbreak sensor, round housing, Form A
Accessories	
5709C	Glassbreak hand-held tester



**GE Interlogix**

12345 SW Leveton Drive  
Tualatin, OR 97062  
www.interlogixsecurity.com  
www.sentrol.com

Phone: 503-692-4052  
USA & Canada: 800-547-2556  
Technical Service: 800-648-7424  
FaxBack: 800-483-2495

© 2002 GE Interlogix, Inc.

1038240 Rev A 06/02