



Observe the following before installing and using this product:

- A readily accessible disconnect device shall be incorporated in the building installation wiring.
- Installation and servicing should be done only by qualified service personnel and should conform to all local codes.
- Use stainless steel hardware to fasten the unit to outdoor surfaces.
- · Connect conduit hubs to the conduit before connecting them to the enclosure.
- Use only UL Listed conduit hubs rated 4X and UL Listed strain-relief bushings rated 4X.
- Protect against risk of unintentional operation or damage.

Table 1. Power and fuse specifications			
Power Supply	Power Source	Fuse F1	Fuse F2
KTP-24C	115 VAC	1.5 ASB 3 AG	2.5 ASB 3 AG
KTP-24CE4	230 VAC	0.63 ASB 5 x 20 mm	2.5 ASB 5 x 20 mm



CAUTION:

Complete all instruction steps before supplying power to the unit.


INSTALLING ON A FLAT VERTICAL SURFACE

- 1) Loosen the four cover screws and remove the cover with the screws attached.
- 2) Mark the location of the four mounting holes using the included mounting template.
- **3)** Prepare the four mounting holes in accordance with the type of mounting surface (concrete, wood, etc.) and fasteners (not provided).
- 4) Secure the unit to the wall with the appropriate fasteners.

ATTACHING TO A CORNER- OR POLE-MOUNT ADAPTER

See Figure 1 and perform the following.

- 1) Loosen the four cover screws and remove the cover with the screws attached.
- **2)** Secure the power supply to the adapter with the supplied fasteners.

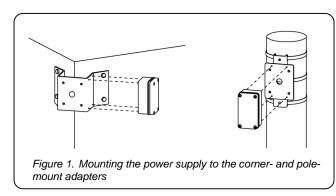


This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

You are cautioned that any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment..

COMPLETING THE INSTALLATION

See Figure 2 and Figure 3 and perform the following.

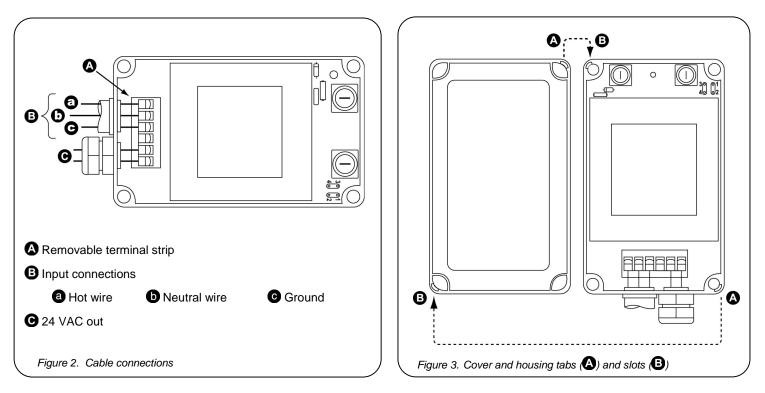

1) Make cable connections to the removable terminal strip.



CAUTION:

When you replace the cover, properly align the keyed tabs and slots on the cover and housing to prevent the cover from leaking. See Figure 3.

- 2) Replace the cover by aligning the keyed tabs and slots.
- 3) Tighten the screws securely to ensure a watertight seal.

MOUNTING TEMPLATE

