SONY

OUTDOOR DOME HOUSING

Installation and Operation Instructions for the following models:

UNI-WMB1, SNCWM20G

- (1) Bracket
- (1) Operation Instruction Manual

INSTALLING THE PRODUCT

1 Choose an appropriate location on an outside wall to mount the SNCWM20G or UNI-WMB1.

> **NOTE:** Be sure that the wall is sturdy enough to support the combined weight of the bracket and housing.

2 Place the base against the wall, mark the location of the four mounting holes, remove the bracket and drill the mounting holes. Pull all wiring through the wall at this time (Figure 1).


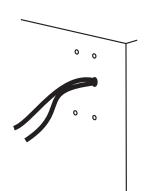


Figure 1

3 Run wiring into and through the WM20G bracket. Make sure you also have enough to run into the housing for connections.

> **NOTE:** For applications where the wiring cannot be pulled through the wall, a starter hole is provided on the side of the bracket near the base. Use this to drill a larger hole to pass conduit into and through the bracket (Figure 2).



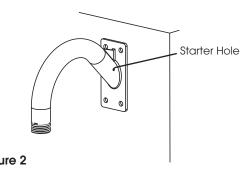

4 Mount the bracket to the wall (hardware not included) (Figure 3).


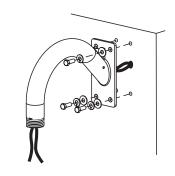



Figure 3

5 Make all wiring connections to the housing, following instructions provided with the housing (Figure 4).



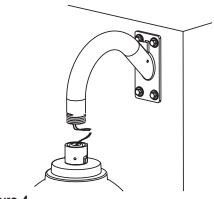

Screw the housing coupling onto the wall mount's 6 1 ¹/₂" pipe thread (Figure 5). Make sure all attachments are secure.

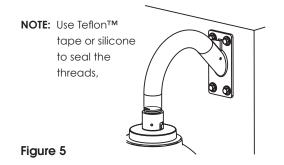

IMPORTANT SAFEGUARDS

- Read Instructions All the safety and operating instructions should be read before the unit is operated.
- 2 Retain Instructions The safety and operating instructions should be retained for future reference.
- 3 Heed Warnings All warnings on the unit and in the operating instructions should be adhered to.
- 4 Follow Instructions All operating and user instructions should be followed.
- 5 Electrical Connections Only a qualified electrician should make electrical connections...
- 6 Attachments Do not use attachments not recommended by the product manufacturer as they may cause hazards.
- 7 Cable Runs All cable runs must be within permissible distance
- 8 Mounting This unit must be properly and securely mounted to a supporting structure capable of sustaining the weight of the unit.

Accordingly:

- **a.** The installation should be made by a qualified installer.
- **b.** The installation should be in compliance with local codes.
- c. Care should be exercised to select suitable hardware to install the unit, taking into account both the composition of the mounting surface and the weight of the unit.

Be sure to periodically examine the unit and the supporting structure to make sure that the integrity of the installation is intact. Failure to comply with the foregoing could result in the unit separating from the support structure and falling, with resultant damages or injury to anyone or anything struck by the falling unit.

SAFETY PRECAUTIONS





The lightning flash with an arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

UNPACKING

Unpack carefully. Electronic components can be damaged if improperly handled or dropped. If an item appears to have been damaged in shipment, replace it properly in its carton and notify the shipper.

Be sure to save:

- 1 The shipping carton and packaging material. They are the safest material in which to make future shipments of the equipment.
- 2 These Installation and Operating Instructions.

SERVICE

If technical support or service is needed, contact Sony at the following number:

TECHNICAL SUPPORT 8:15AM to 7:30PM (Eastern Time) 1-800-883-6817