

**SAMSUNG TECHWIN**

# **HD-SDI CAMERA**

User Manual

SCB-6001



# HD-SDI Camera

## User Manual

---

### Copyright

©2013 Samsung Techwin Co., Ltd. All rights reserved.

### Trademark

 **SAMSUNG TECHWIN** is the registered logo of Samsung Techwin Co., Ltd.

The name of this product is the registered trademark of Samsung Techwin Co., Ltd.

Other trademarks mentioned in this manual are the registered trademark of their respective company.

### Restriction

Samsung Techwin Co., Ltd shall reserve the copyright of this document. Under no circumstances, this document shall be reproduced, distributed or changed, partially or wholly, without formal authorization of Samsung Techwin.

### Disclaimer

Samsung Techwin makes the best to verify the integrity and correctness of the contents in this document, but no formal guarantee shall be provided. Use of this document and the subsequent results shall be entirely on the user's own responsibility. Samsung Techwin reserves the right to change the contents of this document without prior notice.

### Warranty

If the product does not operate properly in normal conditions, please let us know. Samsung Techwin will resolve the problem for free of charge. The warranty period is 3 years. However, the followings are excluded:

- If the system behaves abnormally because you run a program irrelevant to the system operation.
- Deteriorated performance or natural worn-out in process of time

❖ **Design and specifications are subject to change without prior notice.**

## IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/ accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lighting storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.




## WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE. DO NOT INSERT ANY METALLIC OBJECT THROUGH THE VENTILATION GRILLS OR OTHER OPENINGS ON THE EQUIPMENT.

Apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

## CAUTION

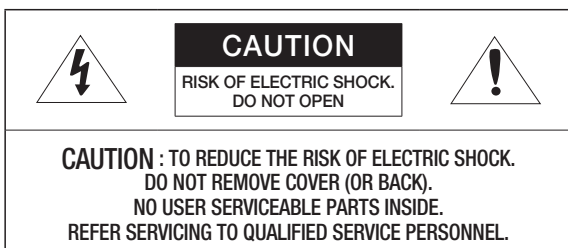

## EXPLANATION OF GRAPHICAL SYMBOLS



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

## Class I construction

An apparatus with CLASS I construction shall be connected to a MAINS socket outlet with a protective earthing connection.

## Battery

Batteries(battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

## Disconnection Device

Disconnect the main plug from the apparatus, if it's defected. And please call a repair man in your location.

**When used outside of the U.S., it may be used HAR code with fittings of an approved agency is employed.**

## CAUTION

These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

Please use the input power with just one camera and other devices must not be connected.

The BNC Out terminal of the product is provided for easier installation, and is not recommended for monitoring purposes.

If you keep the BNC cable connected, a risk of lightening may cause damage or malfunction to the product.

# overview

---

Please read the following recommend safety precautions carefully.

- Do not place this apparatus on an uneven surface.
- Do not install on a surface where it is exposed to direct sunlight, near heating equipment or heavy cold area.
- Do not place this apparatus near conductive material.
- Do not attempt to service this apparatus yourself.
- Do not place a glass of water on the product.
- Do not install near any magnetic sources.
- Do not block any ventilation openings.
- Do not place heavy items on the product.
- Do not expose the camera to radioactivity.

User's Manual is a guidance book for how to use the products.

The meaning of the symbols are shown below.

- Reference : In case of providing information for helping of product's usages
- Notice : If there's any possibility to occur any damages for the goods and human caused by not following the instruction
- ※ Please read this manual for the safety before using of goods and keep it in the safe place.

# CONTENTS

---

## OVERVIEW

3

- 3 Important Safety Instructions
- 8 Product Features
- 9 What's Included
- 10 At a Glance

## INSTALLATION & CONNECTION

13

- 13 Mounting the Lens
- 15 Connecting with other Device

## OPERATING YOUR CAMERA

18

- 18 Menu Configuration
- 19 Menu Setup

## APPENDIX

35

- 35 Troubleshooting
- 36 Specification
- 38 Product Overview

## PRODUCT FEATURES

---

- **Supports Full HD-SDI Video**

By adopting a diagonal 6mm (1/3") 2M pixel CMOS, the camera produces clear picture quality.

- **Excellent low-illumination image quality**

By adopting high-sensitive colour CMOS, the camera provides clear image quality under a severe low illumination condition of 0.017 Lux (with SENS-UP, 60x).

- **SSNR3 (Samsung Super Noise Reduction) Function**

The high-performance WN2 DSP chip effectively removes low-light gain noise and afterimage to provide clear images even in dark environments.

- **Day&Night (ICR)**

This camera has a function that automatically selects the mode that is appropriate for daytime or night-time conditions. The COLOR mode operates in daytime conditions to provide optimum colors, and B/W mode operates in night-time conditions to enhance the definition of the image.

- **INTELLIGENCE**

Once motion is detected, the camera sends an alert signal to the processing unit, which, if used in conjunction with an optional alarm, can provide effective surveillance of your property.

- **SSDR (Samsung Super Dynamic Range)**

For images with high contrast between bright and dark areas from difficult lighting conditions such as backlighting, this camera selectively illuminates darker areas while retaining the same light level for brighter areas to even out the overall brightness.

- **Miscellaneous Functions**

 

 

HLC(High Light Compensation), SENS-UP, FLIP (H/V-REV), D-ZOOM and PRIVACY functions are provided.

- **OSD**

By providing multi-lingual user-friendly OSD (On-screen Display) menu, the camera provides easy handling of the camera.


## WHAT'S INCLUDED


Check if the main unit and all the following accessories are included in the product package.

Appearance	Item Name	Quantity	Description
	Camera	1	
	Quick Manual	1	
	C Mount Adapter Auto Iris Lens Connector	1	Used to install the camera lens
	Cable for the testing monitor	1	Used to test the camera connection to a portable display device

## AT A GLANCE

### Front Side

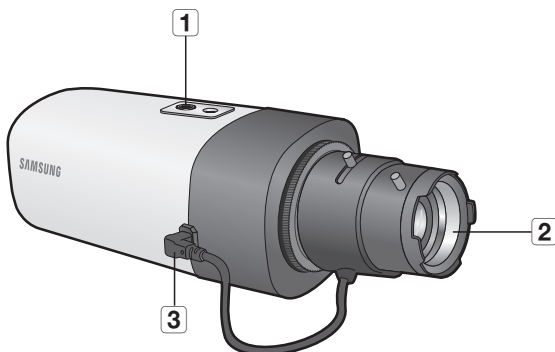





Item	Description
<b>1</b> Mounting Bracket Screw Hole	<p>Used to fix the camera on a bracket or mounting bracket.</p> <ul style="list-style-type: none"> <li>The screw size : use this screw to fix the mounting bracket . 1/4" -20UNC(20THREAD) L : 4.5mm±0.2mm (ISO Standard), or 0.197" (ASA Standard)</li> </ul> 
<b>2</b> Auto Iris Lens (Optional)	Installed on the lens adaptor.
<b>3</b> Auto Iris Lens Connector	Used to supply power and output signal to control the iris of the lens.



- Mounting Bracket is not included.  
For more information to use mounting bracket, refer to the product's documentation.
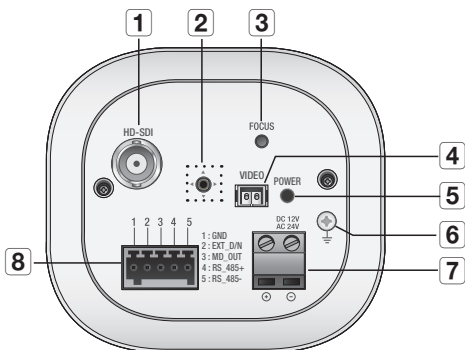
## Rear Side



Item	Description	
<b>1</b> HD-SDI Video Out terminal	BNC terminal for HD-SDI video signal output.	
<b>2</b> SETUP Switch	The switch is used for setting and adjusting the camera's functions and properties.	
		Move this switch left or right to move the cursor or change the value in the menu. When menu is off, use this switch for adjusting focus.
		Move this switch up or down to move the cursor in the menu.
		Press the switch to set the function in menu. To move to a sub-menu item in the menu, press this switch.
<b>3</b> Focus Adjustment Button	Press and hold this button more than 2 seconds to restores the focus adjustment to the default flange back position. Short to press this button to fit the focus automatically.	
<b>4</b> VIDEO	Analogue video output terminal of Video. Use a monitor cable for testing the camera with a portable display. (for installation)	

# overview

---

Item		Description
<b>5</b>	<b>Power LED</b>	This lamp turns green when the proper power is applied to the camera.
<b>6</b>	<b>GND</b>	Used for earth-grounding.
<b>7</b>	<b>Power Port</b>	Used to plug the power cable.
<b>8</b>	<b>I/O Port</b>	1:GND      Earth-grounding port for external signal.
		2:EXT_D/N      External signal input port for Day/Night mode setup.
		3:MD_OUT      Output port that signals when a motion is detected.
		4:RS-485+      Signal port for RS-485 communication.
		5:RS-485-      Signal port for RS-485 communication.

## MOUNTING THE LENS

Disconnect the power before proceeding.




- The C lens and CS lens are not included in the product package.



- If using a normal commercial lens, you may encounter out of focus when switching to BW mode . To prevent this, it is recommended to use the IR mega lens.


### Mounting the CS lens

Turn the optional CS lens clockwise to insert it.

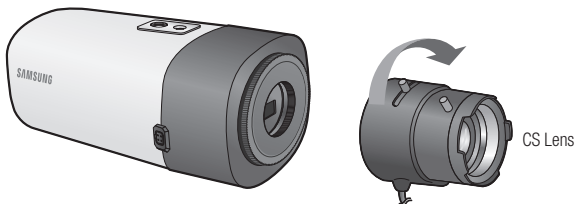

### Mounting the C lens

Turn the C mount adaptor clockwise to insert it and do the same with the C lens.

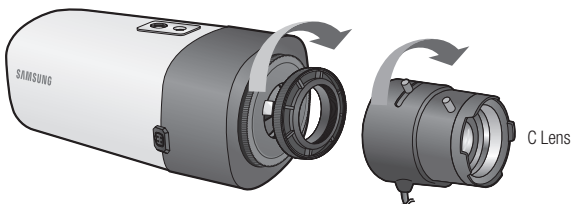


# installation & connection

---


## Connecting the Auto Iris Lens connector

Insert the lens connector into the corresponding hole of the camera.

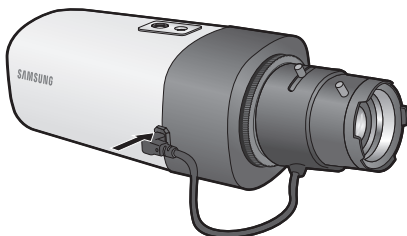


## Focusing

Turn the lens left or right to control the zoom and focus the lens so that you can view a clear, sharp object.

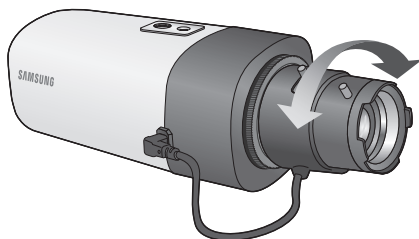

- Wipe out a dirty surface of the lens softly with a lens tissue or cloth to which you have applied ethanol.
- Set up the focus, the first is restores the focus adjustment to the default flange back position, then focusing with the zoom lever of the lens, press the **[FOCUS]** button on the rear of the camera to adjust the lens even more clearly.

## CONNECTING WITH OTHER DEVICE

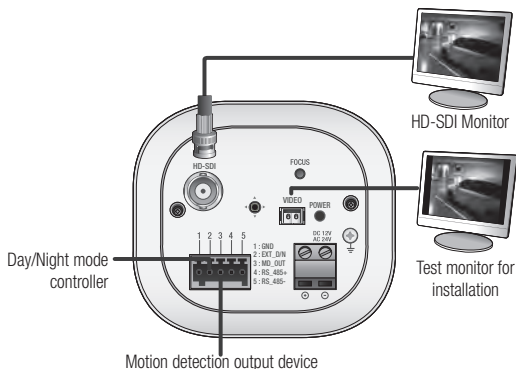

### Connecting to the monitor

 
Connect the video out port of the camera to the video input port of the monitor.

- ❗ To check the display screen after installing the camera for the first time, you can use the Video port to check the video screen.
- You can set the video output type to either NTSC or PAL. (page 29).
- The Video source (4:3) will be displayed with either side truncated in comparison with the HD-SDI video.
- The video source from the HD-SDI port can be displayed on the dedicated monitor. To display the source on a commercial monitor, you need a converter to convert the video signal as appropriate.

### Video Cable

The cable connecting the camera's video output and a monitor is a BNC coaxial cable as shown below.

If the distance between the camera and the monitor exceeds the recommended maximum, please use an auxiliary video amp.



Maximum video transfer distance	Recommended cable specification
100~140m	5C2V(75ohm)
200m	L-6CHD(75ohm) (SDI-specific Cable)

# installation & connection

## External Day/Night Switching Input

Day/Night mode of the camera can be switched by signal from an external device.



- To use this function, <DAY/NIGHT> setting of the camera should be set to the <EXTERN>. (Page 27)

## Motion Detection Signal Out

Upon a motion detection, the port outputs signal for an external device for display or operation. When a motion is detected, the port outputs 3.3V signal.




- To use this function, <ALARM OUT> setting of the camera should be set to <ON>. (Page 31)

## Power Supply

Use the screwdriver to connect each line (+, -) of the power cable to the corresponding power port of the camera.



- Be careful not to reverse the polarity when you connect the power cable.
- Be sure to turn the power off the device to be connected.

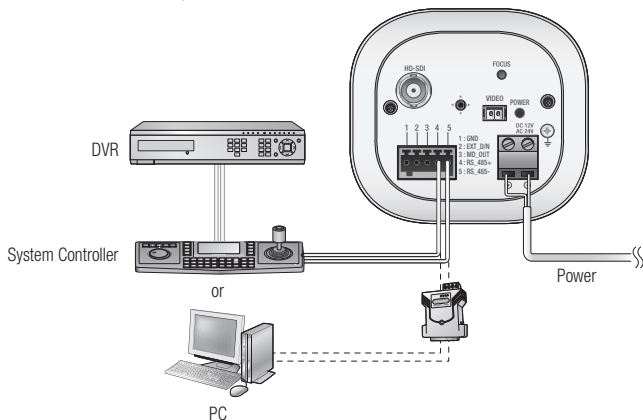

## For AC/DC Power Supply

You can use either one of AC 24V/1A~2A and DC 12V/2A~4A adaptor.

## Resistance of copper wire [at 20°C (68°F)]

Wire specification (AWG)	#24(0.22mm <sup>2</sup> )	#22(0.33mm <sup>2</sup> )	#20(0.52mm <sup>2</sup> )	#18(0.83mm <sup>2</sup> )
Resistance (Ω/m)	0.078	0.050	0.030	0.018
Voltage Drop (V/m)	0.028	0.018	0.011	0.006
Recommended Distance (m)	Less than 20	Less than 30	Less than 30	Less than 30

- As shown in the table above, you may encounter a voltage-sag depending on the wire length. If you use an excessively long wire for camera connection, the camera may not work properly.
  - Voltage for proper camera operation: DC 12V±10%, AC 24V±10%
  - Voltage drop shown in the table above may show difference from the actual depending on the manufacturer and cable type.

## RS-485 Communications

Using RS-485 communication, the camera menu can be accessed using Samsung Techwin's System Controller or the DVR.

### • For accessing the camera from a computer

Use a RS-485 converter to connect the camera's control port with the computer's serial cable.

Ex) Serial port (COM1) of computer → Serial Cable → RS-485 Converter → Camera's RS-485 control port

### • For accessing the camera from a DVR or the System Controller

connect the camera's RS-485+ and RS-485- terminals to the RS-485 control board's terminals of desired device with a RS-485 cable (TRX+ and TRX-).

Control ports of RS-485 Controller	RS-485 ports of the camera
(+) CONNECTION TERMINAL (TRX+)	485+
(-) CONNECTION TERMINAL (TRX-)	485-

## Default RS-485 communication settings

Item	CAM ID	BAUD RATE	UART MODE	RET PKT
Default	1	9600	8-N-1	ENABLE



- When constructing a proprietary controller for direct camera control, apply Pelco-D or Samsung-Techwin protocol.
- Use only a DVR model that supports HD-SDI saving.


# Operating Your Camera

## MENU CONFIGURATION

MAIN SETUP			
LENS	• DC	• MANUAL	• P-IRIS
EXPOSURE	• BRIGHTNESS • SENS-UP • RETURN	• SHUTTER • DEFOG	• AGC • SSDR
WHITE BAL	• ATW • OUTDOOR	• MANUAL • INDOOR	• AWC → SET
SIMPLE FOCUS	• INIT → SET	• FOCUSING → SET	
BACKLIGHT	• OFF • WDR	• BLC	• HLC
SSNR3	• ON	• OFF	
DAY/NIGHT	• AUTO • B/W	• EXTERN	• COLOR
SPECIAL	• CAM TITLE • PRIVACY • LANGUAGE	• IMAGE ADJ • PROFILE • RESET	• INTELLIGENCE • COMM ADJ • RETURN
EXIT			

## MENU SETUP

To configure the camera's function settings, use the button on the rear side of the product.

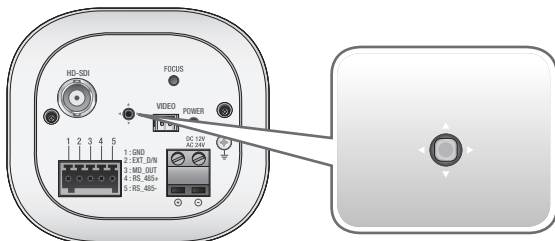

- ▲▼ : Moves up/down in menu.
  - ◀▶ : Moves right/left in menu.
  - ■ : Press the switch to set the function in camera menu.  
To move to a sub-menu item in the menu, press this switch.
1. Press the SET button.
    - Enters the function menu.  
The selected function's menu appears on the monitor.

Use up/down buttons  
to set the desired item.

**MAIN SETUP**

▶ 1. LENS

2. EXPOSURE ↵

3. WHITE BAL

4. SIMPLE FOCUS

5. BACKLIGHT

6. SSNR3

7. DAY/NIGHT

8. SPECIAL ↵

9. EXIT

DC

ATW

INIT→ SET

OFF

ON ↵

AUTO ↵


Use right/left buttons  
to change the  
selection.

2. Use the Up/Down buttons to select a desired function.
  - Move the button up or down to move the arrow up or down.  
Set the arrow to indicate the desired item.

# Operating Your Camera

3. Use the Up/Down buttons to select a desired function.
  - Move the button right or left to display available values or settings.  
Set the desired setting value using the button.
4. To finish, select <EXIT> and press the SET button.





- An item with the  icon also has sub menus. To select a sub menu, select an item with the icon press the Function Setup switch.
- An item with the --- icon is unavailable due to function settings.

## LENS

Using this function, you can choose lens type.

1. When the SETUP menu screen is displayed, select <LENS> by using the Function Setup switch so that the arrow indicates <LENS>.
2. Select the connected lens type by using the Function Setup switch.
  - **DC** : Select Auto Iris Lens.
  - **Manual** : Select Manual Lens
- **P-IRIS** : It is selected to use the iris control lens equipped with a step motor.
  - Auto : The iris is automatically adjusted to the amount of the surrounding light.
  - Manual : Sets the iris manually to the desired position.

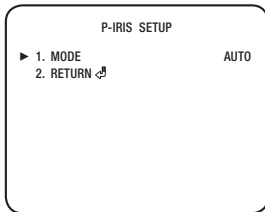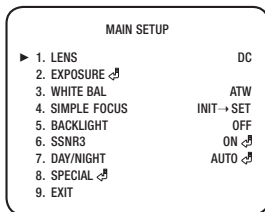


## EXPOSURE

- When the SETUP menu screen is displayed, select <EXPOSURE> by using the Function Setup switch so that the arrow indicates <EXPOSURE> .
  - Select a desired mode using the Function Setup switch.
- BRIGHTNESS** : Adjust the screen brightness.

MAIN SETUP		
1. LENS		DC
▶ 2. EXPOSURE ↺		
3. WHITE BAL		ATW
4. SIMPLE FOCUS	INIT→SET	
5. BACKLIGHT		OFF
6. SSNR3		ON ↺
7. DAY/NIGHT		AUTO ↺
8. SPECIAL ↺		
9. EXIT		

- SHUTTER** : You can select the shutter.
  - --- : 1/30sec
  - A.FLK : Select this when you experience picture flicker, this happen when there is a clash with the installed lighting frequency.
  - ESC : Select this to control the shutter speed automatically. If ESC is selected, the shutter speed is automatically controlled depending on the ambient illumination of the subject.
  - MANUAL : You can control shutter speed manually (1/30sec ~ 1/16,000sec)

EXPOSURE SETUP		
1. BRIGHTNESS	..... * .....	50
▶ 2. SHUTTER		ESC
3. AGC		HIGH
4. SENS-UP		AUTO ↺
5. DEFOG		---
6. SDR		ON ↺
7. RETURN ↺		


-  When you use a DC lens, set the shutter mode to --- if color rolling occurs.
- Carefully position the camera when installing, since produced image quality might be poor if framing a bright light source while the shutter mode of EXPOSURE is set to AUTO.
  - When the SHUTTER is set to MANUAL or A.FLK mode, SENS-UP will be disabled.

- AGC(AUTO GAIN CONTROL)** : The higher the gain level, the brighter the screen - but the greater the noise.
  - OFF : Not being used
  - Low : Allows automatic gain control from 5.3dB to 20dB.
  - Medium : Allows automatic gain control from 5.3dB to 26dB.
  - High : Allows automatic gain control from 5.3dB to 32dB.
- SENS-UP** : When it is night or dark, the camera automatically detects the light level and maintains a clear picture if this mode is activated.
  - OFF : Deactivates the SENS-UP function.
  - AUTO : Activates the SENS-UP function.


# Operating Your Camera

- **DEFOG** : Through the defogging function, camera can automatically recognize fog concentration of the image, defog, self correct in hazy, rainy, flue gas and other inclement weather to get a clear image.


- **AUTO** : The camera will automatically correct image according to the defogging level (low, middle, high) set by the user.
- **MANUAL** : The camera will adjust the definition of the image according to user's preferences through the defogging level (low, middle, high).
- **OFF** : Turn off Defogging function.

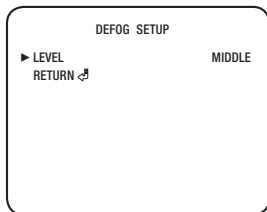

- **SSDR(Samsung Super Dynamic Range)** : SSDR illuminates darker areas of an image while retaining the same light level for brighter areas to even out the overall brightness of images with high contrast between bright and dark areas.
- **ON** : Use the Function Setup switch to change the SSDR level in the sub menu according to the contrast between bright and dark areas.
- **OFF** : Turn off SSDR function.

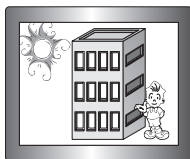

SSDR ON

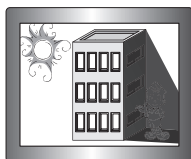

SSDR OFF

- **RETURN** : Select this to save the changes in the EXPOSURE menu and return to the MAIN SETUP menu.



- Press the SET button while in AUTO mode to adjust the automatic scene accumulation multiplier for low-illumination operation. (2x ~ 60x)
- The greater the video accumulation factor is, the brighter the screen is but the afterimage of a moving object grows accordingly.
- Although noise, spots, and whitish symptoms may occur in higher accumulation, this is normal.
- If the gain control (AGC) of EXPOSURE mode is set to OFF, SENS-UP mode is accordingly set to '---'.

## WHITE BAL (WHITE BALANCE)

Use the White Balance function to adjust the screen color.

1. When the SETUP menu screen is displayed, select <**WHITE BAL**>. by using the Function Setup switch so that the arrow indicates <**WHITE BAL**>.
2. Select a desired mode using the Function Setup switch.

Select one of the following 5 modes, as appropriate for your purpose.

- **ATW** : Select this when the color temperature is between 2,400°K and 11,000°K.
- **OUTDOOR** : Select this when the color temperature is between 1,700°K and 11,000°K. (sodium light inclusion)
- **INDOOR** : Select this when the color temperature is between 4,500°K and 8,500°K.
- **MANUAL** : Select this to fine-tune White Balance manually. Set White Balance first by using the ATW or AWC mode. After that switch to MANUAL mode, fine-tune the White Balance and the Function Setup switch.
- **AWC → SET** : To find the optimal luminance level for the current environment, point the camera towards a sheet of white paper and press the Function Setup switch. If the environment changes, readjust it.

MAIN SETUP		
1. LENS		DC
2. EXPOSURE ↺		
▶ 3. WHITE BAL		ATW
4. SIMPLE FOCUS	INIT →	SET
5. BACKLIGHT		OFF
6. SSNR3		ON ↺
7. DAY/NIGHT		AUTO ↺
8. SPECIAL ↺		
9. EXIT		

WHITE BAL MANUAL SETUP		
▶ RED	.... *	552
BLUE	.... *	560
RETURN ↺		



- White Balance may not work properly under the following conditions. In this case select the AWC mode.
  - When the ambient illumination of the subject is dim.
  - If the camera is directed towards a fluorescent light or is installed in a place where illumination changes dramatically, the White Balance operation may become unstable.

# Operating Your Camera

## SIMPLE FOCUS

You can adjust the focus of video image.

1. When the SETUP menu screen is displayed, select **<SIMPLE FOCUS>** by using the Function Setup switch so that the arrow indicates **<SIMPLE FOCUS>**.
2. Use the Function Setup switch to set up the focus.
  - **INIT→SET** : Restores the focus adjustment to the default flange back position.
  - **FOCUSING→SET** : Select this to fit the focus automatically.



- The focusing →set mode may not fit correctly in the following cases:
  - Sudden change to the object in Simple focus mode (sudden movement, appearance or disappearance)
  - Radical change to the brightness in Simple focus mode
  - Image of a low contrast
  - If the camera is exposed to a strong light source in the front or surroundings
- In a situation where Simple focus is hardly applied, try to use the manual focus mode.

MAIN SETUP	
1. LENS	DC
2. EXPOSURE	
3. WHITE BAL	ATW
▶ 4. SIMPLE FOCUS	INIT→SET
5. BACKLIGHT	OFF
6. SSNR3	ON
7. DAY/NIGHT	AUTO
8. SPECIAL	
9. EXIT	

## BACKLIGHT

This camera is designed so that it delivers a distinctive subject and background at the same time, even when the subject is in backlight, by adopting a function of the proprietary WN2 DSP chip.

1. When the SETUP menu screen is displayed, select **<BACKLIGHT>** by using the Function Setup switch so that the arrow indicates **<BACKLIGHT>**.
2. Select a desired mode using the Function Setup switch depending on the camera purpose.
  - **BLC** : Enables a user to select a desired area on a picture and view that area more clearly.
    - **LEVEL** : Adjust level of the BLC function.
    - **TOP/BOTTOM/LEFT/RIGHT** : Adjust the area to be enhanced.

BLC SETUP	
▶ 1. LEVEL	MIDDLE
2. TOP	30
3. BOTTOM	70
4. LEFT	30
5. RIGHT	70
6. RETURN	

- **HLC (High Light Compensation)** : If the scene contains extremely bright light areas such as; from car headlight, the light can mask out much of the on-screen detail.

- **LEVEL** : Adjust level of the HLC function.
- **MASK COLOR** : Change the color of the masking area. (Black, Red, Blue, Gray, Magenta)
- **MASK TONE** : Change the brightness of the masking area.
- **TOP/BOTTOM/LEFT/RIGHT** : Adjust the area to be enhanced.

**HLC SETUP**

▶ 1. LEVEL		MIDDLE
2. MASK COLOR		BLACK
3. MASK TONE	<div style="border: 1px solid black; width: 100px; height: 15px; display: flex; align-items: center; justify-content: center;"> <span style="font-size: 8px;">..... * .....</span> </div>	7
4. TOP	<div style="border: 1px solid black; width: 100px; height: 15px; display: flex; align-items: center; justify-content: center;"> <span style="font-size: 8px;">..... * .....</span> </div>	30
5. BOTTOM	<div style="border: 1px solid black; width: 100px; height: 15px; display: flex; align-items: center; justify-content: center;"> <span style="font-size: 8px;">..... * .....</span> </div>	75
6. LEFT	<div style="border: 1px solid black; width: 100px; height: 15px; display: flex; align-items: center; justify-content: center;"> <span style="font-size: 8px;">..... * .....</span> </div>	30
7. RIGHT	<div style="border: 1px solid black; width: 100px; height: 15px; display: flex; align-items: center; justify-content: center;"> <span style="font-size: 8px;">..... * .....</span> </div>	75
8. RETURN ↩		

- **WDR (Wide Dynamic Range)** : It displays a sharp image of the objects in a scene where both bright and dark areas exist.

- **LEVEL** : Select a sensitivity level of WDR.

**WDR SETUP MODE**

▶ LEVEL		MIDDLE
RETURN ↩		

- **OFF** : Not being used



- Because there can be a difference in the effectiveness of HLC according to the amount of light area in the screen, optimize the installation angle for the best HLC performance.
- When dark, the HLC is only activated when a bright light exceeding a specific size.
- The HLC is not activated in day light or when bright light is not present at night.
- The WDR function may be restricted when the manual or P-iris lens is used.
- The CVBS don't output when the WDR function is used.


# Operating Your Camera

## SSNR3

This function reduces the background noise in a low luminance environment.

1. When the SETUP menu screen is displayed, select **<SSNR3>** by using the Function Setup switch so that the arrow indicates **<SSNR3>**.
2. Select a desired mode using the Function Setup switch.
  - **ON** : Activates SSNR3 so that noise is reduced.
  - **OFF** : Deactivates SSNR3. Noise is not reduced.
3. Set the SSNR3 mode to **<ON>** and press the Function Setup switch. Then you can adjust the noise reduction level.

MAIN SETUP	
1. LENS	DC
2. EXPOSURE	
3. WHITE BAL	ATW
4. SIMPLE FOCUS	INIT → SET
5. BACKLIGHT	OFF
▶ 6. SSNR3	ON
7. DAY/NIGHT	AUTO
8. SPECIAL	
9. EXIT	

-  ■ You cannot set the SSNR3 to 'ON' or 'OFF' when the AGC mode of the 'EXPOSURE' menu is 'OFF'.
- When adjusting the noise reduction level in the SSNR3 mode, remember that the higher the level set, the more the noise level will be reduced, as will the brightness of the image.

## DAY/NIGHT

You can display pictures in color or in black and white.

1. When the SETUP menu screen is displayed, select **<DAY/NIGHT>** by using the Function Setup switch so that the arrow indicates **<DAY/NIGHT>**.
2. Select a desired mode using the Function Setup switch according to the picture display you want.
  - **COLOR** : The picture is always displayed in color.
  - **B/W** : The picture is always displayed in black and white.

MAIN SETUP	
1. LENS	DC
2. EXPOSURE	
3. WHITE BAL	ATW
4. SIMPLE FOCUS	INIT → SET
5. BACKLIGHT	OFF
6. SSNR3	ON
▶ 7. DAY/NIGHT	AUTO
8. SPECIAL	
9. EXIT	

- **AUTO** : The mode is switched to <COLOR> in a normal environment, but switches to <B/W> mode when ambient illumination is low. To set up the switching time for AUTO mode, press the Function Setup switch.

- **DWELL TIME** : You can select day/night switching delay time from.

→ 5s, 7s, 10s, 15s, 20s, 30s, 40s, 60s

- **DURATION** : Adjust the brightness of the lighting where the mode switch occurs.

- **DN→ABF** : The video is automatically focused after the lighting mode changes from Day to Night or vice versa.

- **EXTERN** : Control the image modes of Color and B/W when an external controller is synchronized via the Alarm In port.



- When AGC in the EXPOSURE menu is 'OFF', AUTO mode is not available to select.

#### DAY/NIGHT AUTO SETUP

- |                  |        |
|------------------|--------|
| ▶ 1. COLOR → B/W |        |
| DWELL TIME       | 5 SEC  |
| DURATION         | FAST   |
| 2. B/W → COLOR   |        |
| DWELL TIME       | 10 SEC |
| DURATION         | FAST   |
| 3. DN → ABF      | OFF    |
| 4. RETURN ↵      |        |

## SPECIAL

1. When the SETUP menu screen is displayed, select <**SPECIAL**> by using the Function Setup switch so that the arrow indicates <**SPECIAL**>.

#### MAIN SETUP

- |                 |            |
|-----------------|------------|
| 1. LENS         | DC         |
| 2. EXPOSURE ↵   |            |
| 3. WHITE BAL    | ATW        |
| 4. SIMPLE FOCUS | INIT → SET |
| 5. BACKLIGHT    | OFF        |
| 6. SSNR3        | ON ↵       |
| 7. DAY/NIGHT    | AUTO ↵     |
| ▶ 8. SPECIAL ↵  |            |
| 9. EXIT         |            |

2. Select a desired mode using the Function Setup switch.

#### SPECIAL SETUP

- |                 |         |
|-----------------|---------|
| ▶ 1. CAM TITLE  | OFF     |
| 2. IMAGE ADJ ↵  |         |
| 3. INTELLIGENCE | OFF     |
| 4. PRIVACY ↵    |         |
| 5. PROFILE      | BASIC   |
| 6. COMM ADJ ↵   |         |
| 7. LANGUAGE     | ENGLISH |
| 8. RESET        |         |
| 9. RETURN ↵     |         |

# Operating Your Camera

- **CAM TITLE** : If you enter a title, the title will appear on the monitor.

- 1) If the SPECIAL menu screen is displayed, use the Function Setup switch so that the arrow indicates <**CAM TITLE**>.
- 2) Set it to <**ON**> by using the Function Setup switch.
- 3) Press the Function Setup switch.
- 4) Use the Function Setup switch to move to a desired letter and select the letter by pressing the Function Setup switch. Repeat this to enter multiple letters. You can enter up to 15 letters.
- 5) Enter a title, move the cursor to <**POS**> and press the Function Setup switch. The entered title appears on the screen. Select the position to display the title on the screen by using the Function Setup switch and press the Function Setup switch. When the position is determined, select <**END**> and press the Function Setup switch to return to the SPECIAL menu.

## CAMERA TITLE SETUP

A	B	C	D	E	F	G	H	I	J	K	L	M
N	O	P	Q	R	S	T	U	V	W	X	Y	Z
a	b	c	d	e	f	g	h	i	j	k	l	m
n	o	p	q	r	s	t	u	v	w	x	y	z
-	.	1	2	3	4	5	6	7	8	9		
-	→	CLR				POS			END			

-----

ABCD

← → ↑ ↓ to Locate, then SET



- When the CAM TITLE menu is 'OFF', no title will be displayed on the monitor screen even if you enter one.
- Only English is available in this mode.
- If you move the cursor to CLR and press the Function Setup switch, all the letters are deleted. To edit a letter, change the cursor to the bottom left arrow and press the Function Setup switch. Move the cursor over the letter to be edited, move the cursor to the letter to be inserted and then press the Function Setup switch.

● **IMAGE ADJ :**

- 1) When the **SPECIAL** menu screen is displayed, select **<IMAGE ADJ>** by using the Function Setup switch so that the arrow indicates **<IMAGE ADJ>**.

SPECIAL SETUP		
1. CAM TITLE		OFF
▶ 2. IMAGE ADJ ↵		
3. INTELLIGENCE		OFF
4. PRIVACY ↵		
5. PROFILE		BASIC
6. COMM ADJ ↵		
7. LANGUAGE		ENGLISH
8. RESET		
9. RETURN ↵		

- 2) Select a desired mode using the Function Setup switch.

- **MONITOR** : Please change the settings value of video appropriate to your monitor.

- **LCD** : Please select this menu item when using an LCD monitor.

- **USER** : Please use this menu item when using a monitor other than standard ones.

You can change the gamma, color level and reset in the sub menus.

- **H-REV** : You can flip the picture horizontally on the screen.

- **V-REV** : You can flip the picture vertically on the screen.

- **D-ZOOM** : You can use a digital zoom of x2 ~ x16.

- **DIS** : Compensates the image automatically when it is seen to shake for stable image output.

- **SHARPNESS** : As you increase this value, the picture outline becomes stronger and clearer. Adjust this value appropriately depending on the sharpness of the picture.

- **OSD COLOR** : You can change the OSD font color. (White, Yellow, Green, Red, Blue)

- **VIDEO OUT FORMAT** : Sets the video size and video fmt.

- **VIDEO SIZE** : Sets the image resolution of the HD-SDI output of the camera.

Select the desired setting and press the SET button. (NTSC : 1080i 60, 1080p 30, 720p 60 ; PAL : 1080i 50, 1080p 25, 720p 50)

- **VIDEO FMT** : Sets the video output format of the Video port on the camera provided for test and installation.(NTSC, PAL)

- **RETURN** : Select this to save the settings for the IMAGE ADJ menu and to return to the SPECIAL menu.

IMAGE SETUP		
▶ 1. MONITOR		LCD ↵
2. H-REV		OFF
3. V-REV		OFF
4. D-ZOOM		OFF
5. DIS		OFF
6. SHARPNESS		ON ↵
7. OSD COLOR		WHITE
8. VIDEO OUT FORMAT ↵		
9. RETURN ↵		



- If you increase the sharpness level excessively, the image may be displayed abnormally or it can cause a noise.

# Operating Your Camera

- **INTELLIGENCE** : Commands the camera to motion-detect and trace an object.

- **DETECTION** : Since the camera detects motion without any additional external sensor, you can monitor activity more efficient.

INTELLIGENCE	
▶ 1. DETECTION	OFF
2. TRACKING	OFF
3. FIXED/MOVED	OFF
4. TAMPERING	OFF
5. DETECT BOX	OFF
6. ALARM OUT	OFF
7. SETUP CONFIG	
8. RETURN	

- **TRACKING** : Commands the camera to detect and trace a moving object.

- ▶ **TYPE** : Two types, line and area, of fences are available.

- ▶ **COUNT** : Displays the number of times that an object enters or leaves a fenced area.

- ▶ **DISPLAY** : Determines whether to use the fence selected in the FENCE.

- ▶ **FILL** : Fill or remove color from the FENCE.

- ▶ **POSITION** : Defines the position and detection direction of a line or fenced area.

TRACKING	
▶ 1. TYPE	LINE
2. COUNT	OFF
3. DISPLAY	ON
4. FILL	OFF
5. POSITION	
6. RETURN	

## 1) LINE FENCE

- **SEL POS** : Selects a position from POS1, POS2.

- **X POS / Y POS** : Adjust the size and position of the selected line fence.

- **DIRECTION**

- **DIR1** : Detects objects moving right to left on the fence line.

- **DIR2** : Detects objects moving left to right on the fence line.

- **DIR1/2** : Detects all objects moving crosswise on the fence line.

- **RETURN** : Select this to save the POSITION menu settings and return to the TRACKING menu.

## 2) AREA FENCE

- **SEL POS** : Selects a position from POS1 ~ POS4.

- **X POS / Y POS** : Adjust the size and position of the selected area fence.

- **DIRECTION**



- **IN** : Detects objects entering the fenced area.

- **OUT** : Detects objects exiting the fenced area

- **IN/OUT** : Detects all objects entering and exiting the fenced area.

- **RETURN** : Select this to save the POSITION menu settings and return to the TRACKING menu.

- ▶ **RETURN** : Select this to save the TRACKING menu settings and return to the INTELLIGENCE menu.

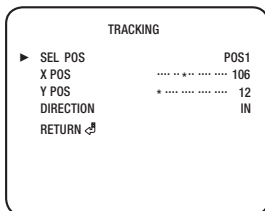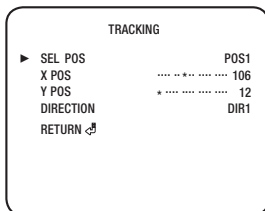



- FIXED/MOVED : Detects an object that emerges or disappears from the screen, or stays onscreen without movement.



- A detection (FIXED/MOVED) error may occur if :
  - multiple motions occur continuously in random directions
  - a fixed object moves in one position continuously
  - a second object screens the first moving object

- TAMPERING : You can set to detect tampering attempts and trigger events, such as blocked lens.
- DETECT BOX : Outlines an object on the screen in a box when its movement matches a custom Motion Type.
- ALARM OUT : Releases a signal from the MD Output Terminal of the camera when an object's movement matches a custom Motion Type.
- SETUP CONFIG :

- ▶ DETECT AREA : Defines the Motion Detection area.
  - AREA SEL: You can select up to 4 areas.
  - MODE : Determines whether to use the area selected in the AREA.
  - DETECT ALARM : Determines whether to use the detect alarm selected in the AREA.
  - TOP / BOTTOM / LEFT / RIGHT : Adjust the size and position of the selected area.
  - RETURN : Select this to save the DETECT AREA menu settings and return to the SETUP CONFIG menu.

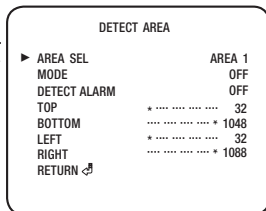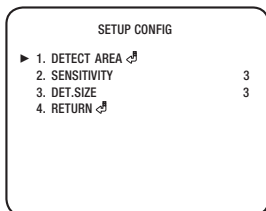

# Operating Your Camera

- ▶ **SENSITIVITY** : Set the sensitivity of the motion detection. When adjusting the sensitivity, note that the lower the level means the higher sensitivity.
- ▶ **DET. SIZE** : Selects an object size to detect on the screen. When adjusting the detection size, note that the higher the level means the bigger detection size.
- ▶ **RETURN** : Select this to save the SETUP CONFIG menu settings and return to the INTELLIGENCE menu.
- **RETURN** : Select this to save the INTELLIGENCE menu settings and return to the SPECIAL menu.
- **PRIVACY** : You can specify a certain area of the camera video to be protected for your privacy.
  - 1) When the SPECIAL menu screen is displayed, press the Function Setup switch so that the arrow indicates <**PRIVACY**>.
  - 2) Set up the mode using the Function Setup switch.

PRIVACY	
▶ 1. TYPE 1	OFF
2. TYPE 2	OFF
3. RETURN ↵	

- **TYPE 1** (In this type, the shape of selected area is rectangular)

- ▶ **AREA SEL**: You can select up to 16 PRIVACY areas.
- ▶ **AREA MODE** : Determines whether to use the area selected in the AREA SEL.
- ▶ **MASK COLOR** : Determine area color. You can select Green, Red, Blue, Black, White, Gray.
- ▶ **TOP / BOTTOM / LEFT / RIGHT** : Adjust the size and position of the selected area.
- ▶ **RETURN** : Select this to save the TYPE 1 menu settings and return to the PRIVACY menu.

TYPE 1	
▶ 1. AREA SEL	AREA1
2. AREA MODE	OFF
3. MASK COLOR	GRAY
4. TOP	* ..... 23
5. BOTTOM	.... * ..... 59
6. LEFT	... * ..... 35
7. RIGHT	.... * ..... 67
8. RETURN ↵	

- **TYPE 2** (In this type, the shape of selected area is polygonal)

- ▶ **AREA SEL**: You can select up to 4 PRIVACY areas.
- ▶ **AREA MODE** : Determines whether to use the area selected in the AREA SEL.
- ▶ **MASK COLOR** : Determine area color. You can select Green, Red, Blue, Black, White, Gray.
- ▶ **SEL POS/XPOS/YPOS** : Adjust the size and position of the selected area.

TYPE 2	
▶ 1. AREA SEL	AREA1
2. AREA MODE	OFF
3. MASK COLOR	GRAY
4. SEL POS	L.TOP
5. X POS	.... * ..... 30
6. Y POS	* ..... 10
7. RETURN ↵	

► RETURN : Select this to save the TYPE 2 menu settings and return to the PRIVACY menu.

- RETURN : Select this to save the PRIVACY menu settings and return to the SPECIAL menu.

● **PROFILE** : Select a desired mode using the Function Setup switch according to the picture display you want.

- BASIC : The most common environment is set to meet.

- DAY/NIGHT : It will be set automatically so it optimizes to the day or night conditions, respectively.

- BACKLIGHT : It will be set automatically so you can distinguish the object from the background in a severe backlighting scene.

- ITS : It will be set automatically so you can easily check the traffic conditions.

- INDOOR : It will be set automatically to help you take a picture in a regular indoor lighting condition.

- USER : Automatically configures the camera to your custom settings.

1) Select Custom for Simple Setup mode.

2) Configure the menu options to your custom settings.

3) The settings are automatically saved as Custom mode.

4) Profile user mode don't initialize when menu resets.

- BANK : The system will automatically set if dark and bright area are all exist at same time, sothat you can recognize the object in bank easily.

★ In the PROFILE menu, you can configure the following camera settings at once.

SPECIAL SETUP	
1. CAM TITLE	OFF
2. IMAGE ADJ ↵	
3. INTELLIGENCE	OFF
4. PRIVACY ↵	
► 5. PROFILE	BASIC
6. COMM ADJ ↵	
7. LANGUAGE	ENGLISH
8. RESET	
9. RETURN ↵	

	BASIC	DAY/NIGHT	BACKLIGHT	ITS	INDOOR	USER	BANK
SHUTTER	ESC	ESC	ESC	MANUAL(1/250)	A.FLK	-	---
AGC	HIGH	HIGH	HIGH	HIGH	HIGH	-	HIGH
WHITE BAL	ATW	ATW	ATW	OUTDOOR	INDOOR	-	ATW
BACKLIGHT	OFF	OFF	BLC	OFF	OFF	-	WDR
SSNR3	ON	ON	ON	ON	ON	-	ON
DAY/NIGHT	AUTO	AUTO	AUTO	AUTO	AUTO	-	AUTO



■ The BANK can be used when the LENS is select to DC mode.

# Operating Your Camera

## • COMM ADJ (Communication Adjustment) :

This function sets up the camera communication status when controlling the camera through an external control device.

1) When the SPECIAL menu screen is displayed, press the Function Setup switch so that the arrow indicates <**COMM ADJ**>.

2) Set up the mode using the Function Setup switch.

- **PROTOCOL** : Select the communication PROTOCOL. (SAMSUNG-T, SAMSUNG-E, Pelco-D, Pelco-P, Bosch, Honeywell, Vicon, Panasonic, GE, AD)
- **CAM ID** : Determines the camera's identification number (between 0 and 255).
- **BAUD RATE** : You can select 2400/4800/9600/19200/38400/57600 bps.
- **UART MODE** : You can select NONE, EVEN or ODD for the parity bits.
- **DISP ID** : Display camera title on top left corner of the screen.
- **RET PKT** : Specify whether to return the same command to the controlling device when a control command is delivered to the camera.



- When protocol such as SAMSUNG-T, SAMSUNG-E, Pelco-D & Pelco-P are in using, you can use preset95 command to activate Menu.

COMMUNICATION SETUP	
▶ 1. PROTOCOL	SAMSUNG-T
2. CAM ID	* ..... 1
3. BAUD RATE	9600
4. UART MODE	8-N-1
5. DISP ID	OFF
6. RET PKT	ENABLE
7. RETURN ↵	

- **LANGUAGE** : You can select the menu language according to your requirements.
- **RESET** : Resets the camera settings to the factory defaults. Communication, Language, Video Format and Monitor settings are not initialized.
- **RETURN** : Select this to save the SPECIAL menu settings and return to the MAIN SETUP menu.

## EXIT

Save the current settings and exit the MAIN SETUP menu.

## TROUBLESHOOTING

PROBLEM	SOLUTION
Nothing appears on the screen.	<ul style="list-style-type: none"> <li>• Check that the power cord and line connection between the camera and monitor are properly connected.</li> <li>• When the camera's HD-SDI BNC output is directly connected to the monitor's BNC terminal: Make sure the monitor supports HD-SDI signal input.</li> <li>• When the camera's HD-SDI BNC output is connected to the DVR: Make sure the DVR supports HD-SDI signal input.</li> <li>• HD-SDI output is converted into other format such as DVI and VGA by using video converter: Make sure the converter's HD-SDI input format supports the product's output video format.</li> </ul>
The image on the screen is dim.	<ul style="list-style-type: none"> <li>• Is lens stained with dirt? Clean your lens with soft, clean cloth.</li> <li>• Set the monitor to the proper condition.</li> <li>• If the camera is exposed to very strong light, change the camera position.</li> </ul>
The image on the screen is dark.	<ul style="list-style-type: none"> <li>• Adjust the contrast feature of the monitor.</li> </ul>
The camera is not working properly, and the surface of the camera is hot.	<ul style="list-style-type: none"> <li>• Check that you have properly connected the camera to an appropriate power source.</li> </ul>
The SENS-UP function does not work.	<ul style="list-style-type: none"> <li>• Check that AGC of EXPOSURE SETUP menu is 'OFF'.</li> </ul>
The Motion Detection function does not work.	<ul style="list-style-type: none"> <li>• Check that MOTION DET of SPECIAL SETUP menu is 'OFF'.</li> </ul>
Color is not correct.	<ul style="list-style-type: none"> <li>• Check the setting of WHITE BAL SETUP menu .</li> </ul>
The screen flickers continually.	<ul style="list-style-type: none"> <li>• Ensure the camera is not pointing towards the sun.</li> <li>• Is the camera framing the sun or other bright light source?</li> <li>• HD-SDI video may not appear to be normal if distance exceeds the maximum transferrable distance.</li> <li>• When a BNC cable adaptor is used to combine two or more BNC cables for distributed HD-SDI video transfer, make sure the impedance of the adaptor is 75Ω. Otherwise, it may cause shorter transfer distance or broken video transfer.</li> </ul>
RS-485 communication is not available.	<ul style="list-style-type: none"> <li>• Check RS-485 communication settings.</li> </ul>

## SPECIFICATION

	Items	Description
Video	Video	1/3" Progressive Scan CMOS
	Total Pixels	2,010(H) x 1,108(V), 2.2M Pixels
	Effective Pixels	1,944(H) x 1,092(V), 2.1M Pixels
	Scanning System	Progressiv Scan
	Min. Illumination	Color : 1Lux @ F1.2, 0.017 Lux (Sens-up, 60x) B/W : 0.1 Lux @ F1.2, 0.0017 Lux (Sens-up, 60x)
	S / N Ratio	50dB (AGC off, Weight on)
	Video Output	SMPT292M ( HD-SDI ), Monitoring CVBS
Lens Type	Lens Type	Manual / DC Auto Iris / P-Iris
	Mount Type	C/CS
Operational	On Screen Display	Multi-language Support English, Korean, Japanese, Spanish, French, Portuguese, Chinese, German, Italian, Russian, Czech, Polish, Rumanian, Serbian, Swedish, Danish, Turkish
	Camera Title	Off / On (Displayed 15 characters)
	Day & Night	Auto (ICR), Color, B/W , External
	Backlight Compensation	Off / BLC / HLC / WDR
	Contrast Enhancement	SSDR ( Off / On )
	Digital Noise Reduction	SSNRIII ( Off / On )
	Intelligent Video	Tampering, Virtual Line, Enter/Exit, Appear/Disappear


	Items	Description
Operational	Privacy Masking	Off / On (4 Polygonal + 16 Rectangular zones)
	Sens-up (Frame Integration)	Off / Auto (2x ~ 60x)
	Gain Control	Off / Low / Middle / High
	White Balance	ATW / Outdoor / Indoor / Manual / AWC → SET (1,700K° ~ 11,000K°)
	Electronic Shutter Speed	Esc / A.FLK / Manual / ---
	Digital Zoom	Off / On (2x ~ 16x)
	Reverse	Off / H-Rev / V-Rev / HV-Rev
	Communication	RS-485
	Protocol	RS-485 : SAMSUNG-T, SAMSUNG-E, Pelco-D, Pelco-P, Bosch, Honeywell, Vicon, Panasonic, GE, AD
Environmenta	Operating Temperature / Humidity	-10°C~+55°C (14°F~131°F) / ~90% RH
Electrical	Input Voltage	Dual ( 24VAC±10% & 12VDC±10% )
	Current	1.56A
Mechanica	Color / Material	Body : Dark Gray / Aluminum, Steel
	Dimension (WxHxD)	W73.1 x H66.6 x D147.8mm
	Weight	321g
HD-SDI Transmission Distance	5C2V ( 75 ohm )	Max. 100~140m
	L-6CHD ( 75 ohm )	Max. 200m

- The maximum transferrable distance of HD-SDI video signal depends on the cable manufacturer or installation conditions.
- When a BNC cable adaptor is used to combine two or more BNC cables for distributed HD-SDI video transfer, make sure the impedance of the adaptor is 75Ω. Otherwise, the adaptor may cause shorter transfer distance or broken video transfer due to loss of transferred signal.
- If you intend to install the product outdoors, you must use the housing to meet the temperature/humidity conditions as specified above. In particular, if the product is installed in a place where the temperature falls below zero (0) degree, it is recommended to install a separate heater inside of the housing in an attempt to meet the operating conditions.

※ For enhanced performance, the product specification is subject to change without prior notice.

## PRODUCT OVERVIEW

Unit : mm (inch)

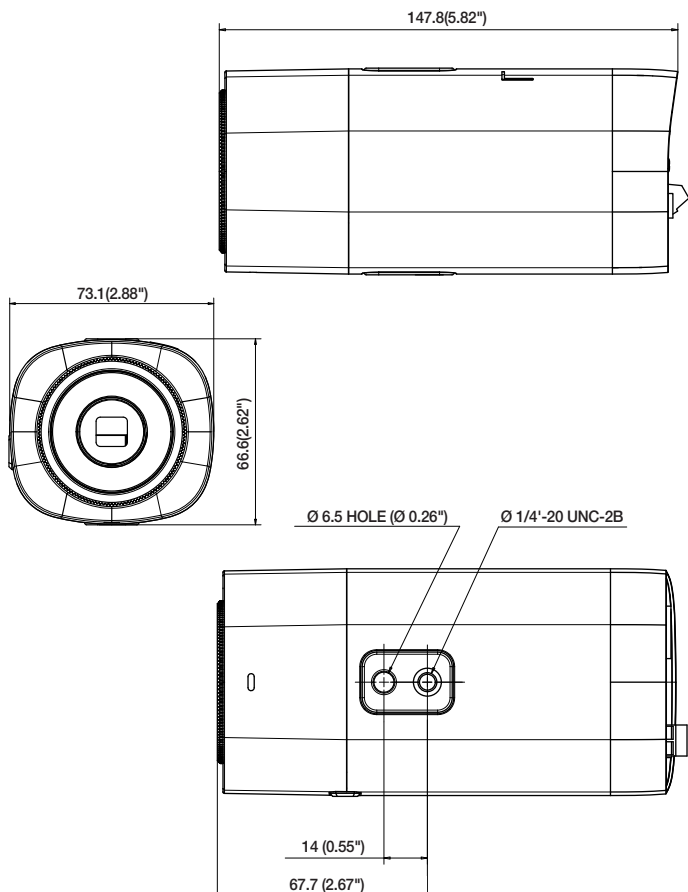



This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.



Samsung Techwin cares for the environment at all product manufacturing stages, and is taking measures to provide customers with more environmentally friendly products.

The Eco mark represents Samsung Techwin's devotion to creating environmentally friendly products, and indicates that the product satisfies the EU RoHS Directive.



#### **Correct Disposal of This Product (Waste Electrical & Electronic Equipment)**

(Applicable in the European Union and other European countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.



#### **Correct disposal of batteries in this product**

(Applicable in the European Union and other European countries with separate battery return systems.)

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.



## **SALES NETWORK**

---

### **SAMSUNG TECHWIN CO., LTD.**

Samsungtechwin R&D Center, 701, Sampyeong-dong, Bundang-gu, Seongnam-si, Gyeonggi-do, Korea, 463-400  
TEL : +82-70-7147-8740~60 FAX : +82-31-8018-3745

### **SAMSUNG TECHWIN AMERICA Inc.**

100 Challenger Rd. Suite 700 Ridgefield Park, NJ 07660  
Toll Free : +1-877-213-1222 Direct : +1-201-325-6920  
Fax : +1-201-373-0124  
[www.samsungcctvusa.com](http://www.samsungcctvusa.com)

### **SAMSUNG TECHWIN EUROPE LTD.**

Samsung House, 1000 Hillswood Drive, Hillswood Business  
Park Chertsey, Surrey, UNITED KINGDOM KT16 0PS  
TEL : +44-1932-45-5300 FAX : +44-1932-45-5325

---

[www.samsungtechwin.com](http://www.samsungtechwin.com)  
[www.samsungsecurity.com](http://www.samsungsecurity.com)

PT01-001887A