



The ComNet™ CopperLine® CL-SFP is a small form-factor pluggable Ethernet extender module that improves bandwidth and distance of existing copper networks. It helps avoid installation costs of new fiber lines on site by allowing full 100Mbps Ethernet bandwidth to be extended over 2-wire twisted pair or coaxial cable.

Housed in a small form-factor pluggable (SFP) module enclosure, it is designed for plug-and-play installation into any 100BASE-FX Ethernet unit with an MSA-compliant port. These must be used in pairs, with a CL-SFP module installed at both ends of the connection, or a CopperLine unit installed at one end.

FEATURES

- › Point-to-point Ethernet connectivity at 100 Mbps up to 1,000 ft (304 m) using 1 pair UTP cable or 2,000 ft (609 m) using the optional CLRJ2COAX adapter and coax cable.
- › Extends Ethernet distance over single pair or coax with an adapter.
- › Small Form-Factor Pluggable (SFP) module can be plugged into any Ethernet switch with SFP ports that support 100BASE-FX*
- › Tested and certified by an independent laboratory for full compliance with the environmental requirements (ambient operating temperature, mechanical shock, vibration, humidity with condensation, high-line/low-line voltage conditions and transient voltage protection) of NEMA TS-1/TS-2 and CALTRANS Traffic Signal Control Equipment Specifications
- › Lifetime Warranty

APPLICATIONS

- › Retrofit existing analog CCTV installations to Ethernet-based systems
- › CCTV systems for Casinos, airports, school campuses

** The ComNet Copperline CL-SFP modules are fully compliant with all ComNet Ethernet products supporting 100BASE-FX SFP modules. Please contact ComNet technical support before purchasing this product if you intend to use it with any other 3rd party manufacturer in order to check compatibility.*

INSTALLATION & OPERATION

CL-SFP is a book-end solution that can work only with an additional CL-SFP or ComNet™ CopperLine® unit.

Follow the instructions below to install and connect CL-SFP:

Plug one of the two CL-SFP n the pair into the 100BASE-FX SFP slot of a device/switch. Repeat this step for the second CL-SFP in the pair.

Connection

Connect CL-SFP devices using a twisted 2-wire cable (use pins 1 & 2) or Coax

Always connect CL-SFP to another CL-SFP device or a ComNet™ CopperLine® unit. If an CL-SFP was connected to a regular port of any Ethernet device, such as a switch, reset the CL-SFP by unplugging and re-inserting the unit.

Link synchronization may take up to one minute.

LED Indicators Use 100BaseFX LED on the host



SPECIFICATIONS

Interface	
Type	100BaseFX
Connector	SFP / MSA Compliant
Connectors	RJ-45
Data Rate	100Mbps
Mechanical	
Power	3.3V
Power Consumption	1.0W
Dimensions (H x W x L)	0.48 × 0.55 × 2.91 in (12.4 × 14.0 × 74.1 mm)
Weight	1.06 oz (30.0g)
Environmental	
Operating Temp	-40°C to +75°C
Storage Temp	-40°C to +85°C
Relative Humidity	0 to 90%, non-condensing

ORDERING INFORMATION

Part Number	Description
CL-SFP3	100Mbps Copper Range Extending SFP, Local
CL-SFP4	100Mbps Copper Range Extending SFP, Remote
CLRJ2COAX	Adapter for RJ-45 to COAX
CLESP	Single Port Ethernet Surge Protector
Optional Accessories	RJ-45 Breakout Wiring Kit (Includes cable and terminal block)

TYPICAL APPLICATION

