



INSTALLATION AND OPERATION MANUAL

FDX72(M,S)1

MULTI-PROTOCOL RS232/422/485 DATA TRANSCEIVER FEATURING LINEAR DROP-INSERT-REPEAT

The ComNet™ FDX72(M,S)1 series Transceiver unit is a fully-digital transceiver designed for implementing full RS232, RS422 or RS485 2 or 4-wire traffic signalization/communications data networks of the highest possible reliability. A network of FDX72 units, used with the ComNet FDX70E(A,B)(M,S)1 series products as end points, can support one full-duplex data channel or two half-duplex data channels. These transceivers also feature data translation to convert between data protocols. Full data re-clocking and regeneration permit an almost unlimited number of transceiver/controller units to be used within the network. These environmentally hardened transceivers are ideal for use in unconditioned out-of-plant or roadside installations.


Utilizing wave division multiplexing technology (WDM), only one optical fiber is required between units

Bi-color (Red/Green) LED indicators are provided for rapidly ascertaining equipment operating status. See **Figure 8** on **Page 5** for an explanation of LED indications.

These units are interchangeable between stand-alone or card-cage mount configurations. See **Figure A** on **Page 7** for mounting instructions.

See **Figures 1 – 9** for complete installation details.

FIGURE 1 - FDX72 FIBER CONNECTIONS

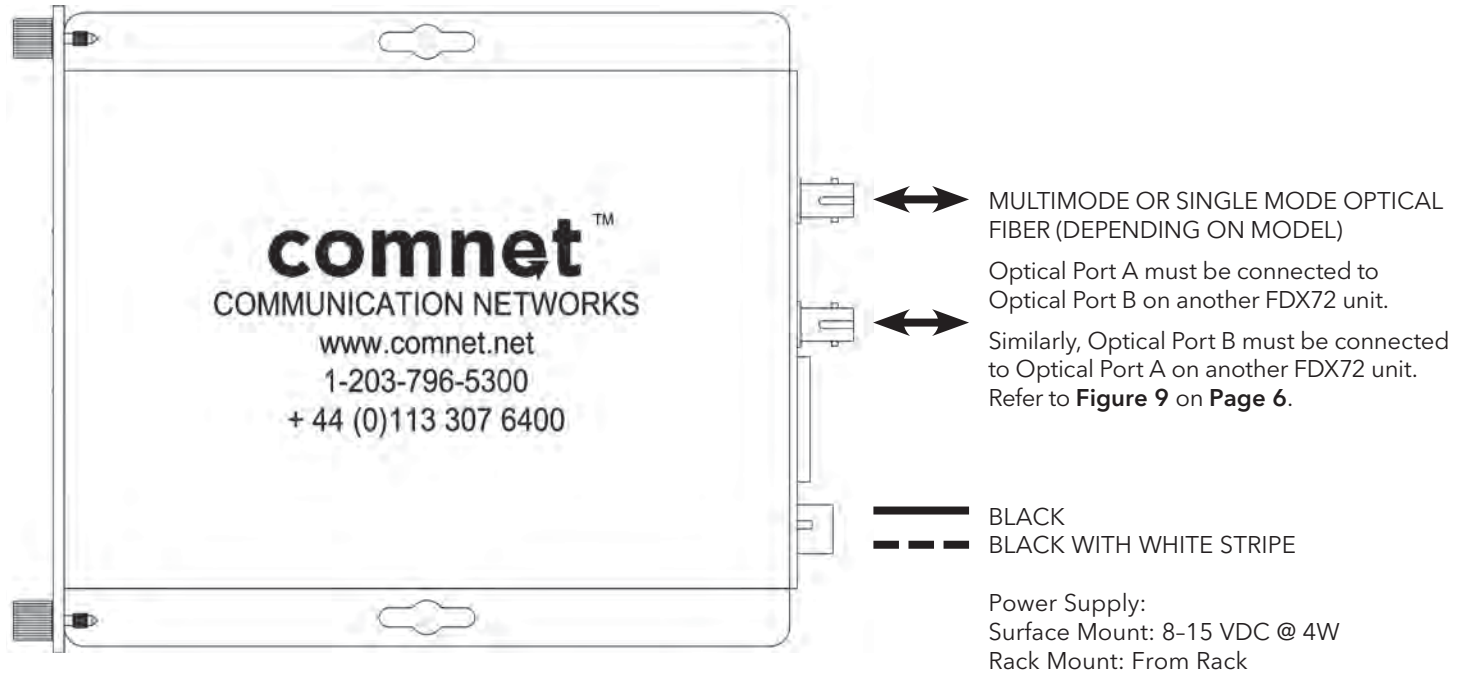

NOTE: Remove Electrical Connector for Rack Mount Units

FIGURE 2 - FDX72

FRONT PANEL

REAR PANEL


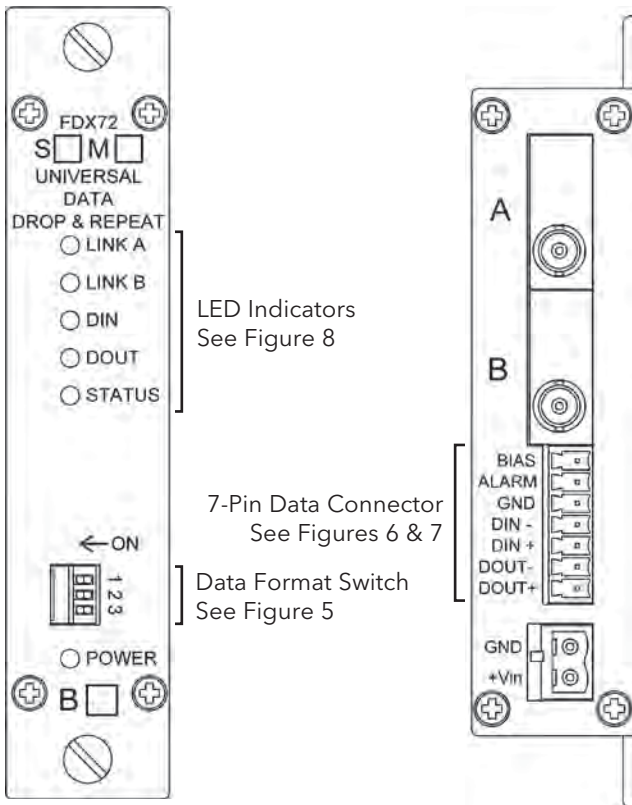



FIGURE 3 - DATA FORMAT SWITCH POSITIONS

 

Switch

Located on front panel.

The first two switches set the data type, the third sets the Master/Remote Mode.

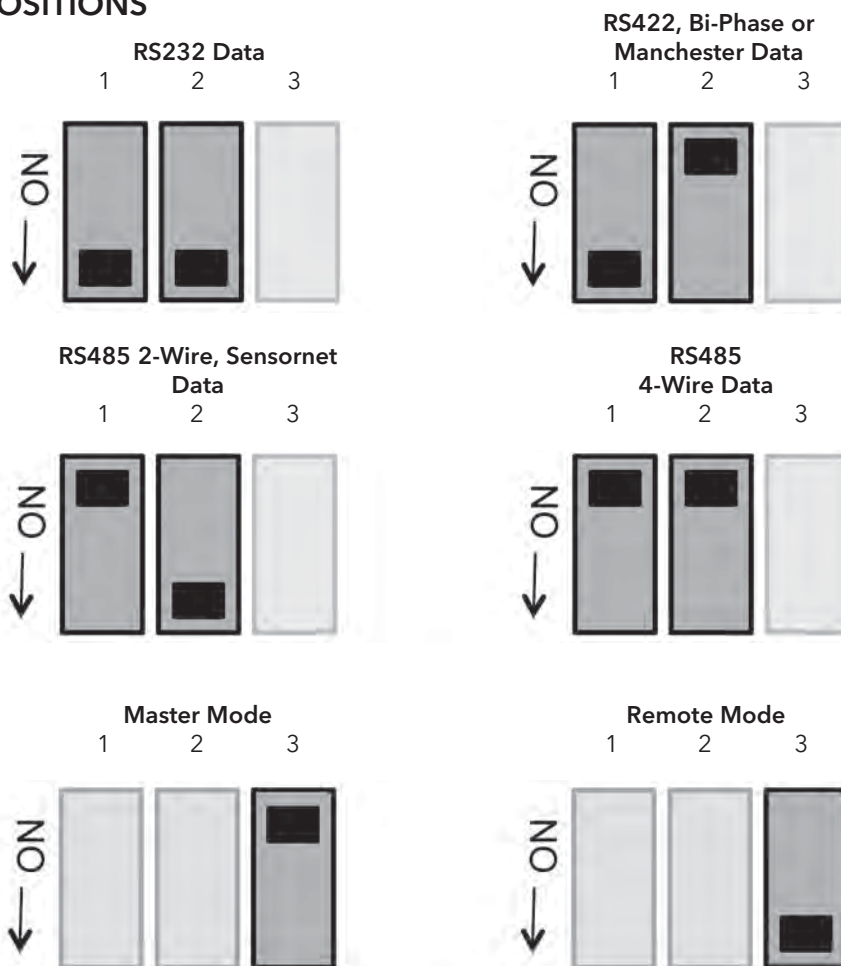

There are two virtual data channels shared between all FDX72 units in a system: a Master channel and a Remote channel. The Master/Remote Mode switch sets the data channel used by the equipment connected to each FDX72 unit in the system. The behavior of a Master and Remote depends on the data type (set by switches 1 and 2):

RS232, RS422, RS485 (4-wire):

Units in Master Mode transmit data to all units set to Remote Mode.

Units in Remote Mode transmit data to all units set to Master Mode.

There is no limit to the number of Masters or Remotes in a system as long as the equipment connected to the FDX72 can handle multiple Masters and multiple Remotes. Most applications requiring Master/Remote communications would use just one Master and multiple Remotes. Masters can communicate with all Slaves, but not with other Masters. Remotes can communicate with all Masters, but not with other Remotes.

RS485 (2-wire):

Units in Master Mode transmit data to all units set to Master Mode.

Units in Remote Mode transmit data to all units set to Remote Mode.

The concept of Master and Remote are not used with RS485 (2-wire) mode. Rather, the Master/Remote Mode switch simply sets which of two independent data channels each unit will use. All Masters can communicate with each other, but not with Remotes. All Remotes can communicate with each other, but not with Masters.

FIGURE 6 - DATA CONNECTIONS

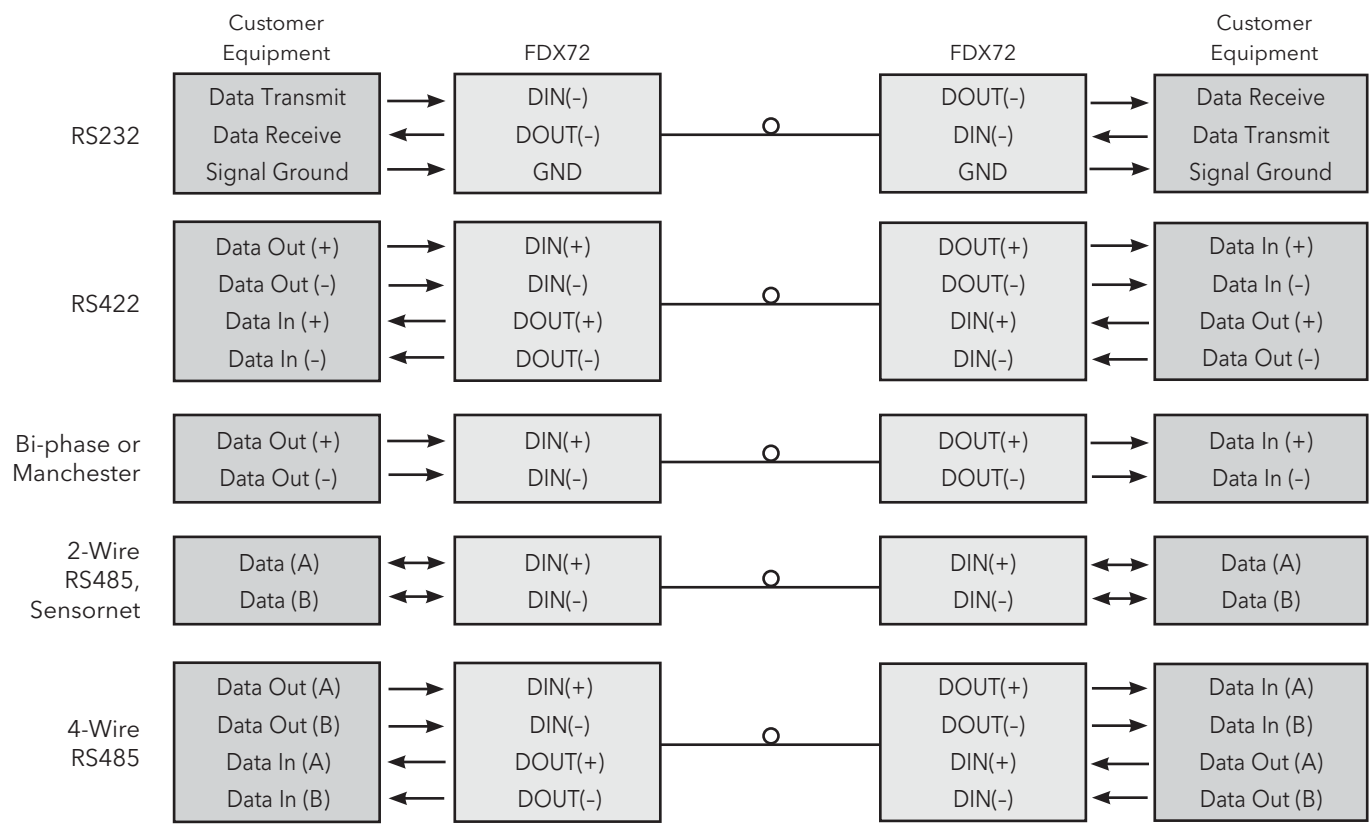


FIGURE 7 - 7-PIN DATA CONNECTOR

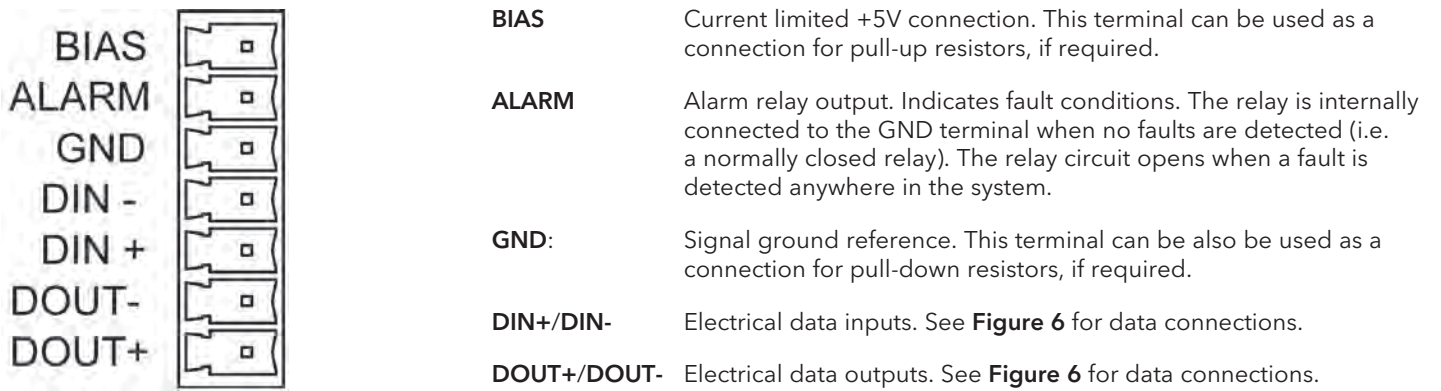


FIGURE 8 - LED INDICATORS

	LINK A	LINK B	DIN	DOUT	STATUS	POWER
GREEN	Unit In Sync	Unit In Sync	Data Activity	Data Activity	System OK. No Alarm	Unit Powered Up
RED	Unit Not In Sync	Unit Not In Sync	-	-	Fault Detected. Alarm Condition.	-
OFF	-	-	No Data Activity	No Data Activity	-	Unit Powered Down

FAULT CONDITIONS


A fault condition is when a FDX72 unit system loses power or optical link. The FDX72 provides three LED indicators to help identify when and where fault conditions occur in a system:

1. ALARM relay output
2. STATUS LED
3. LINK A and LINK B LEDs

When a fault occurs, the ALARM relay on every FDX72 in the system goes from closed to open. In addition, the STATUS LED on every FDX72 in the system goes from solid green to solid red. The LINK A and LINK B LEDs can then be used to identify the actual location of the fault based on their color and pattern:

Solid Green	Optical link has been established between this optical port and the adjacent FDX72 over fiber. Furthermore, every other unit in the system is also reporting that link has been established. There are no faults in the system.
Solid Red	Optical link over this port has been lost. This could be due to a broken fiber, a bad connection, or loss of power at the adjacent unit.
Blinking Green/Red	Optical link has been established between this optical port and the adjacent FDX72 over fiber. However, a fault condition has been detected somewhere in the system. The LINK LED will be green for a period of time, and then flash red some number of times. The number of red flashes indicates the location of the fault by "hops" around the ring. If the LED flashes red three times, then the location of the fault is three hops away (i.e. three FDX72 units away). For larger systems with faults greater than 9 hops away, the LED will use a combination of long and short red flashes. Each long flash indicates 10 hops. Each short flash indicates 1 hop. For example, a fault 47 hops away would be encoded as 4 long red flashes, followed immediately by 7 short red flashes. The pattern repeats indefinitely until the fault is resolved.
Note	Use of a FDX72 unit as an end point will always result in a fault condition. Use ComNet parts FDX70EA and FDX70EB as end points in this system for accurate fault reporting.

FIGURE 9 - TYPICAL APPLICATION

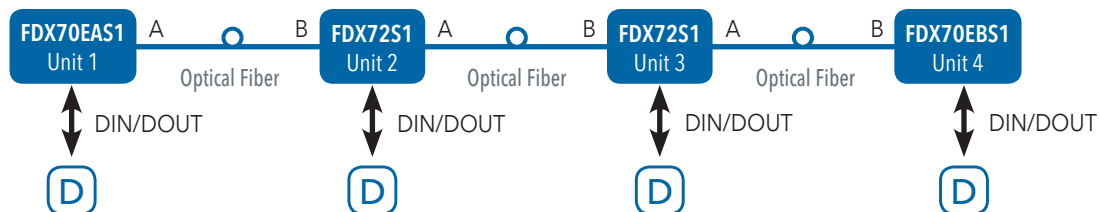

INS_FDX72_REV-
02/29/12
PAGE 6