

Configuration guide

Mechanical PTZ configuration on the AXIS P135X cameras

This document shows how to configure AXIS P135X cameras to control primarily a PT head and optionally a zoom lens.

1 Configuration steps

Follow the below configuration steps after connecting the PT head to RS-485/RS-422 serial port of the camera. Connection schemes are available for particular PT head on driver support pages. General pin assignment is as follows:



Function	Pin		Notes
RS-485/RS-422 Tx (A)	1	(Tx+)	Tx pair for RS422 and 4-wire
RS-485/RS-422 Tx (B)	2	(Tx-)	RS-485
RS-485A alt. RS-485/RS-422	3	(Rx+/Tx+ alt Rx+).	Rx pair for all modes
Rx (A)			(combined Rx/Tx for 2-wire
RS-485B alt. RS-485/RS-422	4	(Rx-/Tx- alt. Rx-)	RS-485)
Rx (B)			

Configure the camera as shown in the steps below:

1.1 Step 1 – Select Uploadable PTZ Driver option

In one of the initial menus after configuring the camera's password you will need to select **Uploadable PTZ driver** option.

AXISA				
PTZ mode				
Select PTZ mode:	Digital PTZ			
	Uploadable PTZ driver			
	ОК			
This camera has the possibility to use either digital PTZ or an uploadable PTZ driver (used when the camera is mounted on a pan/tilt head). Select the appropriate PTZ method for this camera. Digital PTZ is the default and should be selected whenever a pan/tilt/zoom head is not used.				

If product is already configured to use Digital PTZ option which is preselected you will need to factory default the camera under Setup > System Options > Maintenance, selection Default and configure the product from the beginning.

1.2 Download driver from axis.com

Select your product on the <u>Support pages</u> and go to PTZ driver, see connection schemes and download the driver from there.



For availability of other drivers than those on site, contact Axis Support via Online helpdesk.

1.3 Upload the driver

Upload the PTZ driver and Activate PTZ.

	S P1357 Network (Camera	Live View Se	tup Help
▶ Basic Setup	PTZ Drivers			0
Video & Audio	Upload			
	Select new driver to upload:		Browse	Upload
Live View Config	Select driver to use:	Pelco [4.09] 🔻		Remove
 PTZ Preset Positions Guard Tour Advanced Driver Selection Control Queue 	Note: To change or remove driver, PTZ must be deactivated for all video channels.			
	Driver Management			
	Activate PTZ			
	Device id:	1		
	Device type:	Generic	•	
Detectors	(Save Reset		

1.4 Adjust COM port settings (Optional)

Adjust COM port settings if needed to agree with the settings of the device connected to the camera:

AXIS	AXIS P1357 Network Camera	Live View Setup Help
Basic Setup	COM Port	0
	Port Settings	
Video & Audio	Enable port	
Live View Config	Generic HTTP	
▶ PTZ	Pan Tilt Zoom <u>Upload and select driver</u> Specify advanced device settings	
Detectors	Generic TCP/IP	
 Applications 	Port Type	
Events	Port type:	Serial Port
	Serial Port Settings	
Recordings	Port mode:	RS485 - 2 wire 🔻
 System Options Security Date & Time Network Storage Ports & Devices	Baud rate:	2400 🔻
	Data bits:	8 🔻
	Stop bits:	1 🔻
	Parity:	None 🔻
	Termination:	
	Bias:	Reset
About		

1.5 Enable zoom (Optional)

Go to PTZ > Advanced > Controls and enable Zoom in case for example of steering a zoom lens

Control Settings				
Panel Shortcut Command Buttons				
No Label	Information	URL	Enabl.	
Add	Modify	2/Disable CRemove		
Enable/Disabl	e controls			
🔽 Pan enable				
📝 Tilt enable				
Zoom enabl	e			
Focus enable	e			
Iris enable	Save	e Reset		
	Control S Panel Shortcut No Label Add Add Enable/Disabl Pan enable Pan enable Tilt enable Focus enable Tils enable Tils enable	Control Settings Panel Shortcut Command Buttons No Label Information Add Modify Enable Add Modify Enable Enable/Disable controls Pan enable Pan enable Tilt enable Focus enable Focus enable Iris enable Sav	Control Settings Panel Shortcut Command Buttons No Label Information URL Add Modify Enable/Disable Remove Enable/Disable controls Pan enable Pan enable Title enable Focus enable Focus enable Save Reset	