 
 


INSTALLATION INSTRUCTIONS T-PMPI-270-PC

© PANDUIT Corp. 2006

PANDUIT Corp. 2006

	CGK630U	CGK630UA	CGK630UB	CGR630U	CGR630UA	CGR630UB	CGJxxxU	CGJxxxUA	CGJxxxUB	RG5xxxUC	RG5xxx4-1	RG5xxx4A-1	RG5xxx4C-1	THSK4-1	THSK8-1		CGK630U	CGK630UA	CGK630UB	CGR630U	CGR630UA	CGR630UB	CGJxxxU	CGJxxxUA	CGJxxxUB	RG5xxxUC	RG5xxx4-1	RG5xxx4A-1	RG5xxx4C-1	THSK4-1	THSK8-1
 Cabinet Grounding Strip	1	1	-	-	-	-	-	-	-	4	4	4	-	-	 M6 Screw	8	-	-	-	-	-	-	-	-	-	-	-	-	-		
 Cage Nut Grounding Strip	-	-	1	-	-	-	-	-	-	-	-	-	-	-	 M6 HDW	8	-	8	-	-	8	-	-	-	-	-	-	-			
 Strip Clip	-	-	3	-	-	-	-	-	-	-	-	12	12	-	 M6 HDW	16	-	16	-	-	-	-	-	-	-	-	-	-			
 Front to Back Jumper	2	2	2	2	2	2	2	2	2	2	-	-	-	-	 10-32 Screw	-	8	-	-	-	-	-	-	-	-	-	-	-			
 Universal Grounding Sticker	2	2	2	2	2	2	4	4	4	4	-	-	-	-	 10-32 HDW	-	8	-	8	-	-	8	-	-	-	-	-	-			
 19" Universal Ground Bar	1	1	1	1	1	1	-	-	-	-	-	-	-	-	 10-32 HDW	-	16	-	16	-	-	16	-	-	-	-	-	-			
 Cleaning Pad	1	1	1	1	1	1	1	1	1	1	1	1	1	-	 M5 Screw	-	8	-	-	-	-	-	-	-	-	-	-	-			
 ESD Port	2	2	2	-	-	-	-	-	-	-	-	-	-	-	 M5 HDW	-	8	-	8	-	-	8	-	-	-	-	-	-			
 ESD Sticker	2	2	2	-	-	-	-	-	-	-	-	-	-	-	 M5 HDW	-	16	-	16	-	-	16	-	-	-	-	-	-			
 12-24 Screw	8	-	-	-	-	-	-	-	-	16	-	-	-	-	 Cage Nut Stud HDW	-	-	13	-	-	8	-	-	8	-	-	-	-			
 12-24 HDW	8	-	-	8	-	-	8	-	-	-	-	-	-	-	 Thru-Hole HDW	-	-	-	-	-	-	-	-	8	-	-	4	4	8		
 12-24 HDW	16	-	28	16	-	24	16	-	24	24	-	8	8	12	18	 AntiOX	1	1	1	1	1	1	1	1	1	1	1	1	1		

All torque values are based on a maximum Equipment Rail coating of .003 inches.


For Technical Support: www.panduit.com/resources/install_maintain.asp

INSTALLATION INSTRUCTIONS T-PMPI-270-PC

CGK630U, CGK630UA, CGR630U, CGR630UA, CGJxxxU, CGJxxxUA, RGSxxx, RGSxxxA


1

CGK630U, UA
CGR630U, UA
CGJxxxU, UA

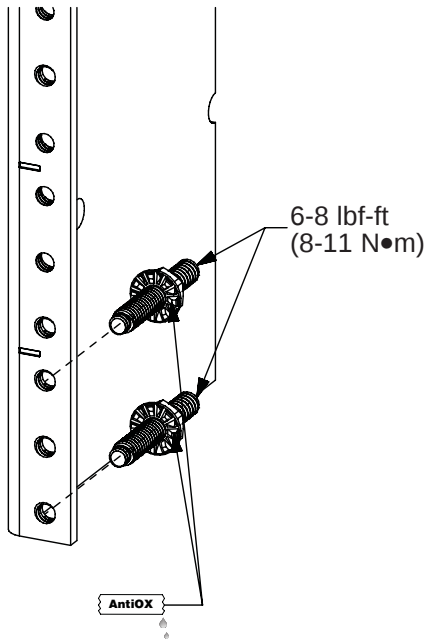


2

CGK630U, UA
CGR630U, UA
CGJxxxU, UA

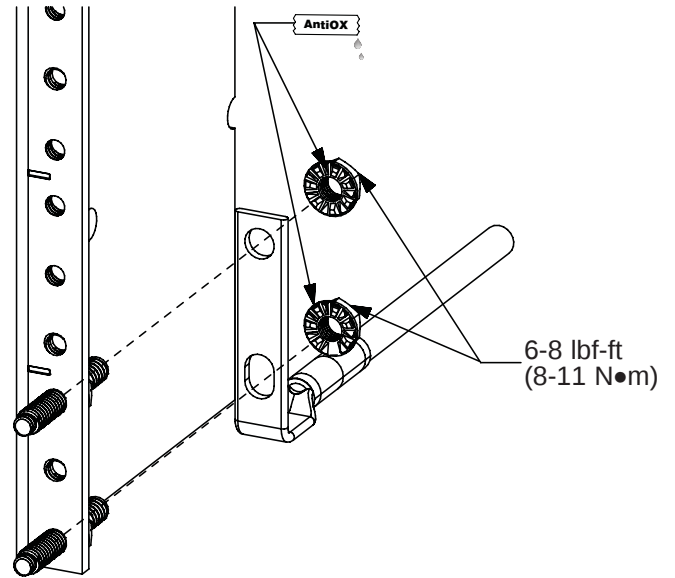


3


CGK630U, UA
RGSxxxx, A

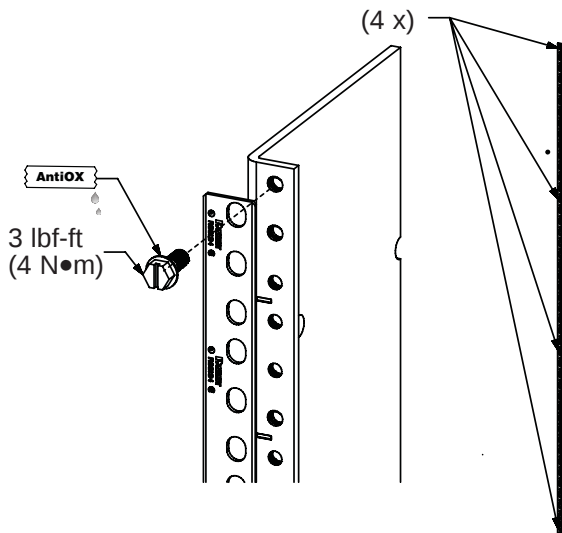

4


CGK630U, UA
RGSxxxx, A

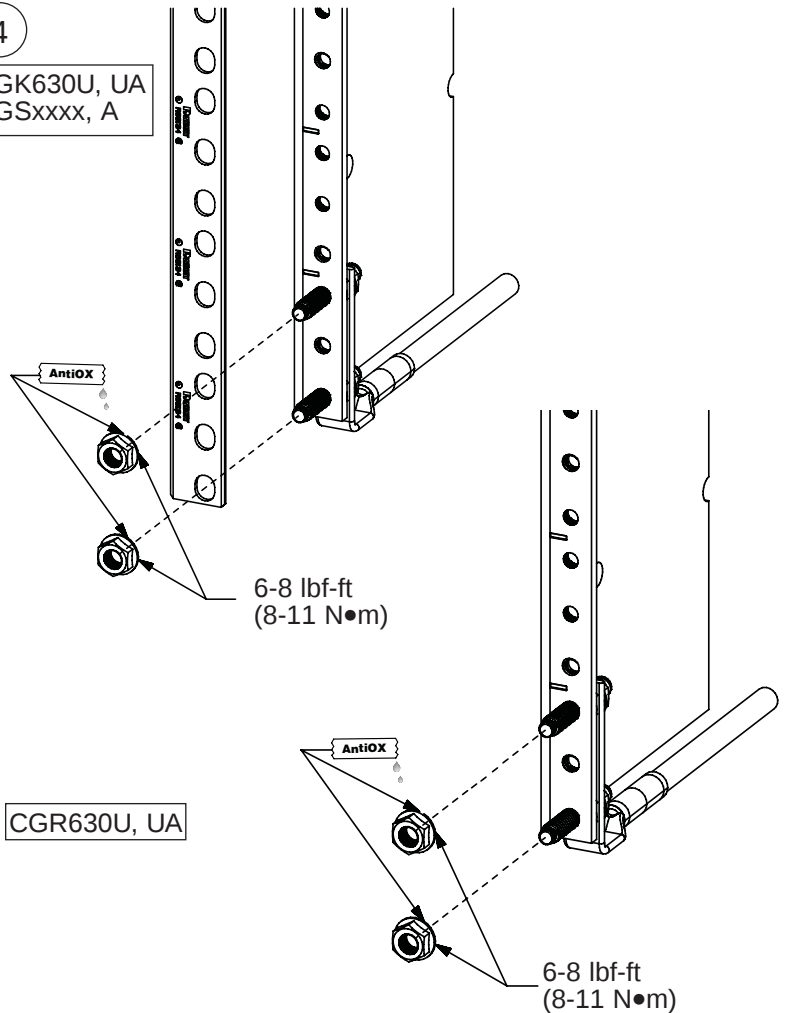

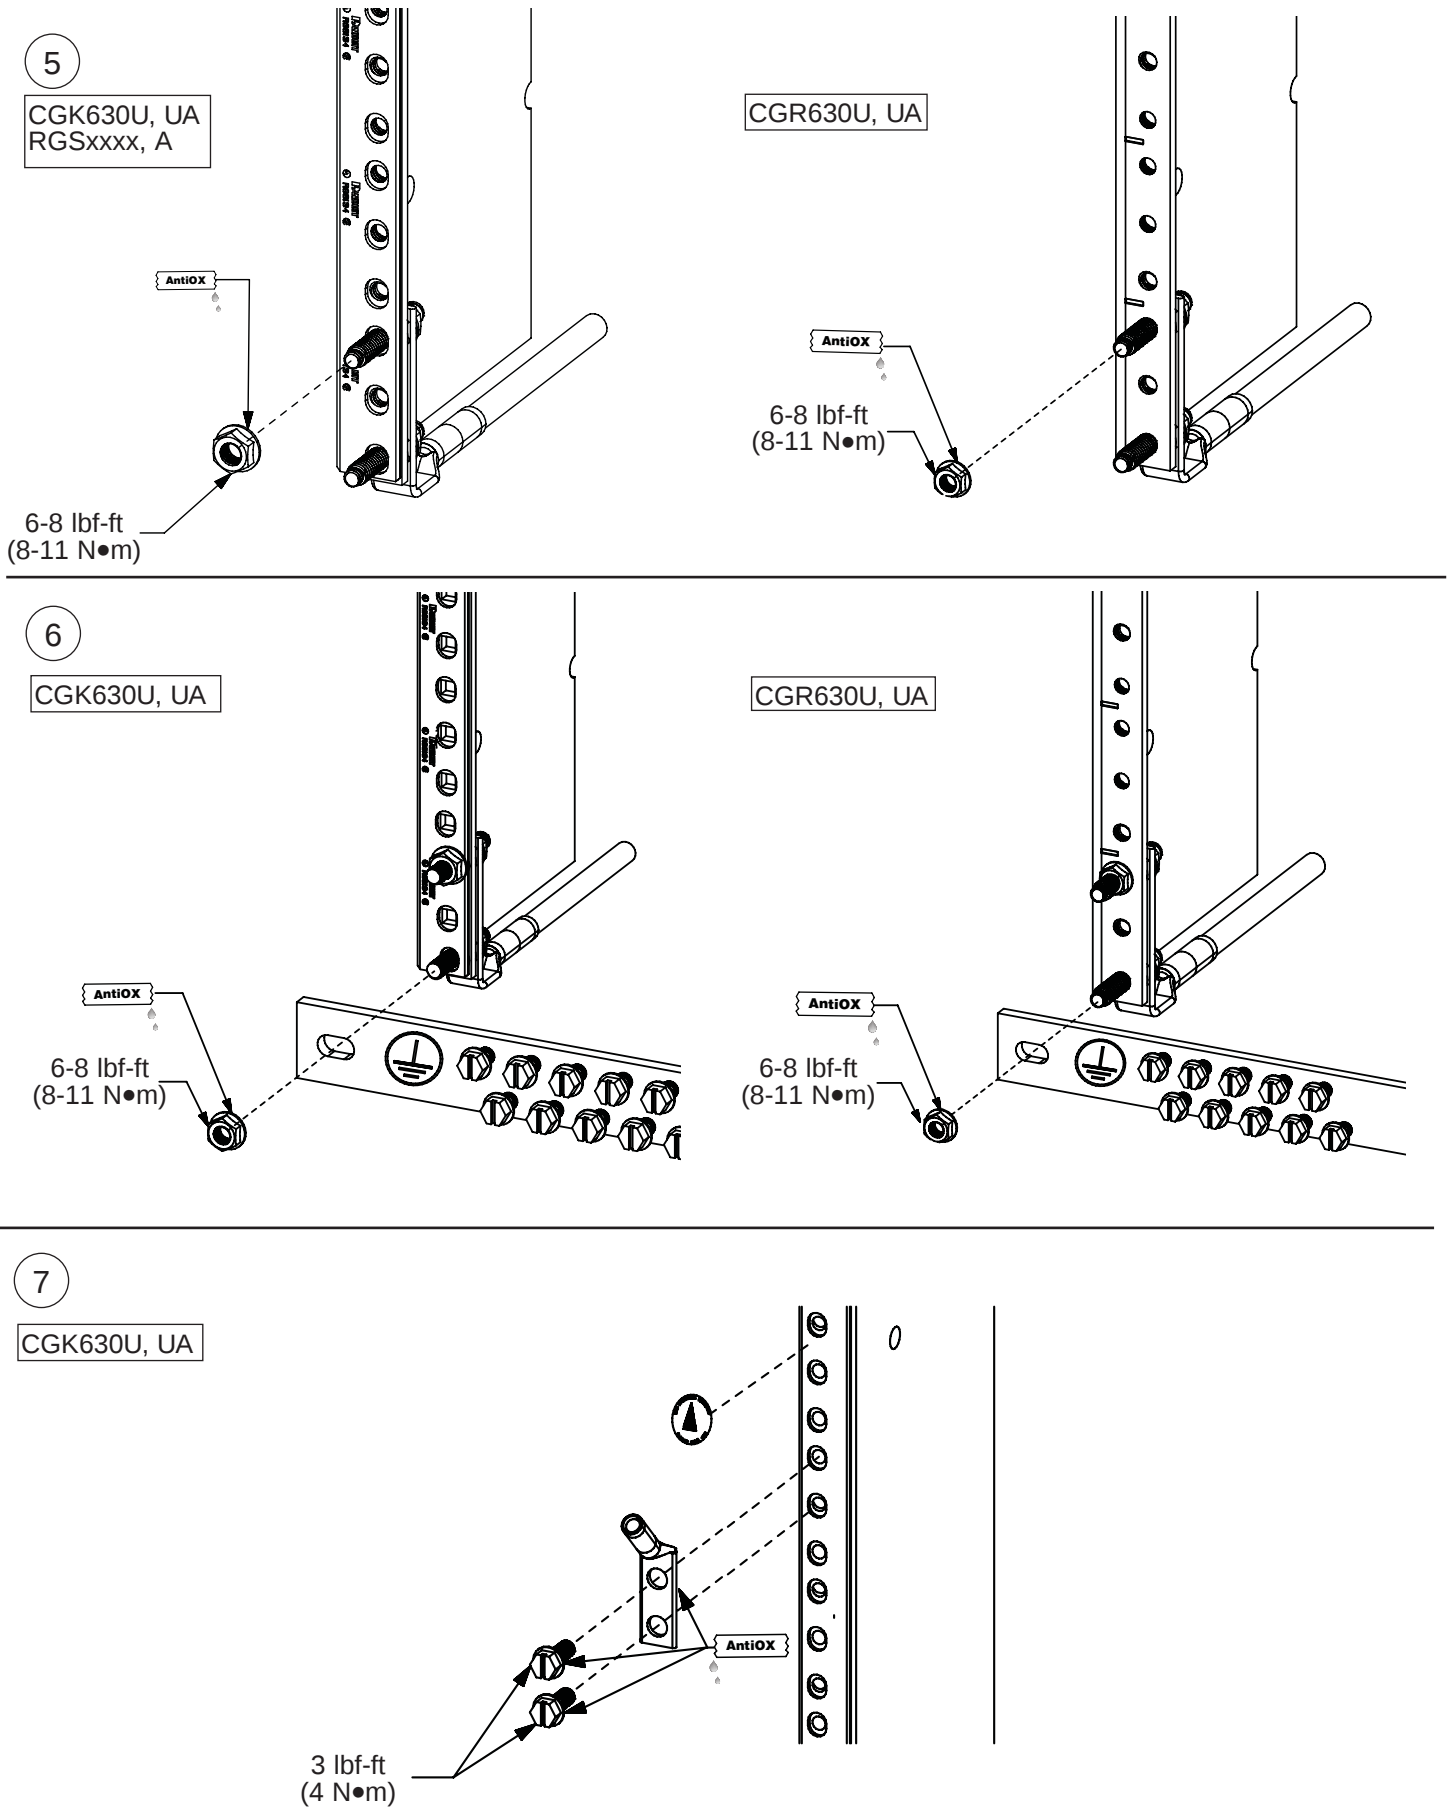

INSTALLATION INSTRUCTIONS T-PMPI-270-PC


CGK630UB, CGR630UB, CGJxxxUB, CGJxxxUC, RGSxxxxC, THSK4, THSK8

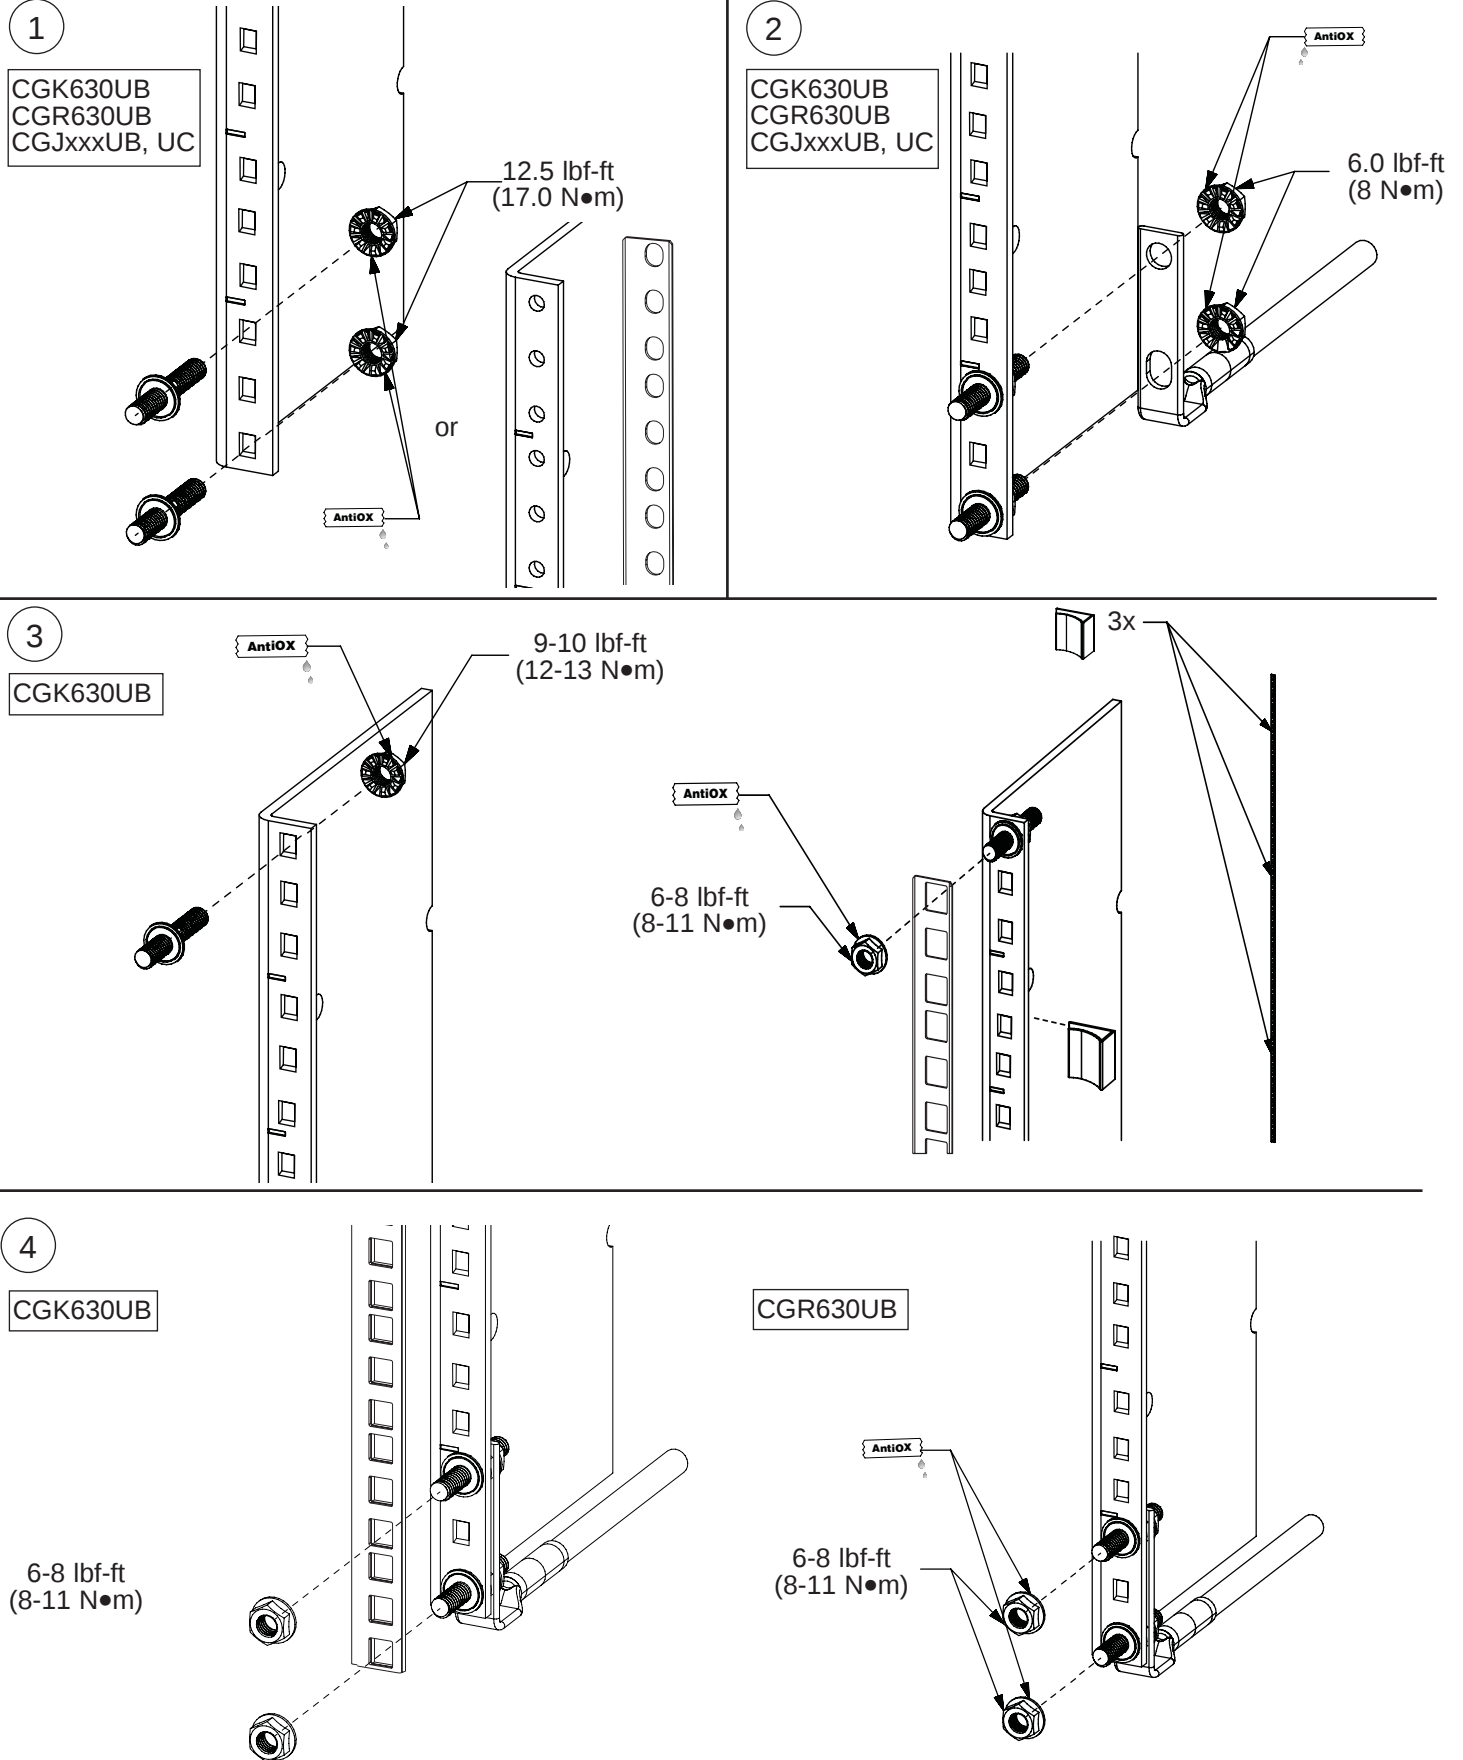


INSTALLATION INSTRUCTIONS T-PMPI-270-PC

5

CGK630UB

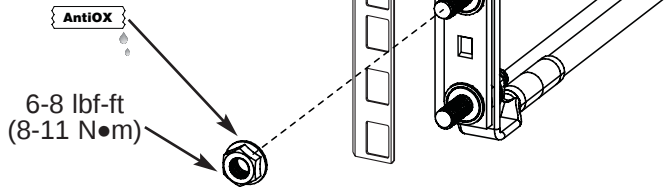


CGR630UB

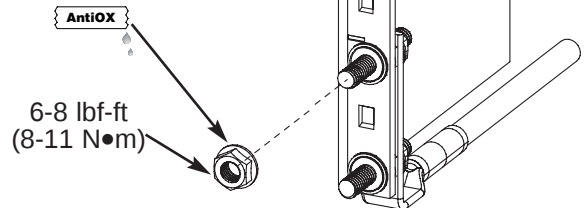


6

CGK630UB


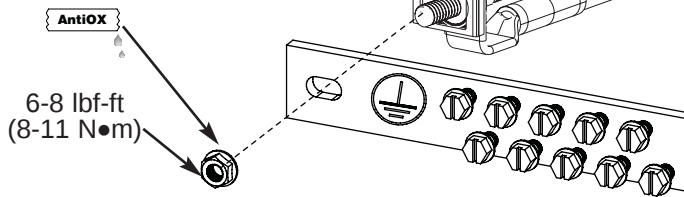


CGR630UB

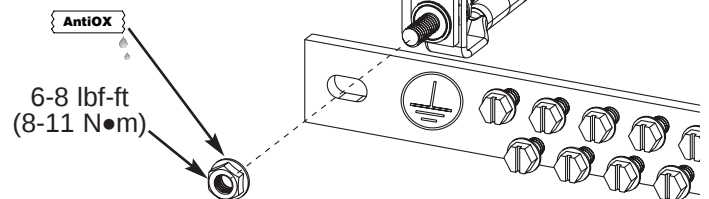


7

CGK630UB

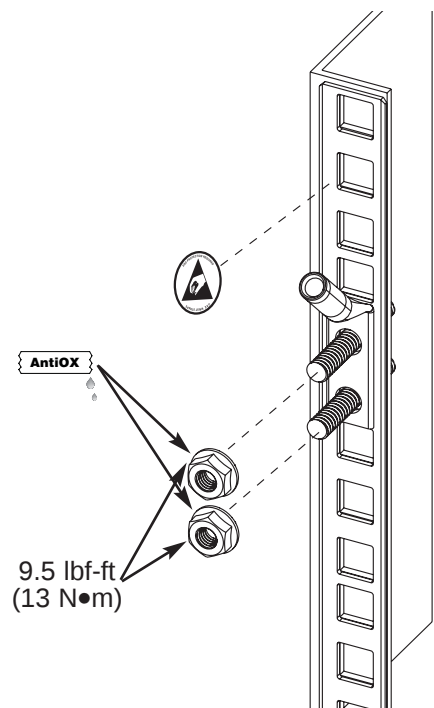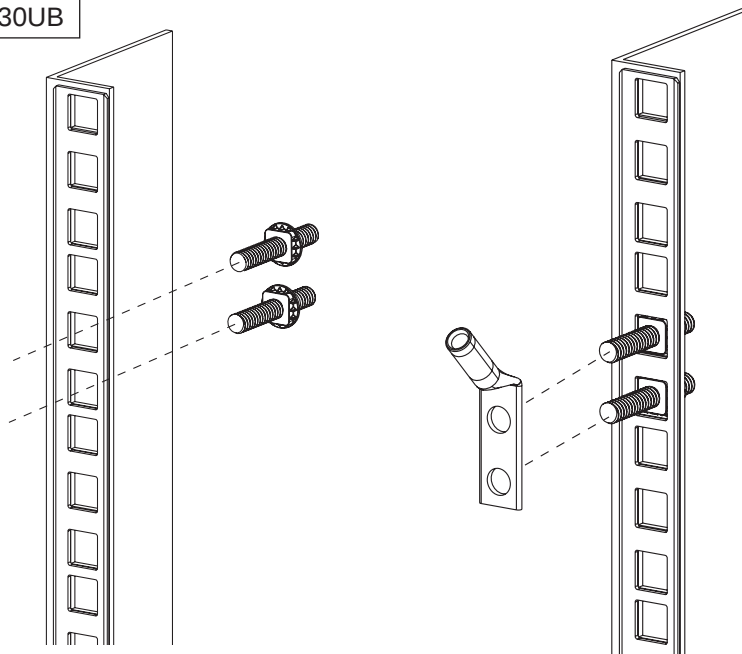

INSTALLATION INSTRUCTIONS T-PMPI-270-PC

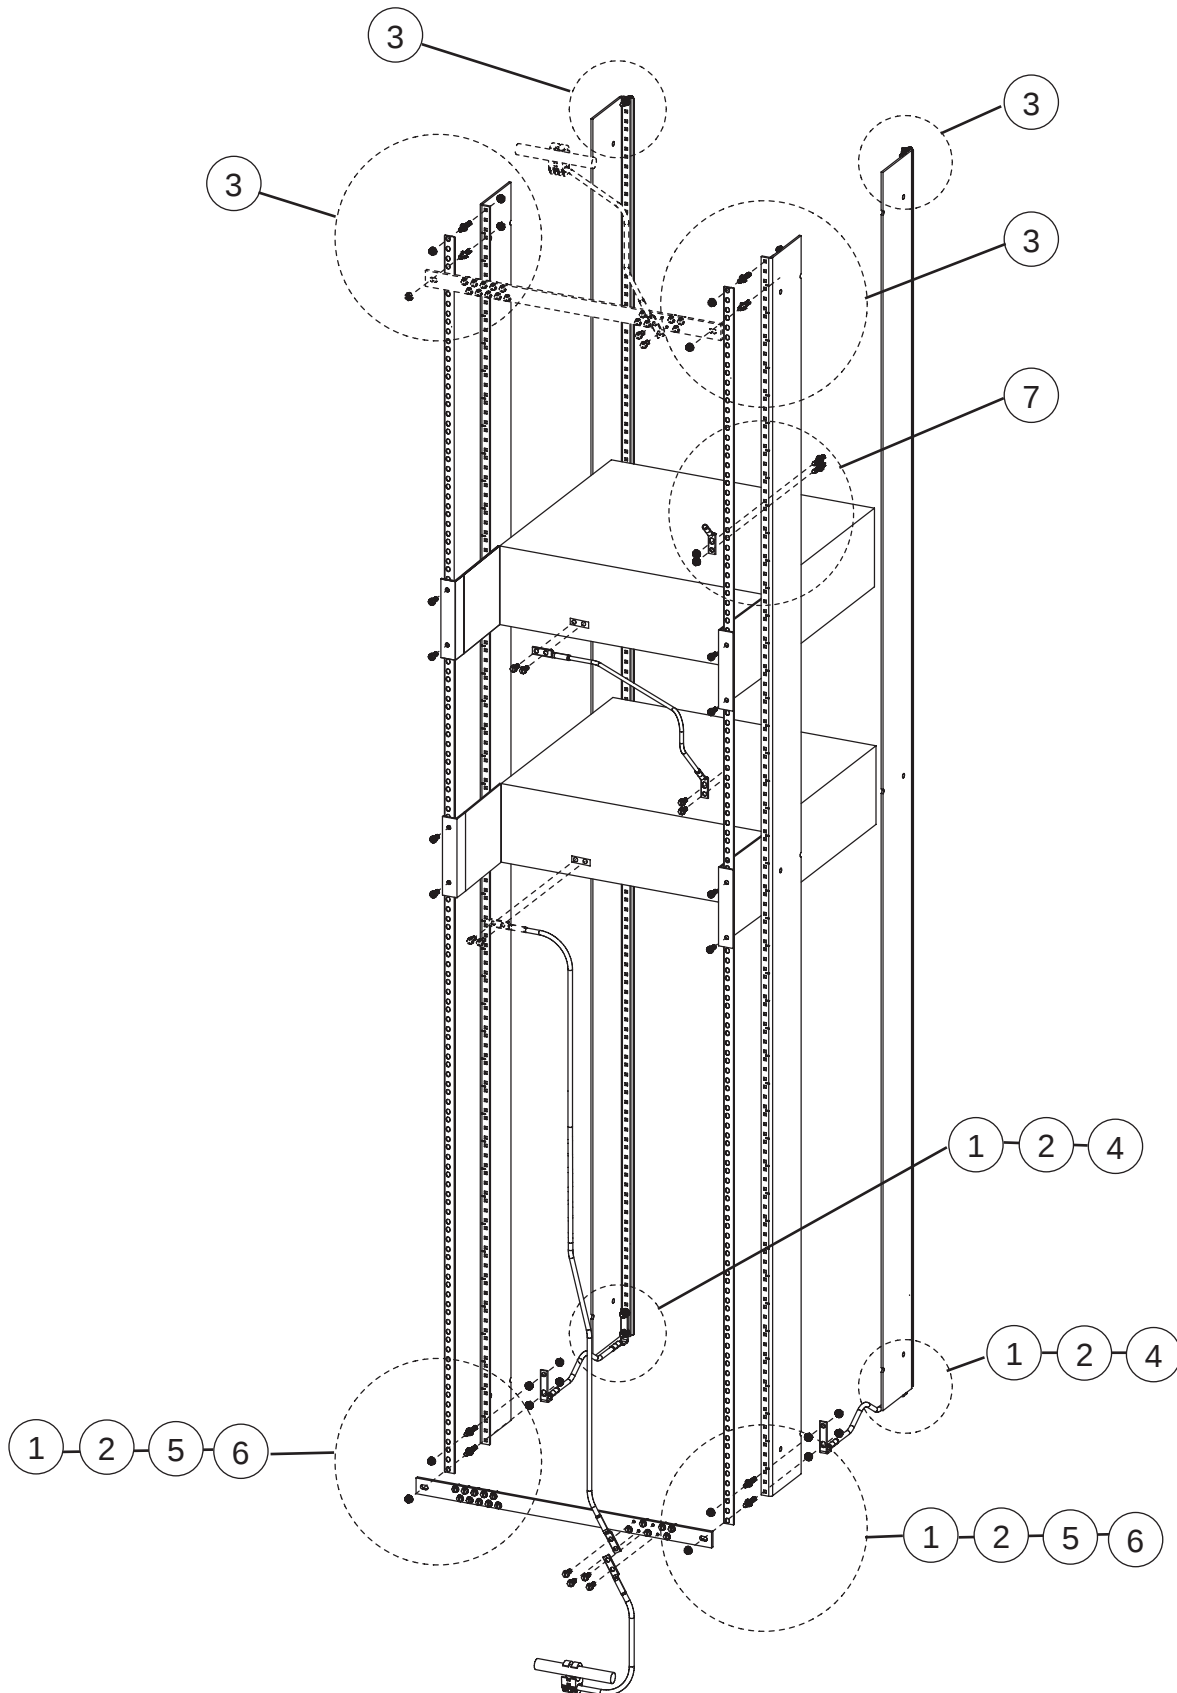

For Instructions in Local Languages and Technical Support: http://www.panduit.com/resources/install_maintain.asp	 www.panduit.com	E-mail: cs@panduit.com Fax: (815)485-5839
--	---	---

For Instructions in Local Languages and Technical Support: http://www.panduit.com/resources/install_maintain.asp	 www.panduit.com	E-mail: cs@panduit.com Fax: (815)485-5839
--	---	---



For Instructions in Local Languages and Technical Support: http://www.panduit.com/resources/install_maintain.asp	 www.panduit.com	E-mail: cs@panduit.com Fax: (815)485-5839
--	---	---

For Instructions in Local Languages and Technical Support: http://www.panduit.com/resources/install_maintain.asp	 www.panduit.com	E-mail: cs@panduit.com Fax: (815)485-5839
--	---	---

For Instructions in Local Languages and Technical Support: http://www.panduit.com/resources/install_maintain.asp	 www.panduit.com	E-mail: cs@panduit.com Fax: (815)485-5839
--	---	---