


Disassembly

- Unlock shackle
- Use control key to remove LFIC
- Remove driver retainer and driver
- Place lock on flat surface and close shackle
- Actuator and ball bearings should fall out, if not, see page 20
- Remove shackle and spring

Assembly

- Insert shackle spring and shackle
- Insert ball bearings
- Insert actuator as shown
- Check operation with follower tool
- Insert driver and driver retainer
- Insert LFIC with control key
- Check operation

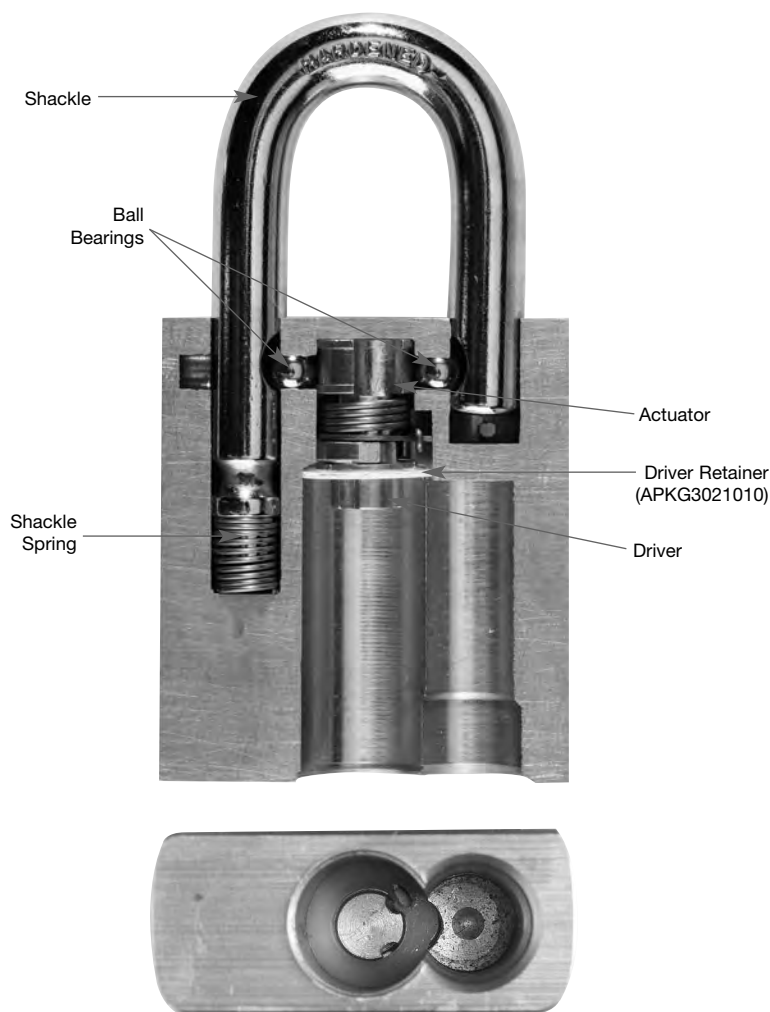

Model	Shackle			Shackle Spring	Actuator		Ball Bearings
	Diameter	Length	Part No.		NKR	NRK	
A3900S, A3900SWO	3/8"	1-1/8"	APKG1581550	APKG1611010	APKG1188280	APK62081160	APKG1806010
A3901S, A3901SWO	3/8"	2"	APKG1581570	APKG1611010	APKG1188280	APK62081160	APKG1806010
A3902S, A3902SWO	3/8"	3"	APKG1581590	APKG1611010	APKG1188280	APK62081160	APKG1806010

For Quantity Content and Ordering Information, See the Price Book