
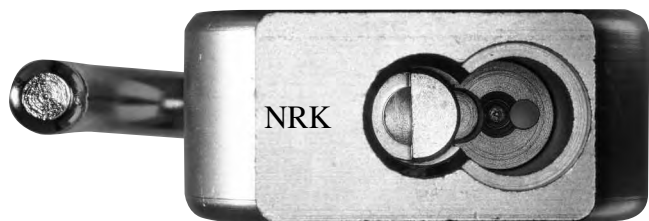
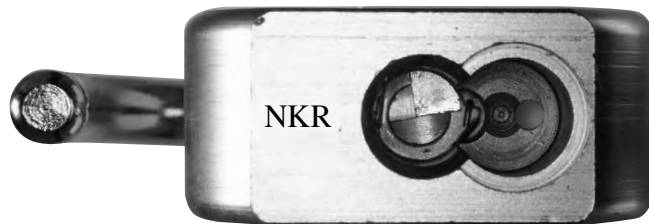


Disassembly

- Unlock shackle
- Use a Phillips screwdriver to remove security screw
- Remove security nut and trap door
- Remove cylinder and anti-bypass plate
- Place lock on flat surface and close shackle
- Actuator and ball bearings should fall out, if not, see page 20
- Remove shackle retaining screw, (APKG4765010)
- Remove shackle and spring

Assembly

- Insert shackle spring and shackle
- Insert and tighten shackle retaining screw
- Insert ball bearings
- Insert actuator as shown
- Check operation with follower tool
- Insert cylinder and rotate clockwise
- Insert trap door
- Insert security nut and screw
- Tighten security screw
- Check operation

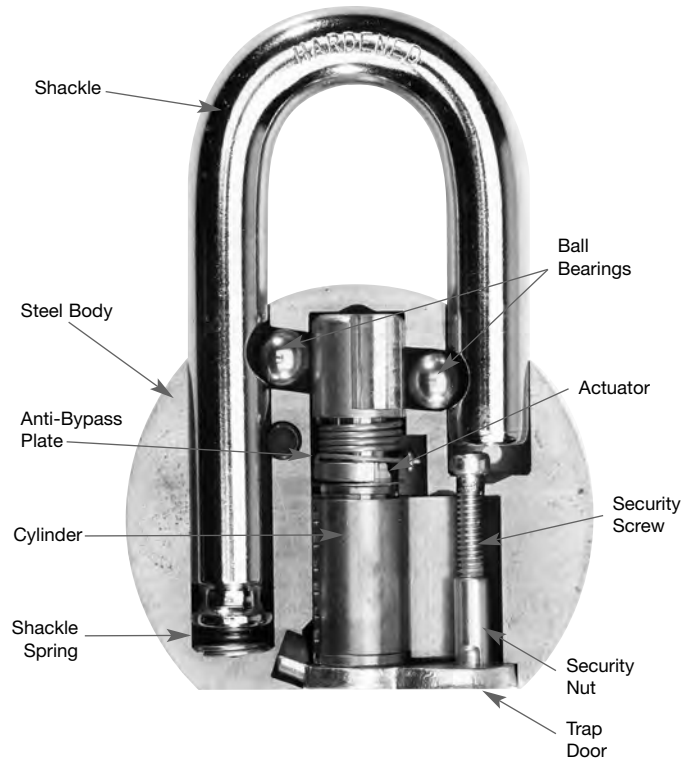

Model	Shackle			Shackle Spring	Actuator		Ball Bearings
	Diameter	Length	Part No.		NKR	NRK	
A700, A700WO, A706	7/16"	1-1/16"	APKG1582940	APKG1612010	APKG2029010	APKG2084090	APKG1807020
A702, A702WO (zinc)	7/16"	1-1/16"	APKG1582950	APKG1612010	APKG2029010	APKG2084090	APKG1807020
A701, A701WO, A707	7/16"	2"	APKG1582960	APKG1612010	APKG2029010	APKG2084090	APKG1807020
A703, A703WO (zinc)	7/16"	2"	APKG1582970	APKG1612010	APKG2029010	APKG2084090	APKG1807020

For Quantity Content and Ordering Information See the Price Book
For Trap Door Part Numbers, See Page 32