


Installation

InRowTM RP CW

ACRP500
ACRP501
ACRP502

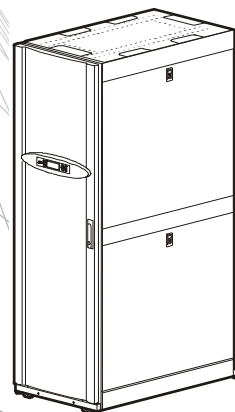



This manual is available in English on the enclosed CD.

Uživatelská příručka v češtině je k dispozici na přiloženém CD.

Dieses Handbuch ist in Deutsch auf der beiliegenden CD-ROM verfügbar.

Deze handleiding staat in het Nederlands op de bijgevoegde cd.

Este manual está disponible en español en el CD-ROM adjunto.

Ce manuel est disponible en français sur le CD-ROM ci-inclus.

A hasznalati utasítás magyarul megtalálható a csatolt CD-n.

Questo manuale è disponibile in italiano nel CD-ROM allegato.

本マニュアルの日本語版は同梱の CD-ROM からご覧になれます。

Denne manualen er tilgjengelig på norsk på vedlagte CD.

Instrukcja Obsługi w języku polskim jest dostępna na CD.

O manual em Português está disponível no CD-ROM em anexo.

Данное руководство на русском языке имеется на прилагаемом компакт-диске.

Denna manual finns tillgänglig på svenska på medföljande CD.

Bu kullanim kılavuzunun Türkçe'sä, äläxäkte gönderälen CD äçeräsände mevcuttur.

您可以从包含的 CD 上获得本手册的中文版本。

您可以从附属的 CD 上获得本手册的中文版本。

동봉된 CD 안에 한국어 매뉴얼이 있습니다 .

American Power Conversion Legal Disclaimer

The information presented in this manual is not warranted by the American Power Conversion Corporation to be authoritative, error free, or complete. This publication is not meant to be a substitute for a detailed operational and site specific development plan. Therefore, American Power Conversion Corporation assumes no liability for damages, violations of codes, improper installation, system failures, or any other problems that could arise based on the use of this Publication.

The information contained in this Publication is provided as is and has been prepared solely for the purpose of evaluating data center design and construction. This Publication has been compiled in good faith by American Power Conversion Corporation. However, no representation is made or warranty given, either express or implied, as to the completeness or accuracy of the information this Publication contains.

IN NO EVENT SHALL AMERICAN POWER CONVERSION CORPORATION, OR ANY PARENT, AFFILIATE OR SUBSIDIARY COMPANY OF AMERICAN POWER CONVERSION CORPORATION OR THEIR RESPECTIVE OFFICERS, DIRECTORS, OR EMPLOYEES BE LIABLE FOR ANY DIRECT, INDIRECT, CONSEQUENTIAL, PUNITIVE, SPECIAL, OR INCIDENTAL DAMAGES (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF BUSINESS, CONTRACT, REVENUE, DATA, INFORMATION, OR BUSINESS INTERRUPTION) RESULTING FROM, ARISING OUT, OR IN CONNECTION WITH THE USE OF, OR INABILITY TO USE THIS PUBLICATION OR THE CONTENT, EVEN IF AMERICAN POWER CONVERSION CORPORATION HAS BEEN EXPRESSLY ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. AMERICAN POWER CONVERSION CORPORATION RESERVES THE RIGHT TO MAKE CHANGES OR UPDATES WITH RESPECT TO OR IN THE CONTENT OF THE PUBLICATION OR THE FORMAT THEREOF AT ANY TIME WITHOUT NOTICE.

Copyright, intellectual, and all other proprietary rights in the content (including but not limited to software, audio, video, text, and photographs) rests with American Power Conversion Corporation or its licensors. All rights in the content not expressly granted herein are reserved. No rights of any kind are licensed or assigned or shall otherwise pass to persons accessing this information.

This Publication shall not be for resale in whole or in part.

Contents

- General Information 1**
 - Safety1**
 - Inspecting the Equipment2**
 - Storing the Equipment Before Installation2**
 - Moving the Equipment2**
 - Moving the equipment to its final location 2
 - Model Identification3**
 - Component Identification.....4**
 - Install kit inventory 4
 - Exterior components 5
 - Interior components (front) 6
 - Interior components (rear) 7
 - Electrical panel 8
 - Main controller board 9
 - Piping Diagrams10**
 - Connections11**
 - Pre-Installation12**
 - Room preparation 12
 - Air distribution 12
 - Incoming power supply requirements 13
 - Service access 13
 - Dimensions and Weight14**
 - Dimensions 14
 - Weight 14
 - Piping and Power Access Locations15**
 - Top piping and power access locations (top view) 15
 - Bottom piping and power access locations (bottom view) 16

Installation..... 17

Joining the Equipment to Enclosures 17

Joining to NetShelter™ SX enclosures 17

Joining to NetShelter VX and VS enclosures 17

Removing the Doors and Panels..... 18

Removing the front and rear doors 18

Removing the side panel 19

Installing the side panel 19

Removing the electrical panel cover 20

Leveling the Equipment..... 21

Mechanical Connections 22

Top water piping 22

Bottom water piping 23

Humidifier 24

Condensate pump 25

Leak sensor 27

Filling and Purging the Unit..... 28

Chiller..... 29

InRow RP requirements 29

Electrical Connections..... 30

User interface connectors 31

Description of user interface connectors 32

Rack temperature sensors 34

Water outlet temperature sensors 35

Communication connections 36

Network port 38

Power Connections 39

Wiring configurations 39

Top routing 39

Bottom routing 40

Strain relief (ACRP502 only) 40

Voltage selection 41

General Information

Safety

Read and adhere to the following important safety considerations when working with this cooling unit.

⚠ DANGER
HAZARD OF ELECTRIC SHOCK • Do not wear jewelry when working near energized components. • Before performing and service, properly de-energize and remove access to the equipment (Lockout), Physically label the equipment as intentionally out of service. Failure to follow these instructions can result in death or serious injury.
⚠ WARNING
HAZARD FROM MOVING PARTS Keep hands, clothing, and jewelry away from moving parts. Check the equipment for foreign objects before closing the doors and starting the equipment. Failure to follow these instructions can result in death, serious injury, or equipment damage.
⚠ WARNING
DAMAGE TO EQUIPMENT OR PERSONNEL The equipment is heavy. For safety purposes, adequate personnel must be present when moving this equipment. Failure to follow these instructions can result in death, serious injury, or equipment damage.
⚠ CAUTION
HAZARD TO EQUIPMENT OR PERSONNEL All work must be performed by American Power Conversion (APC™) by Schnieder Electric authorized personnel. Failure to follow these instructions can result in death, serious injury, or equipment damage.

Inspecting the Equipment

Your APC InRow RP air conditioner has been tested and inspected for quality assurance before shipment from APC. Carefully inspect both the exterior and interior of the equipment immediately upon receipt to ensure that the equipment has not been damaged during transit.

Verify that all parts ordered were received as specified and that the equipment is the correct type, size and voltage.

Filing a claim. If damage is identified on receipt of the equipment, note the damage on the bill of lading and file a damage claim with the shipping company. Contact APC Worldwide Customer Support at one of the numbers listed on the back page of this manual for information on how to file a claim with the shipping company. The shipping claim must be filed at the receiving end of the delivery.



Note: In case of shipping damage, do not operate the equipment. Keep all packaging for inspection by the shipping company.

Storing the Equipment Before Installation

If the equipment will not be installed immediately, store it in a safe place, protected from the weather.

⚠ CAUTION
EQUIPMENT DAMAGE
Leaving the equipment uncovered and exposed to possible damage from the environment will void factory warranty.
Failure to follow these instructions can result in equipment damage.

Moving the Equipment

Moving the equipment to its final location

The recommended tools for moving the equipment **while it is still on the pallet** include the following:

Pallet jack Forklift






Note: The equipment can be rolled to its final location using its casters if the floor is smooth and clean.

Model Identification


The model number can be found on the outside of the shipping crate and on the nameplate located inside the unit as shown. Use the table below to verify that the unit is the correct size and voltage.

Model	Configuration	Voltage	Reheat	Humidifier	Air Pattern
ACRP500	Chilled water	200-240/3~/50-60 Hz	Electric	Steam canister (replaceable)	Back to front
ACRP501	Chilled water	460-480/3~/60 Hz	Electric	Steam canister (replaceable)	Back to front
ACRP502	Chilled water	380-415/3~/50-60 Hz	Electric	Steam canister (replaceable)	Back to front

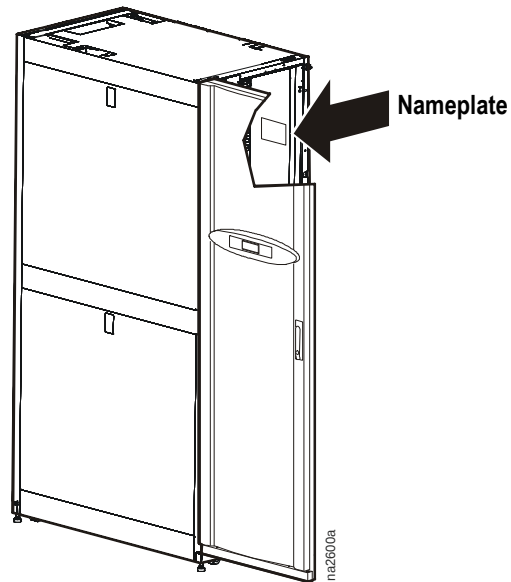

Component Identification

Install kit inventory

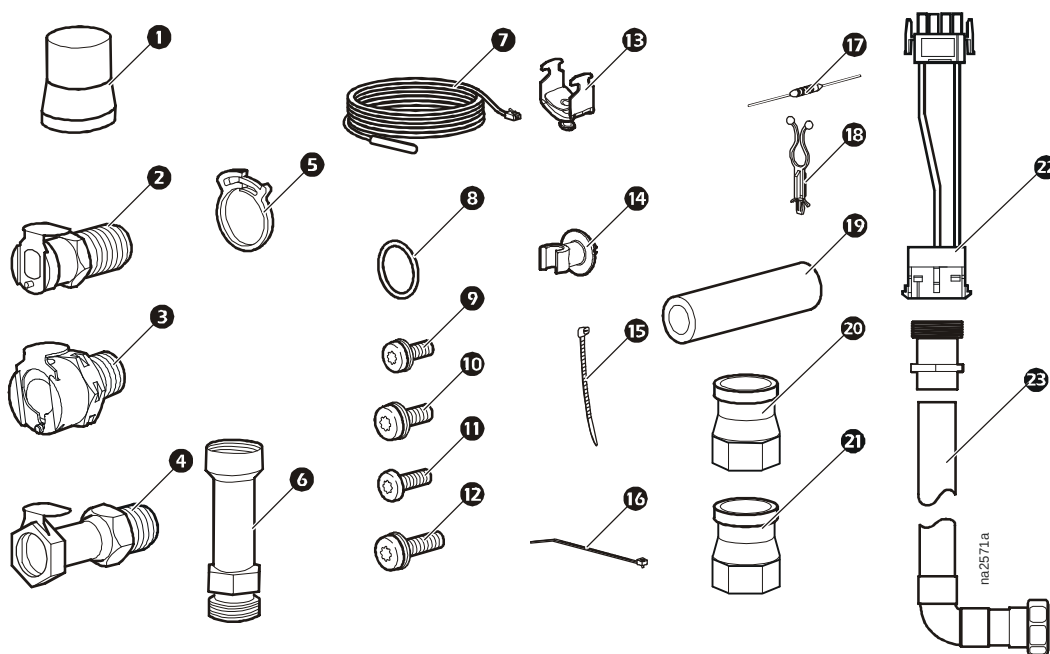


Item	Description	Quantity	Item	Description	Quantity
1	Union end	2	13	Strain relief, metal (ACRP502 only)	2
2	Humidifier PLC pipe thread, shutoff, 1/4 in NPT* (ACRP500 and ACRP501 only)	1	14	Wire clip	9
3	Humidifier PLC pipe thread, shutoff, 1/4 in BSPT** (identified with notches on the hex head portion) (ACRP500 and ACRP502 only)	1	15	Wire tie - 200 mm (8 in)	10
4	Condensate pump HFC35 pipe thread, shutoff, 3/8 in BSPT**	1	16	Wire tie - 390 mm (15.3 in)	3
5	Hose adapter clamp	2	17	Resistor, 150 Ohm	1
6	Extension adapter	2	18	Cable tie	10
7	Temperature sensor	3	19	Hose adapter	1
8	Ring seal	4	20	Reducer, 3/8 in to 1/2 in BSPT*	1
9	M5 x 10 mm Torx® screw with washer	5	21	Reducer, 3/8-in to 1/2-in NPT**	1
10	M6 x 12 mm Torx screw with washer	5	22	Voltage jumper	***
11	M6 x 10 mm self-tapping Torx screw	5	23	Up-connection adapter (top piping adapter)	1
12	M6 x 16 mm Torx screw with washer	5			

* British Standard Pipe Thread

** National Pipe Thread


*** Quantity varies depending on model number. See “Voltage selection” on page 41.

Exterior components

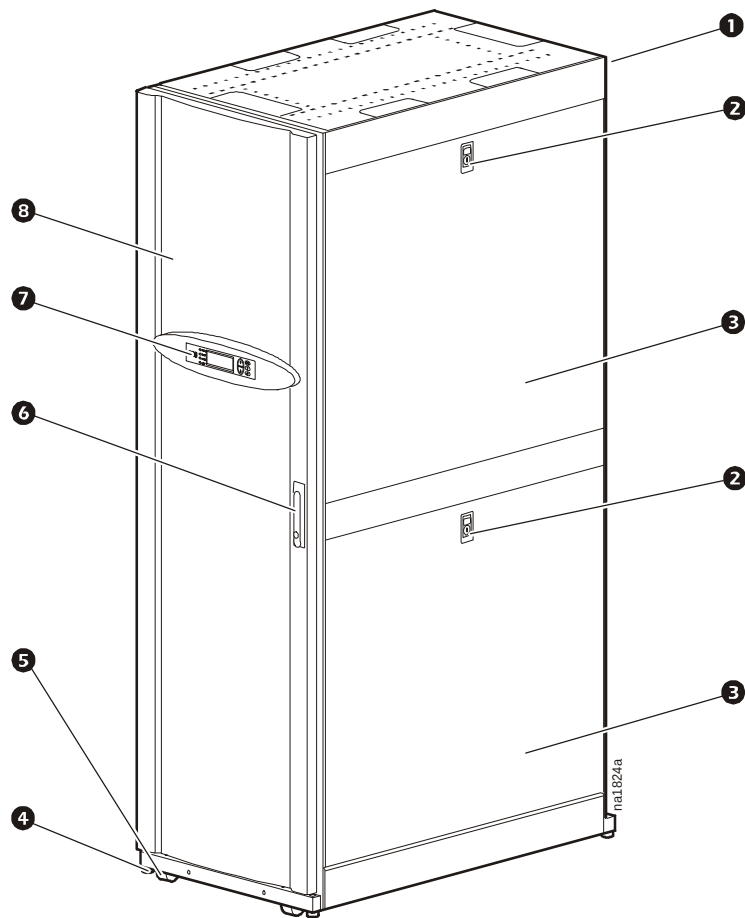


- | | |
|----------------------------|------------------------|
| ❶ Removable rear doors | ❺ Caster |
| ❷ Side panel lock | ❻ Door handle and lock |
| ❸ Removable side panel | ❼ Display interface |
| ❹ Adjustable leveling foot | ❽ Removable front door |

Interior components (front)

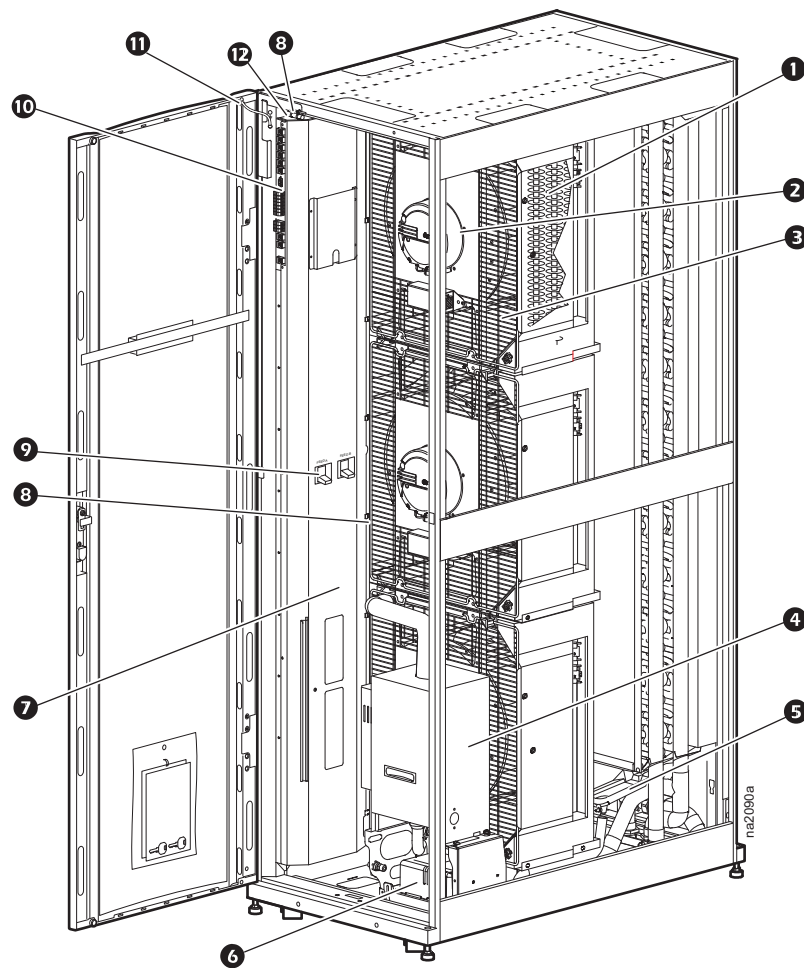


- | | |
|------------------------|----------------------------------|
| ❶ Electrical heater | ❷ Electrical panel |
| ❷ Fan | ❸ Supply air temperature sensors |
| ❸ Fan guard | ❹ Main feed breakers |
| ❹ Humidifier | ❺ User interface connectors |
| ❺ Condensate drain pan | ❻ Ground wire |
| ❻ Condensate pump | ❼ Supply humidity sensor |

Interior components (rear)

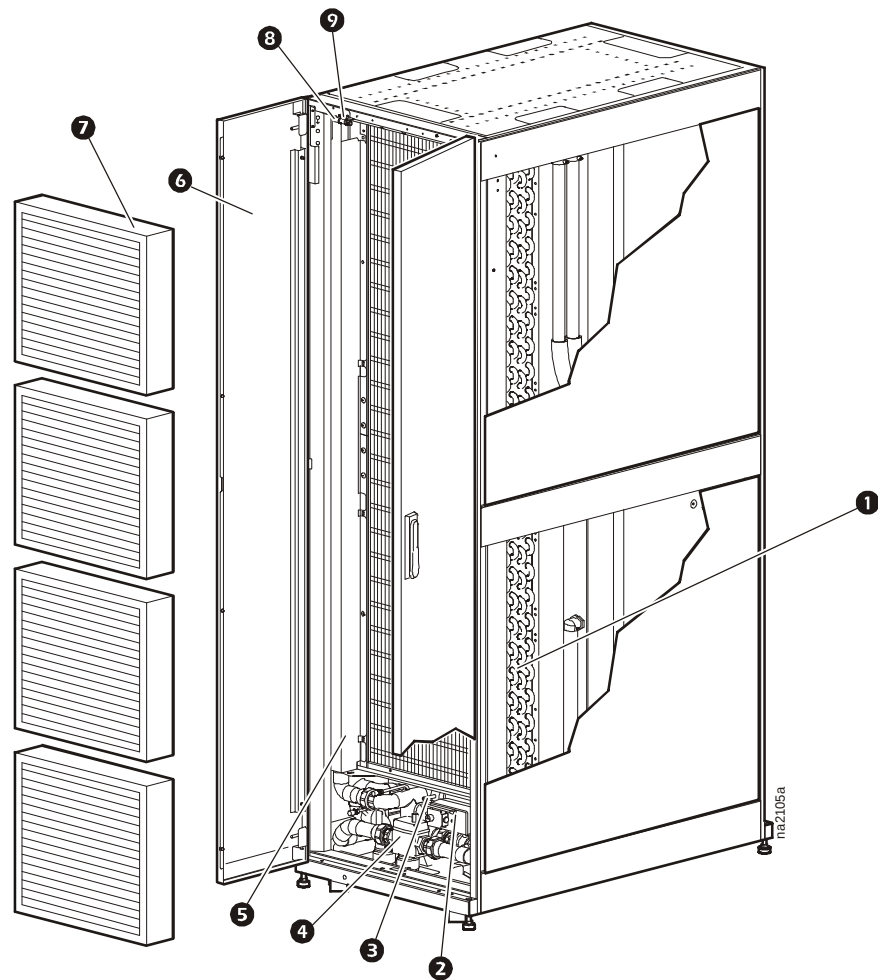


- | | |
|--------------------------------------|-----------------------------|
| ❶ Chilled water coil | ❸ Rear doors |
| ❷ Chilled water control actuator | ❹ Air filters |
| ❸ Chilled water three-way valve body | ❺ Return humidity sensor |
| ❹ Flow meter | ❻ Return temperature sensor |
| ❺ Pipe chase | |

Electrical panel

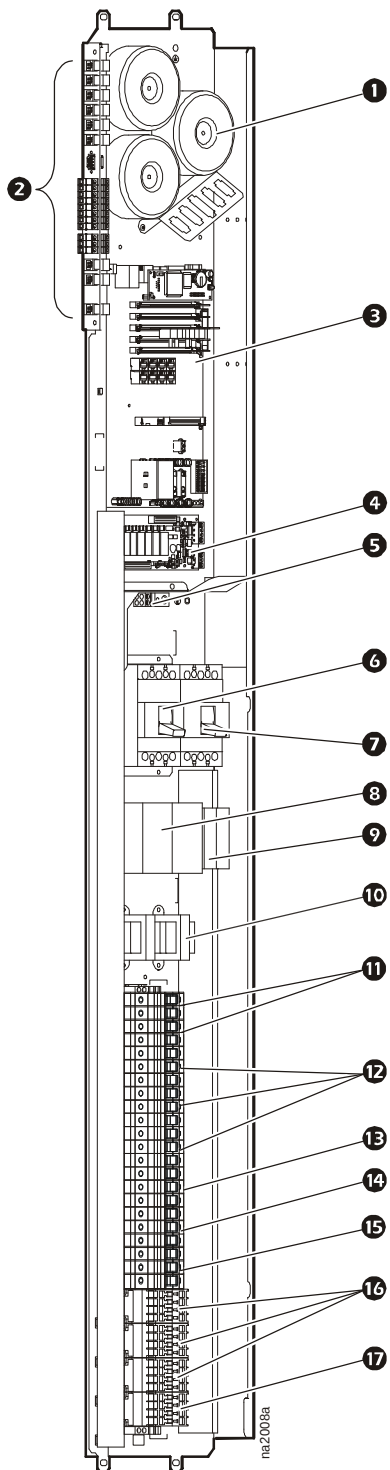


- ❶ Transformers
- ❷ User interface connectors
- ❸ Main controller board
- ❹ Relay board
- ❺ Ground lug
- ❻ Main circuit breaker — power feed A
- ❼ Main circuit breaker — power feed B
- ❽ Automatic transfer switch (ATS) contactors
- ❾ ATS timers
- ❿ ATS transformer (ACRP501 only)
- ⓫ ATS timer circuit breakers
- ⓬ Fan circuit breakers
- ⓭ Controller circuit breaker
- ⓮ Humidifier circuit breaker
- ⓯ Heater circuit breaker
- ⓰ Heater contactors
- ⓱ Humidifier contactor

Main controller board

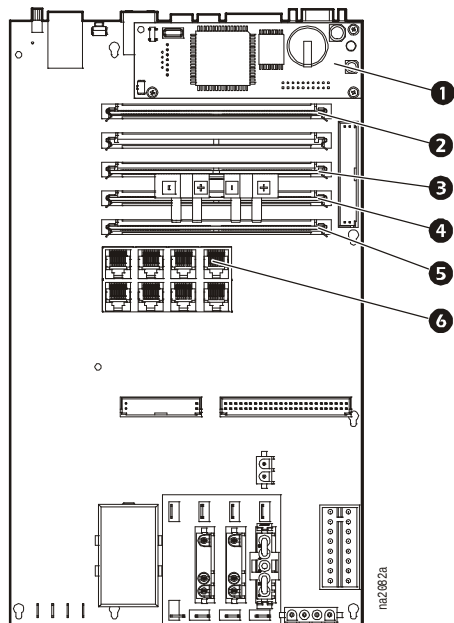

- ❶ Network Management Card
- ❷ CRAC controller single inline memory module (SIMM)
- ❸ Differential Pressure SIMM
- ❹ Internal RS485 SIMM
- ❺ OPTO-isolated Input SIMM
- ❻ J23 connector

Piping Diagrams

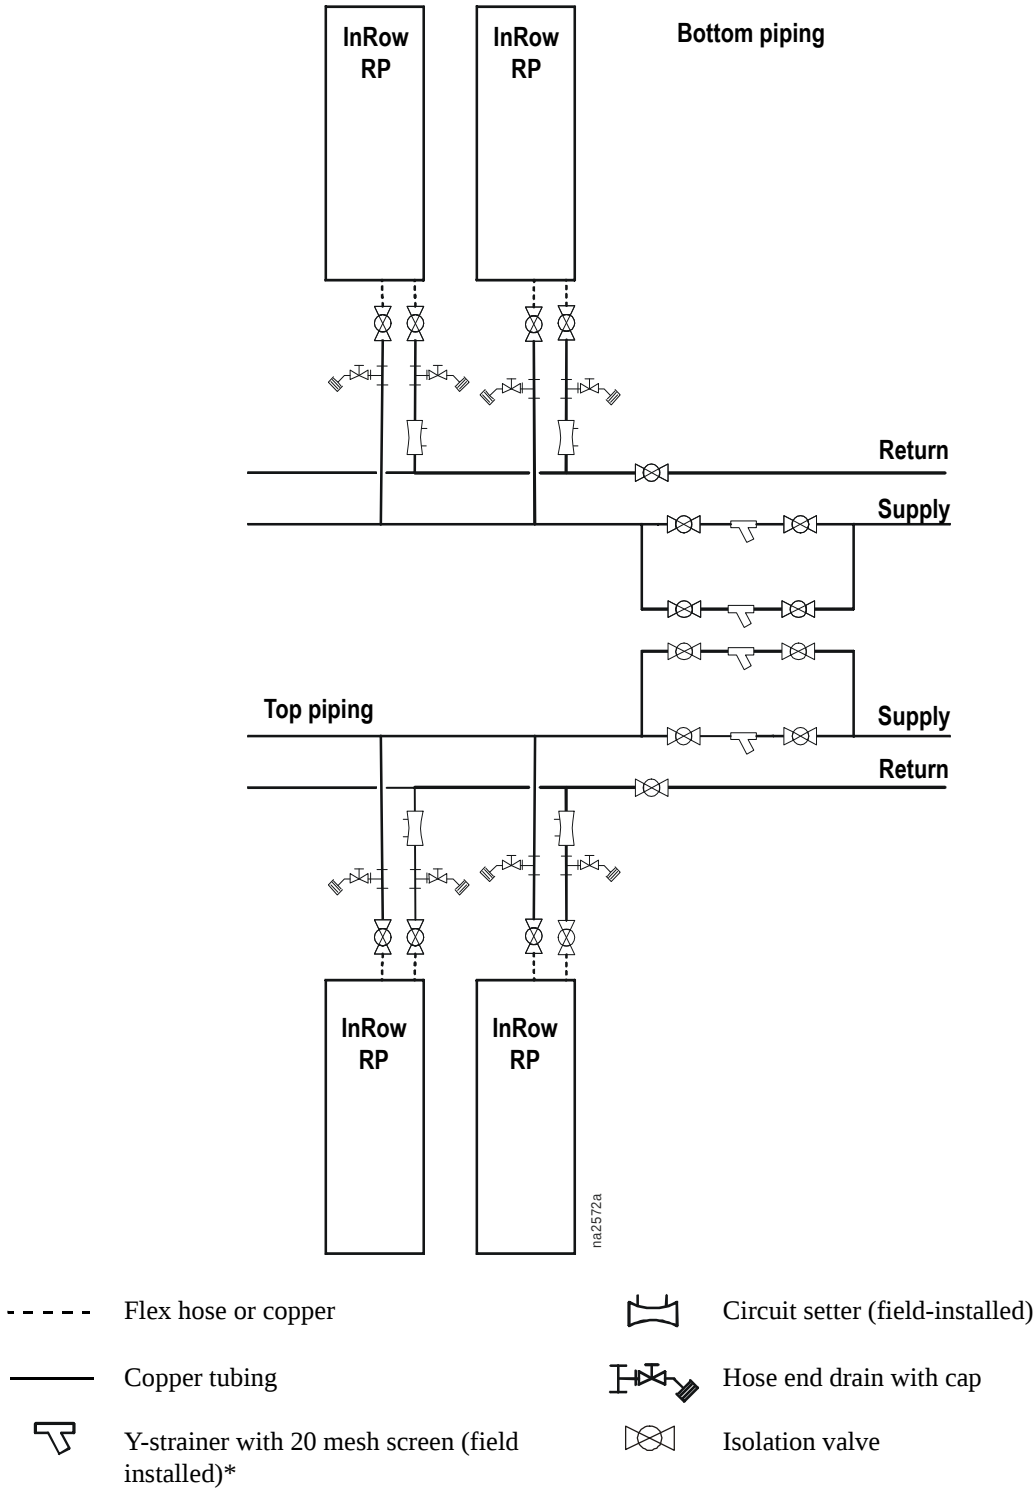

*Blow down may be installed on Y-strainer.

Note: Top or bottom entry can be chosen individually for each type of connection, i.e. power, condensate drain, humidifier water supply, chilled water supply and chilled water return. Top piping configuration will have the same valves and strainers as bottom piping configuration.

Connections

All connections to and from the equipment can be made through either the top or the bottom of the equipment. All connections are made with connectors so no soldering, welding, or gluing is necessary. See the following tables for information about the sizes and types of connectors.

Power Connections for Power Feed A and Power Feed B

Model	Minimum Circuit Ampacity (MCA)	Maximum Overload Protection (MOP)	Full Load Amperes (FLA)	Rated Load Amperes (RLA)
ACRP500	46.8	50	-	-
ACRP501	24.8	30	-	-
ACRP502*	-	-	24**	-

*Consult local and national codes for wire size, conduit requirements and overload protection.

**Local or national codes may require the installation of external disconnects. Two disconnects would be required and must be rated properly for equipment

Piping Connections	Type	ACRP500	ACRP501	ACRP502
Chilled water supply	Union*	1 1/2 in NPSM	1 1/2 in NPSM	1 1/2 in NPSM
Chilled water return	Union*	1 1/2 in NPSM	1 1/2 in NPSM	1 1/2 in NPSM
Humidifier water supply	Quick coupling	1/4 in NPT or BSPT	1/4 in NPT	1/4 in BSPT
Condensate drain	Quick coupling	1/2 in NPT or BSPT	1/2 in NPT or BSPT	1/2 in NPT or BSPT


* If ring seal is damaged, use a new seal (supplied) to prevent leakage. Torque union to 20 Nm (15 lb ft)

Communication Connections	Type	Minimum Wire Size	Maximum Wire Size	Torque
Rack temperature 1	RJ-45	-	-	-
Rack temperature 2	RJ-45	-	-	-
Rack temperature 3	RJ-45	-	-	-
A-Link IN	RJ-45	-	-	-
A-Link OUT	RJ-45	-	-	-
Network port	RJ-45	-	-	-
Console port	DB-9	-	-	-
Customer output, NC—Normally Closed	Screw connector	0.2 mm ² (AWG 24)	0.75 mm ² (AWG 18)	0.6 Nm
Customer output, COM—Common	Screw connector	0.2 mm ² (AWG 24)	0.75 mm ² (AWG 18)	0.6 Nm
Customer output, NO—Normally Open	Screw connector	0.2 mm ² (AWG 24)	0.75 mm ² (AWG 18)	0.6 Nm
Supply GND	Screw connector	0.2 mm ² (AWG 24)	0.75 mm ² (AWG 18)	0.6 Nm
Supply 12 VDC	Screw connector	0.2 mm ² (AWG 24)	0.75 mm ² (AWG 18)	0.6 Nm
Supply 24 VDC	Screw connector	0.2 mm ² (AWG 24)	0.75 mm ² (AWG 18)	0.6 Nm
Customer input +	Screw connector	0.2 mm ² (AWG 24)	0.75 mm ² (AWG 18)	0.6 Nm
Customer input -	Screw connector	0.2 mm ² (AWG 24)	0.75 mm ² (AWG 18)	0.6 Nm
Modbus D1	Screw connector	0.2 mm ² (AWG 24)	0.75 mm ² (AWG 18)	0.6 Nm
Modbus D0	Screw connector	0.2 mm ² (AWG 24)	0.75 mm ² (AWG 18)	0.6 Nm
Modbus GND	Screw connector	0.2 mm ² (AWG 24)	0.75 mm ² (AWG 18)	0.6 Nm
Temperature sensor (front)	RJ-45	-	-	-
Humidity sensor (front)	RJ-45	-	-	-
Display interface	RJ-45	-	-	-

Pre-Installation

Room preparation

During the design of the data center, consider ease of entry for the equipment, floor loading factors, and accessibility to piping and wiring. In addition, the room temperature and humidity combination should conform to the environmental operating envelope as defined in the following graphics.

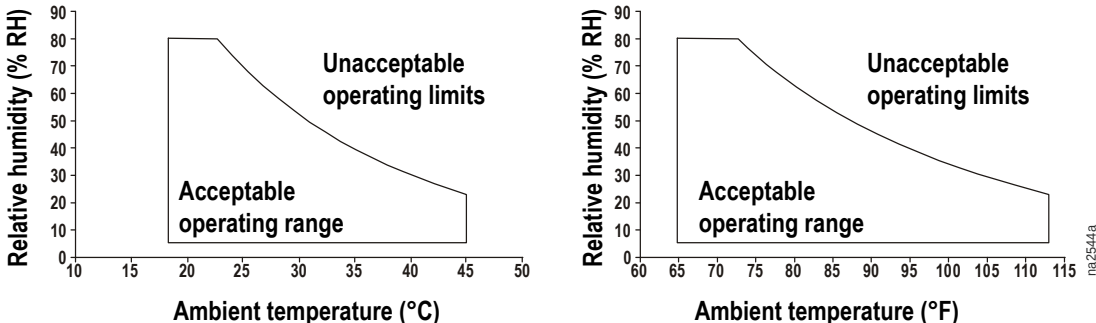

Seal the room with a vapor barrier to minimize moisture infiltration. Polyethylene film is recommended for ceiling and wall applications. Apply rubber- or plastic-based paints to concrete walls and floors.

Insulate the room to minimize the influence of exterior heat loads. Reduce fresh air to the minimum required by local and national codes and regulations. Fresh air imposes extreme load variation on the cooling equipment from summer to winter and causes increased system operating costs.

Air distribution


The equipment distributes air in a back-to-front discharge pattern, removing hot air from a hot aisle and discharging cooled air into a cold aisle.

 **Note:** The equipment is designed for free air discharge or for use with the Rack Air Containment System or Hot Aisle Containment System. The equipment is not intended to be connected to a duct system.

Incoming power supply requirements

Automatic Transfer Switch (ATS). The function of the ATS is to transfer load from feed A to feed B if the power is lost on feed A.

- Feed A (Primary Power Feed) supplies power to all functions in the equipment.
- Feed B (Redundant Power Feed) supplies power to all functions in the equipment.

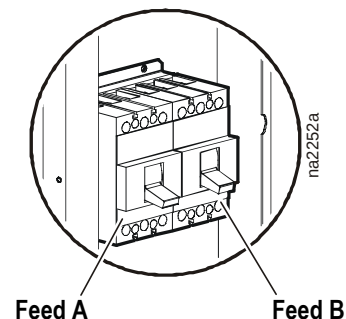

⚠ CAUTION	
ELECTRICAL HAZARD	
The equipment requires three-phase electrical service. Electrical service must conform to local and national electrical codes and regulations. The equipment must be grounded.	
Failure to follow these instructions can result in death, serious injury, or equipment damage.	


Service access

An area of minimum 900 mm (36 in) of clear floor space in front of and behind the equipment is recommended for service. All required normal maintenance can be performed from the front or back of the equipment.

An area of minimum 1200 mm (48 in) of clear floor space in front of or behind the equipment is recommended to roll the equipment out of a row.




Note: Check local and national codes and regulations for further service access requirements

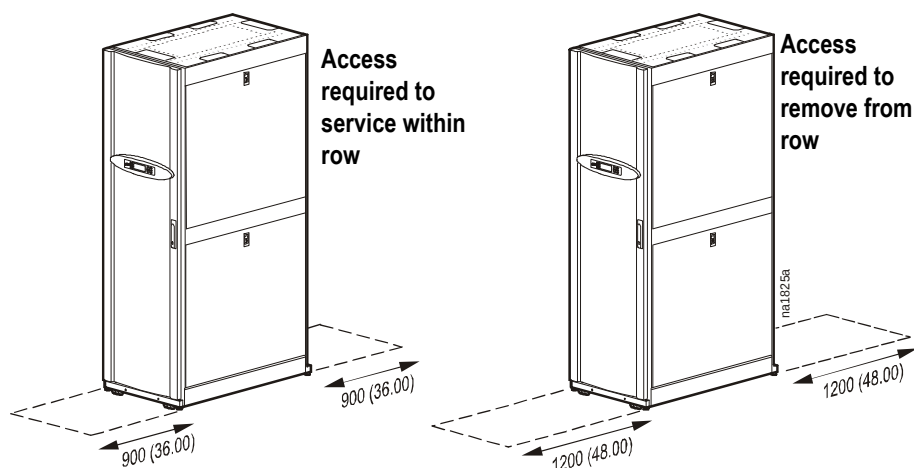

Dimensions are shown in mm (in).

Dimensions and Weight

Dimensions

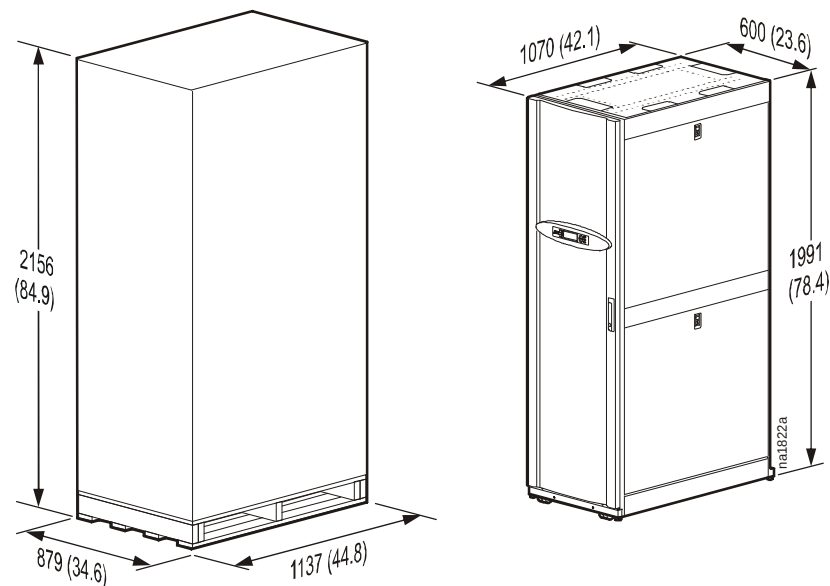


Weight

Model	Weight of equipment, packed	Weight of equipment, unpacked
ACRP500, ACRP501, ACRP502	462 kg (1,019 lb)	352 kg (776 lb)

Dimensions are shown in mm (in).

Piping and Power Access Locations


Top piping and power access locations (top view)

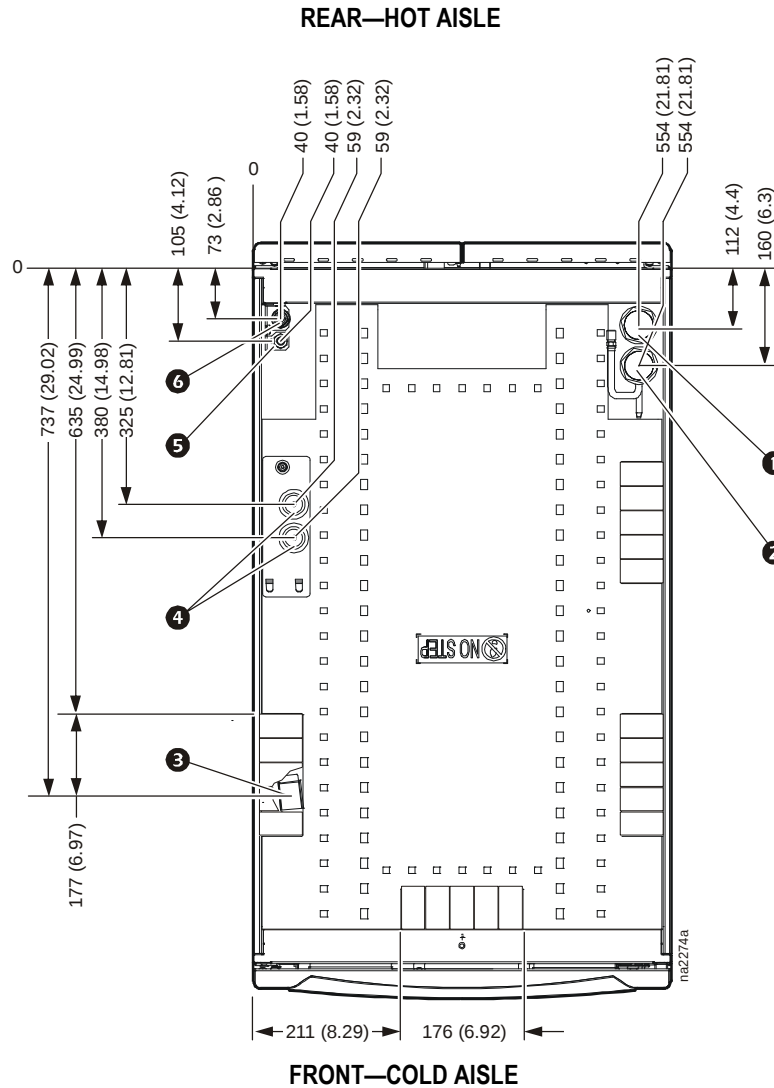

- ❶ Chilled water inlet
- ❷ Chilled water outlet
- ❸ Trough for communication cables
- ❹ Power connections—dual feed
- ❺ Humidifier supply
- ❻ Condensate drain

Dimensions are shown in mm (in).

Bottom piping and power access locations (bottom view)

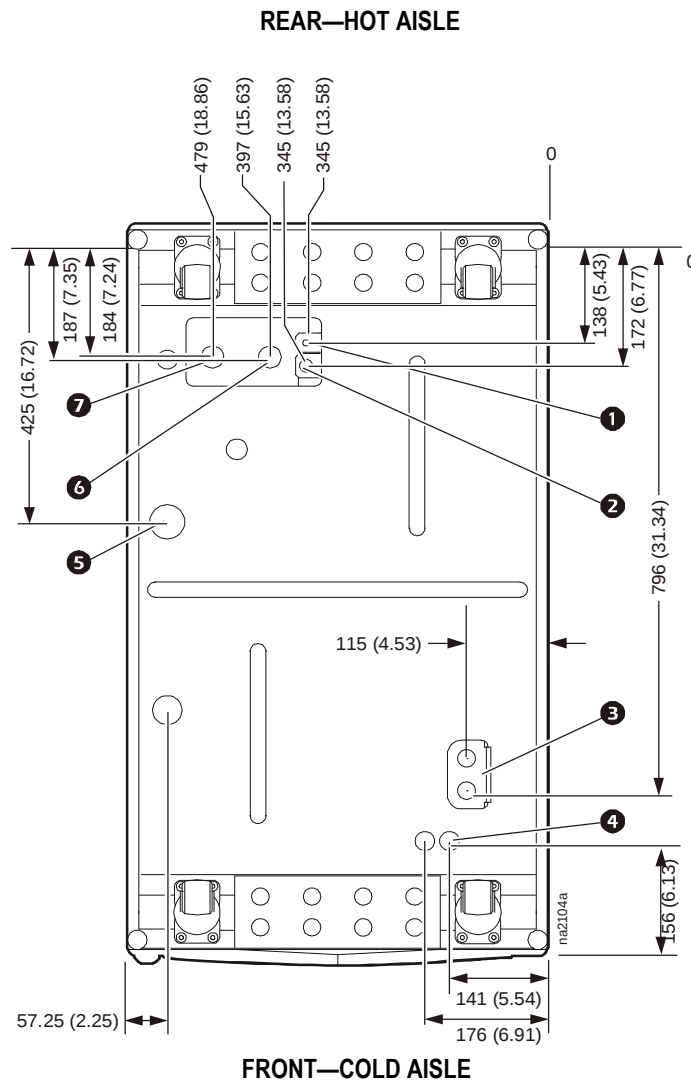

- ❶ Humidifier supply
- ❷ Condensate drain
- ❸ Power connections—dual feed
- ❹ Communication connections—27.80 mm (1.09 in)
- ❺ Condensate overflow
- ❻ Chilled water inlet
- ❼ Chilled water outlet

Dimensions are shown in mm (in).



Installation

Joining the Equipment to Enclosures

Joining to NetShelter™ SX enclosures


The equipment comes with four joining brackets (two for the front and two for the rear).

1. Remove the front and rear doors. See “Removing the front and rear doors” on page 18.
2. Locate the four joining brackets. Rotate each bracket ninety degrees toward the adjoining enclosure so the bracket is parallel to the floor and install using the screws provided with the enclosure.

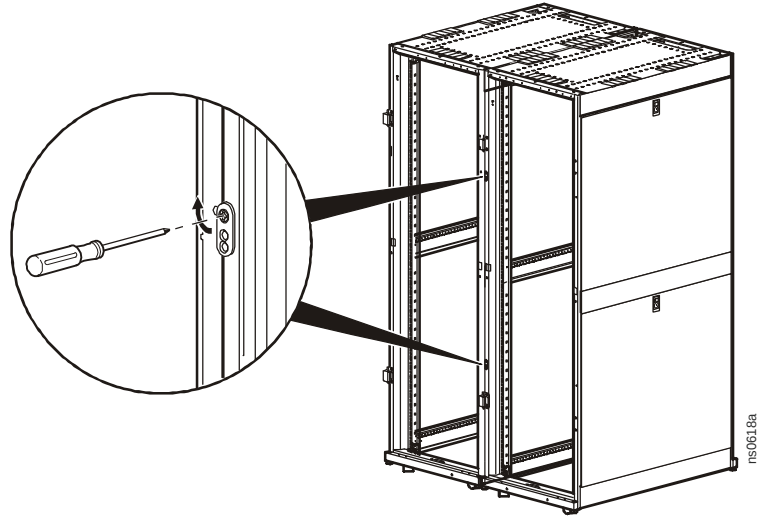

For more information, see the *Unpacking, Installation, and Customization* manual for the NetShelter SX Enclosure.

Joining to NetShelter VX and VS enclosures




For information on joining the equipment to NetShelter VX and VS enclosures, see the installation sheet *NetShelter™ Enclosure Accessories Joining Kits SX to VX/VS—AR7601, AR7602*.

Removing the Doors and Panels

Removing the front and rear doors

1. Unlock and open the door 90 degrees.
2. Unplug the ground wires and display connection cables.
3. Lift the door up and off the hinges.

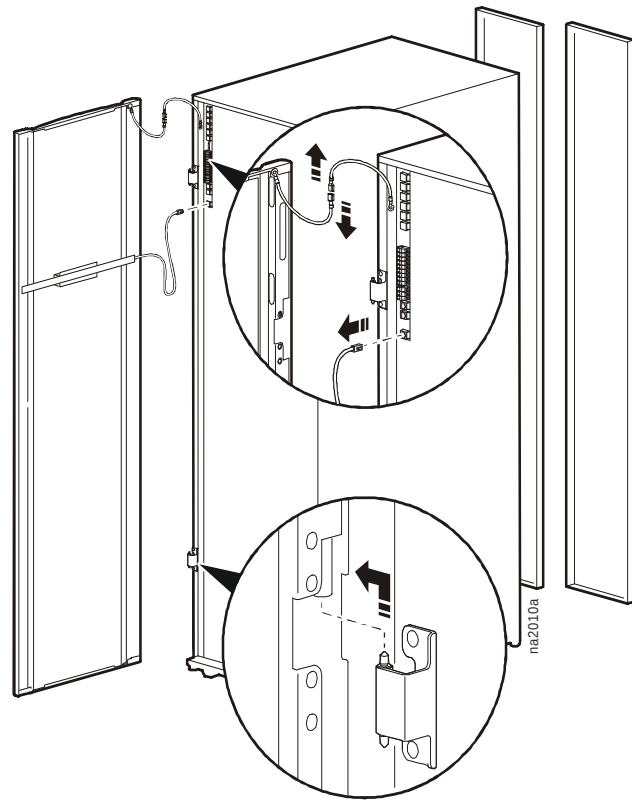


⚠ CAUTION

ELECTRICAL HAZARD


When re-installing doors, reconnect the ground wires and the display interface connection cable.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Removing the side panel

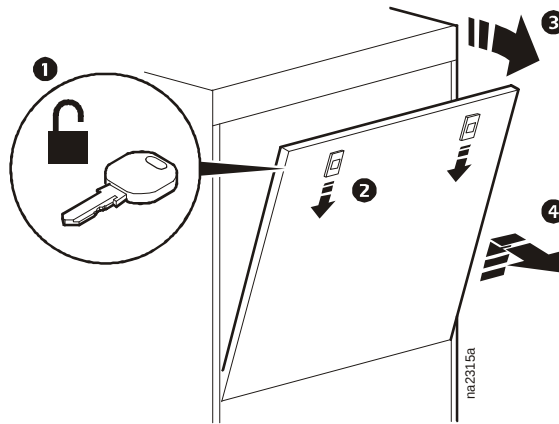

Installing the side panel

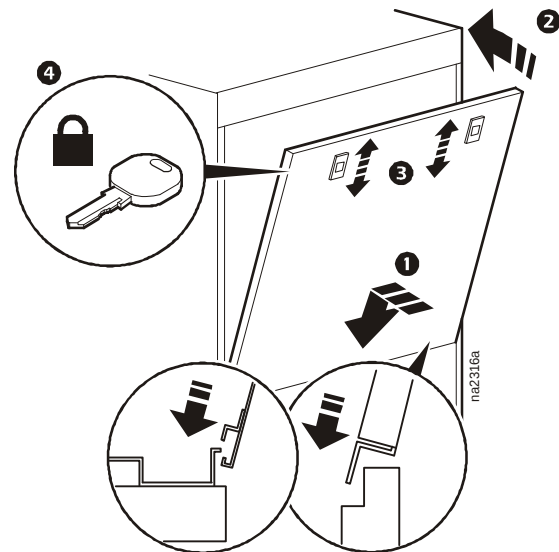

Removing the electrical panel cover

Remove the electrical panel cover to install the main power cable.


1. Remove the five M4 screws securing the cover.
2. Remove the cover by opening it and sliding it toward the front of the equipment.

⚠ CAUTION

ELECTRICAL HAZARD

Ensure all wiring is not energized before routing cables into this equipment. Only qualified service and maintenance personnel should work on this equipment.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

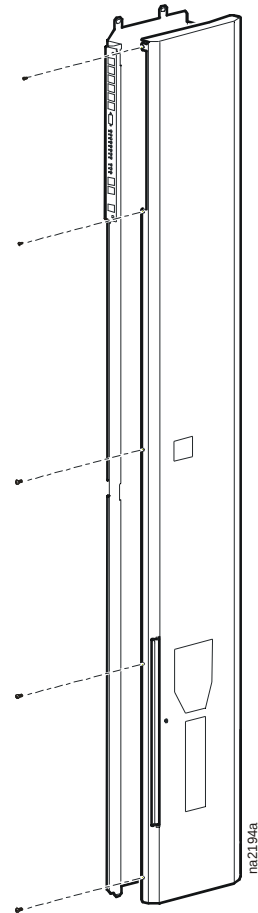

1022194a

Leveling the Equipment




Note: The leveling feet at the corners of the equipment provide a stable base if the floor is uneven, but they cannot compensate for a badly sloped surface.

1. Remove the front and rear doors. See “Removing the front and rear doors” on page 18.



Note: Before removing the front door, unplug the ground wires and any other wire connections that may interfere with the removal of the doors.

2. For each leveling foot, insert a Phillips PH2 or slotted screwdriver into the screw above the leveling foot. Turn the screw clockwise to extend the leveling foot until it makes firm contact with the floor.

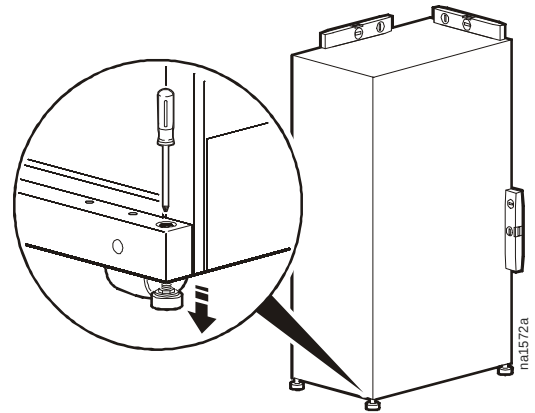

3. Reinstall the front and rear doors.

⚠ CAUTION

SHOCK HAZARD

After reinstalling the front door, reconnect the ground wire and other wire connections.

Failure to follow these instructions can result in injury or equipment damage.



Note: Use a 13-mm open-end wrench to level the equipment without removing the doors.

Mechanical Connections


Top water piping




Note: The top chilled water supply pipe is supplied with the equipment and must be installed on-site.

Note: You may need to remove the top panel from the equipment to gain access to the water connections.

1. Remove the air filters.
2. Loosen the two screws holding the rear condensate drain pan bracket **1** and remove the bracket.
3. Loosen the two screws holding the air filter bracket **2** located on the left side of the unit and remove the bracket.
4. Remove the insulation cap from the union (not shown).
5. From both supply and return connections, remove the union nuts **5** and save for reuse. Remove and discard the union end blank plates **4** and the gaskets **3**.
6. Position the insulated chilled water supply pipe **6** in the equipment. Mount a new gasket **3** and connect the pipe to the union. Tighten the union to 20 Nm (14.8 ft-lb).

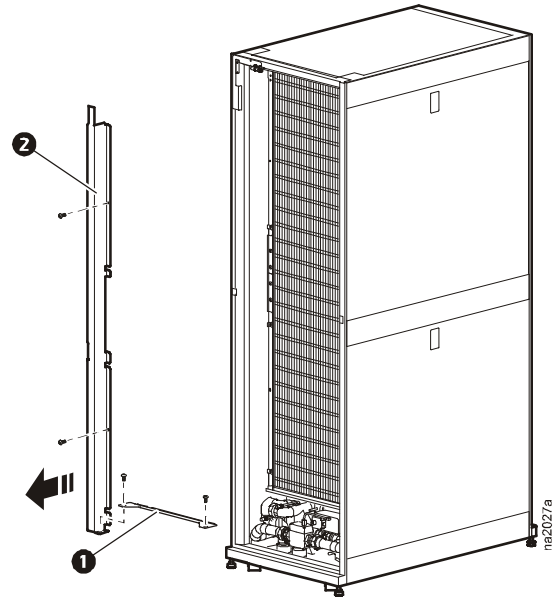

7. Insulate the joint with the provided insulation (not shown).
8. Connect the water supply pipe **6** to the field-installed pipe **10** using a gasket **7**, union end **8**, and union nut **9**.
9. Connect the cold water return fitting to the field-installed pipe **10** using two gaskets **7**, union end **8**, union nut **9** and extension adapter **11**.
10. Reinstall air filter bracket **2**.
11. Reinstall the rear condensate drain pan bracket **1** and the air filters.
12. Reinstall the top panel, if removed.

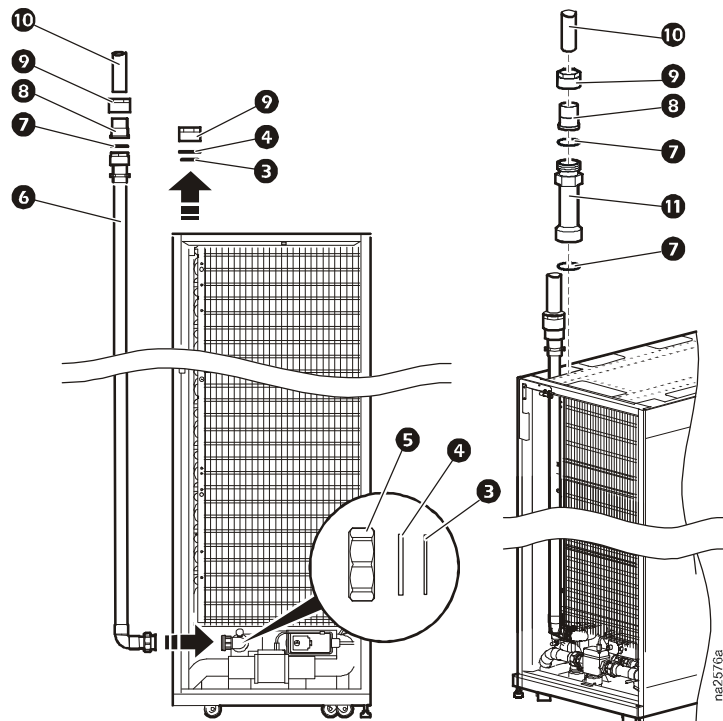



Bottom water piping

1. Remove the insulation cap from the union ❶ (not shown).
2. Remove the union nut ❸, and save it for reuse. Remove and discard the union end blank plate ❷, and the ring seal ❶.



Note: New items are provided with the equipment.


3. Install the union nuts ❸ to field-supplied tubing ❹.
4. Install new ring seals ❶, extension adapters ❷, and insertion adapters ❸, as shown. Connect the pipe to the union. Tighten the union to 20 Nm (14.8 ft-lb).

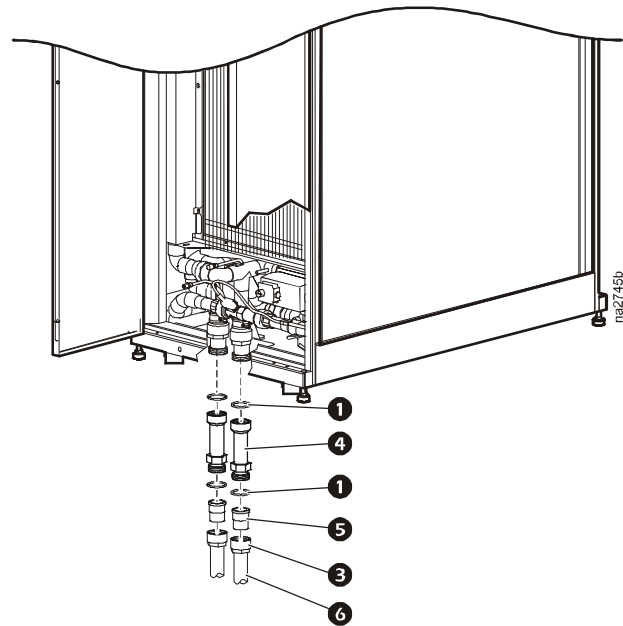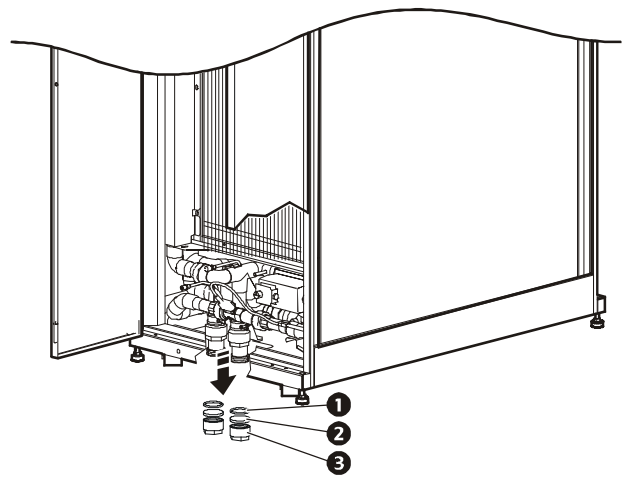

Humidifier

The humidifier water supply line is routed to the unit in flexible tubing (or alternative tubing approved by local building codes) that will allow the humidifier water supply line connector to be moved approximately 25 mm (1 in) away from the equipment. This facilitates removing the equipment from a row.



A factory-installed quick-connector for connecting the tubing to the equipment is supplied. The quick connector has a male 1/4-in NPT or male-1/4 in BSPT to connect to a compression fitting. The quick-connector has a shut-off function, so no separate shut-off valve is necessary.

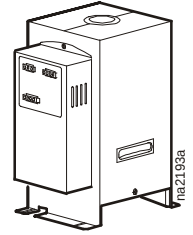

The humidifier water supply line can be connected through either the top or the bottom of the equipment as shown. Male quick-connectors are positioned in both the top and the bottom of the equipment.

Water pressure should be between 100 and 800 kPa (15 and 115 psi) for proper humidifier operation.

Dirty water must be filtered before it is supplied to the humidifier. Water temperature must be between 1°C and 40°C (34°F and 104°F). Do not use softened, de-mineralized, or de-ionized water.

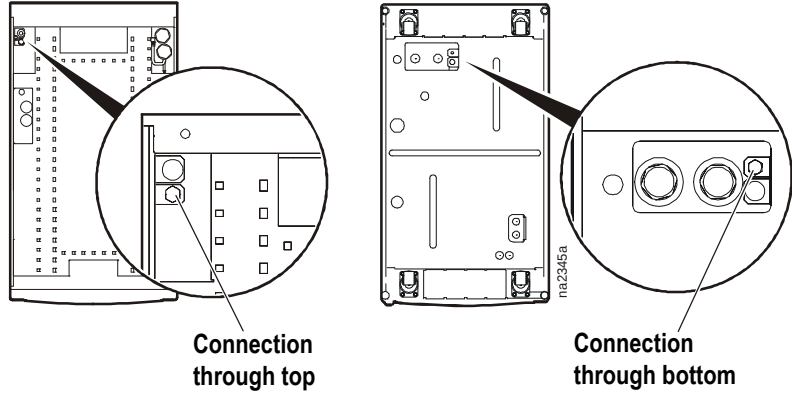

See the manual included with the humidifier for more information about water quality, mineral content, hardness, and minimum/maximum levels for conductivity.




Note: It is recommended that a solenoid water valve be installed in the humidifier supply line, connected to a leak detector.

Note: Perform all piping in accordance with applicable industry guidelines as well as local and national codes and regulations.


Connect the fittings to the humidifier water supply line as shown, then connect the water supply line quick-connector to the top or bottom humidifier input.

- ① Flexible tubing (field supplied and installed)
- ② Compression fitting (field supplied and installed)
- ③ Straight reduction (supplied)
- ④ Quick-connector (supplied)

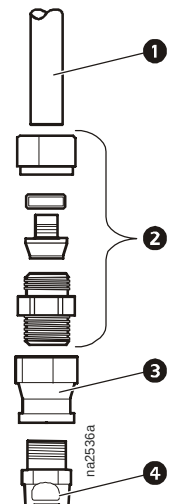


Condensate pump

The pump is factory-wired and piped internally to the condensate drain pan and humidifier outlet. The pump can move liquid a maximum of 18 m (60 ft), which may include a maximum lift of 3.5 m (11.5 ft) at a flow rate of 87 l/hr (23 gph). For example, if your lift is 3 m (10 ft), you will have 15 m (50 ft) of usable run remaining. The pump uses an on-board condensate high level float switch wired into the equipment for alarm capabilities.

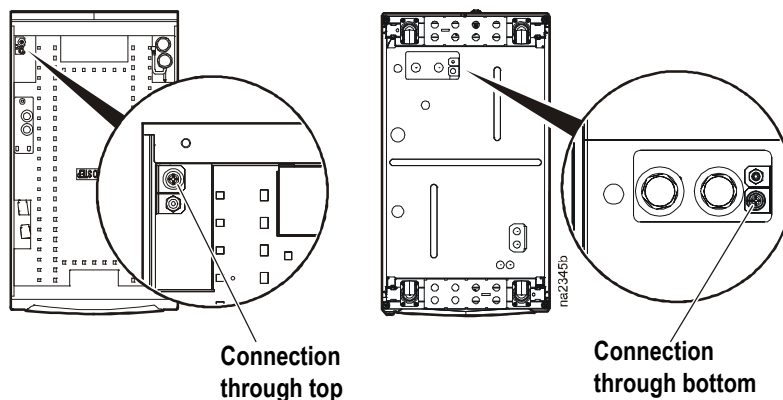

The condensate drain line can be connected through either the top or the bottom of the equipment using factory-installed male quick connectors and tubing approved by local building codes that will allow the drain line connector to be moved approximately 25 mm (1 in) away from the equipment. This facilitates removing the equipment from a row. Female quick connectors and reduction fittings are supplied with the equipment. Connect the fittings as shown, then connect the drain line quick connector to the top or bottom condensate pump output line.

- ❶ Tubing (field supplied and installed)
- ❷ 1/2-in male NPT or 1/2-in male BSPT fitting (field supplied and installed)
- ❸ Straight reduction (supplied)
- ❹ Quick connector (supplied)

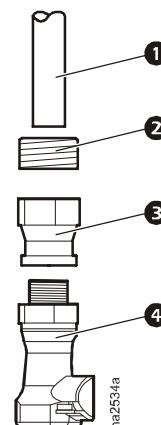

Note: Perform all piping in accordance with applicable industry guidelines as well as local and national codes and regulations.

⚠ CAUTION

UNPROTECTED OUTPUTS


- Failure to properly route the condensate pump drain line before operation could result in water damage.
- Do not route drain or supply lines above computer equipment, Uninterruptible Power Supply (UPS) units, Power Distribution Units (PDUs) or light fixtures.

Failure to follow these instructions can result in equipment damage.

Condensate overflow

⚠ CAUTION
WATER DAMAGE Failing to perform the following procedure may result in condensate pan overflow and possible damage to the data center. Failure to follow these instructions can result in equipment damage.


Connect the equipment condensate overflow line to an external drain using the fittings, as shown.

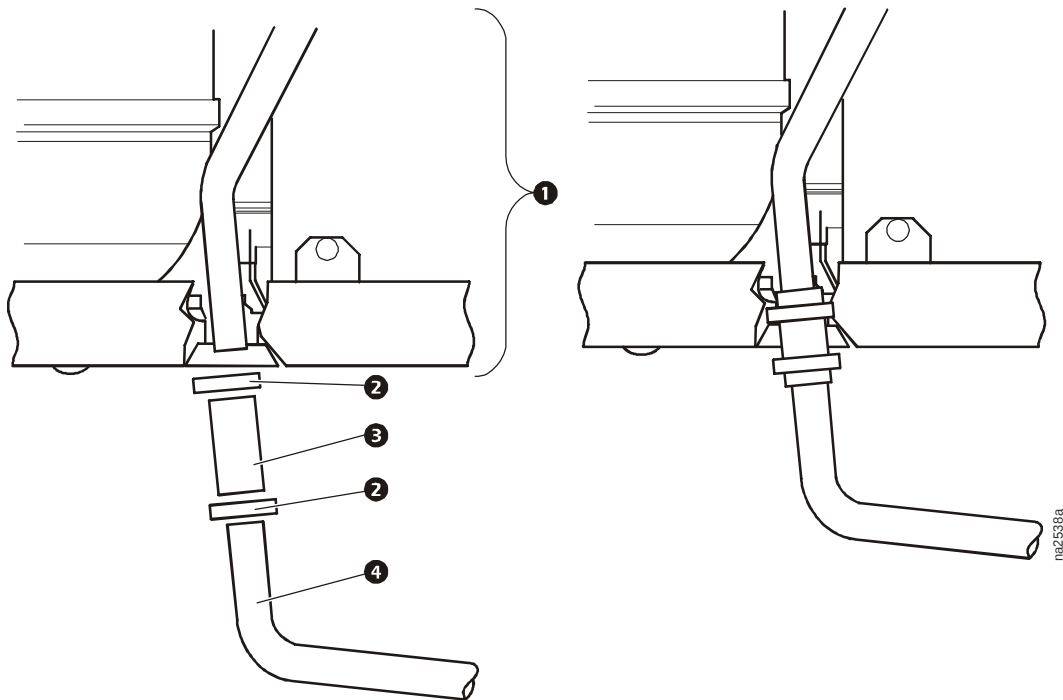


- ❶ InRow RP
- ❷ Hose adapter clamp (supplied)
- ❸ Hose adapter (supplied)
- ❹ 7/8-in copper tubing (field supplied and installed)

Leak sensor

Install up to four optional leak sensors (AP9325) as needed.

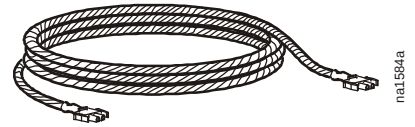

1. Connect the leak sensor to the unit using connector J32, which is located in the wire harness next to the pump assembly at the bottom of the unit.

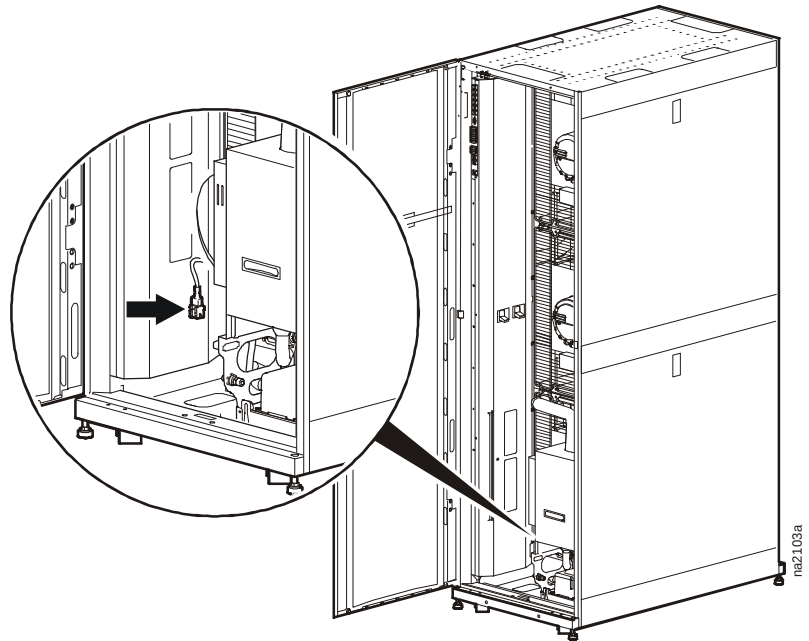


2. Position the leak sensor inside or outside the equipment.



Note: Install leak sensors on a clean surface, and do not allow them to touch metal that is in an air stream.

3. Route the leak sensor to the outside through either the bottom plate or the door.
4. Secure the leak sensor wire to surfaces using cable ties and cable tie holders (provided with the leak detector).

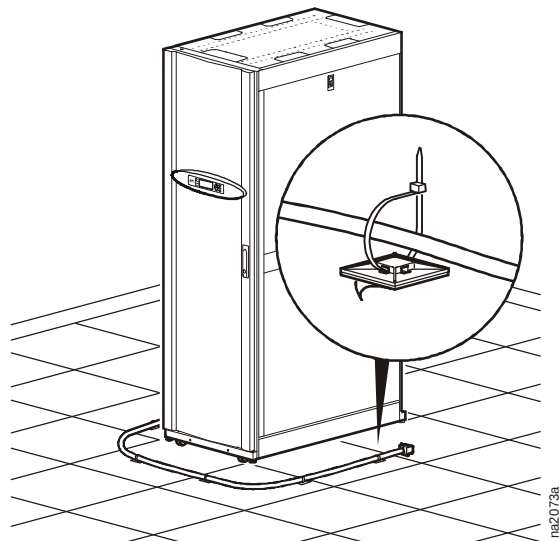


Filling and Purging the Unit

When the unit has been properly piped, begin the filling process (top piping configuration shown).

⚠ CAUTION
ELECTRICAL SHOCK
Ensure that all electrical connections are unplugged before you introduce water into the unit.
Failure to follow these instructions can result in injury and equipment damage.

1. Open the 2-way bypass shutoff valve by turning the handle 90° clockwise. Using a 2.5-mm hex key, turn the flow control actuator to the fully open position.
2. Remove the cap from the top coil vent and push the vent.
3. At the water supply, open the appropriate valves to begin letting water slowly into the unit.
4. Stop pushing the top coil vent when water begins slowly flowing out of the vent.
5. At the water supply:
 - a. Open all valves no greater than 113 l/m (30 GPM), and allow the water supply to reach the highest possible flow to the unit for 45 seconds.
 - b. Close the valves to a 3.8–11.4 l/m (1–3 GPM) flow for 60 seconds.
 - c. Open the valves to maximum flow for another 45 seconds.
 - d. Balance the system to provide the designed flow rate to all equipment.

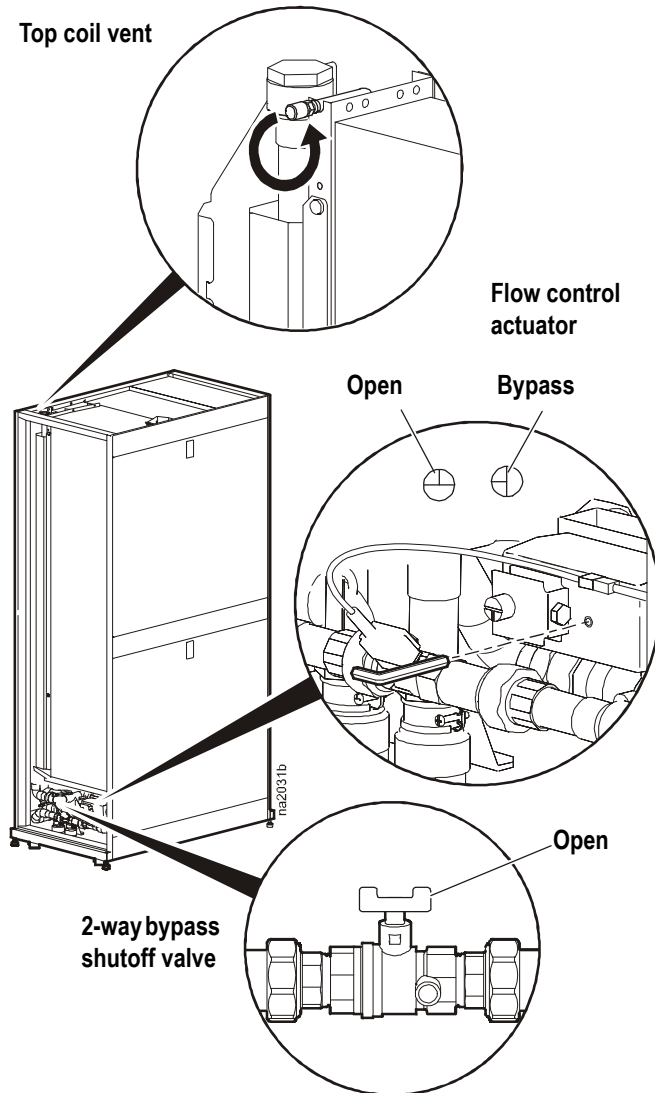


Chiller

Three types of chillers can be connected to the unit:

- APC size-matched chiller/thermal storage system
- Building chilled water system
- Existing dedicated chiller

InRow RP requirements

Entering water temperature	7.2–12.8°C (45–55°F)
Weight of unit fully flooded with chilled water	370 kg (816 lb)
Flow rate	1.2–2.5 l/s (19.0–39.6 GPM)



See the chiller installation, operation, and maintenance manuals for proper installation procedures.

Electrical Connections

The following electrical connections are required in the field:

- Controls (user interface, Network Management Card)
- Communication (A-Link, Building Management System)
- Power


All electrical connections must be in accordance with local and national codes and regulations.

See the nameplate of the unit for voltage and current requirements.

All low-voltage connections, including data and control connections, must be made with properly insulated wires. Low-voltage wiring must be insulated based on the wiring with which it is routed. Wiring does not require 300-V insulation if it is separated from line voltage wiring. However, it will need 600-V insulation if it is wired in the same cable tray as 480-Vac wiring.

⚠ WARNING
ELECTRICAL HAZARD Potentially dangerous and lethal voltages exist within this unit. More than one disconnect switch may be required to energize or de-energize this equipment. Observe all cautions and warnings. Failure to do so could result in serious injury or death. Only qualified service and maintenance personnel may work on this equipment. Failure to follow these instructions can result in death, serious injury, or equipment damage.
⚠ CAUTION
ELECTRICAL HAZARD • Three-phase (plus ground) electrical service is required. Electrical service must conform to local and national electrical codes and regulations. The equipment must be grounded. Check the nameplate for correct Full Load Current and Minimum Disconnect Size. • Before making any electrical connections, make sure that the unit is turned off and locked-out. Lockout/tagout represents safety procedures that remove access to a device and physically labels the device as intentionally out of service. Failure to follow these instructions can result in equipment damage.

User interface connectors

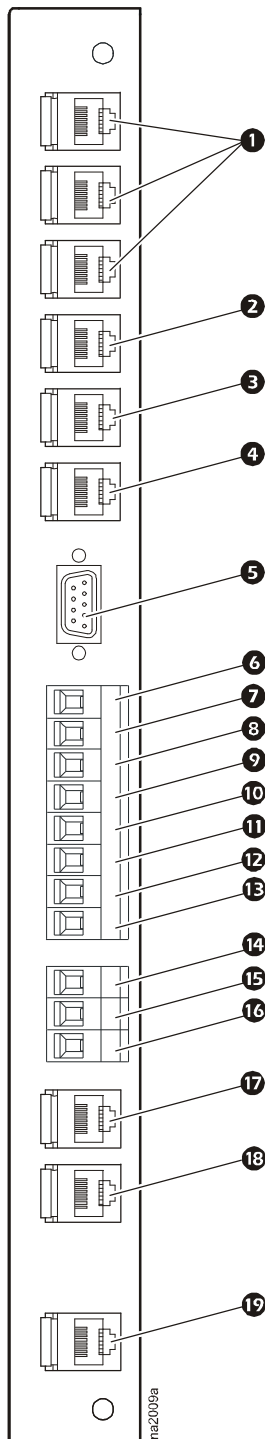

- ❶ Rack inlet temperature sensors 1, 2, 3
- ❷ A-Link IN
- ❸ A-Link OUT
- ❹ Network port
- ❺ Console port
- ❻ Customer output, NC (Normally Closed)
- ❼ Customer output, COM (Common)
- ❽ Customer output, NO (Normally Open)
- ❾ Supply GND (Ground)
- ❿ Supply 12 Vdc (current limit: 20 mA)
- ⓫ Supply 24 Vdc (current limit: 20 mA)
- ⓬ Customer input + (12–30 Vac/Vdc, 24 Vdc @ 11 mA)
- ⓭ Supply COM
- ⓮ Modbus D1
- ⓯ Modbus D0
- ⓰ Modbus GND
- ⓱ Supply air temperature sensor (front)
- ⓲ Supply air humidity sensor (front)
- ⓳ Display interface



Note: For a top installation, route control wiring through the wire channel located at the top left hand corner just above the user interface connectors.

For a bottom installation, route the control wiring to the customer access hole in the bottom of the equipment through wire clamps from the interface connectors. Then, route the wiring down along the electrical panel and secure with wire clamps.

Description of user interface connectors


	Item	Description
❶	Rack temperature sensors 1, 2, 3	Three temperature sensors which must be installed on the cold aisle side of the server racks. See “Rack temperature sensors” on page 34.
❷	A-Link IN	In and out connections for A-Link. The terminators supplied with the equipment must be plugged into the first A-link port and the final A-Link port for the system.
❸	A-Link OUT	
❹	Network port	10/100 Base-T Network port. Connects the equipment to the network; Status and Link LEDs indicate network traffic. • Status LED—blinks orange and green at startup; indicates the status of the network connection (solid green—IP address established; blinking green—attempting to obtain an IP address). • Link LED—blinks to indicate network traffic (green—operating at 10 mbps; orange—operating at 100 mbps).
❺	Console port	RS-232 communication port used for local service access to the equipment. Use configuration cable (APC part number 940-0103) to connect to this port.
❻	Customer output, Normally Closed (NC)	Customer-configurable output relay which can be activated for all types of alarms or critical alarms. The relay can be connected to external equipment using 30 Vac/dc, 2 A.
❼	Customer output, Common (COM)	
❽	Customer output, Normally Open (NO)	
❾	Supply GND	Can be used for customer input and output interface.
❿	Supply 12 Vdc	Can be used for customer input and output interface. Current limit is 20 mA.
⓫	Supply 24 Vdc	Can be used for customer input and output interface. Current limit is 20 mA.
⓬	Remote shutdown+	Used for remote shutdown of the InRow RP. Voltage is applied from the internal power supply or by using an external power supply.
⓭	Remote shutdown-	Ground connection point for remote shutdown supply source.

	Item	Description
14	Modbus D1 (RXTX+)	Connections for Building Management System. Wire a 150 Ohm terminator resistor (supplied) into the final InRow RP, between Modbus D0 and Modbus D1.
15	Modbus D0 (RXTX-)	
16	Modbus GND	
17	Supply air temperature sensor (front)	Temperature sensor installed on the front of the equipment.
18	Supply air humidity sensor (front)	Humidity sensor installed on the front of the equipment.
19	Display interface	Connection for the display interface installed on the front door of the equipment.

Rack temperature sensors


The rack temperature sensors control the unit airflow and ensure adequate supply of cooling air to the server racks in the data center.

The unit is supplied with three external rack temperature sensors. These sensors, along with wire clamps and wire clips, are included in the install kit supplied with the unit in a separate box.

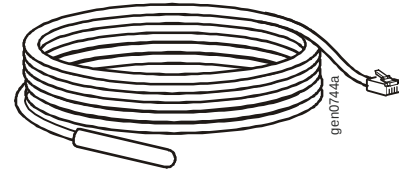

Installing the rack temperature sensors

1. Insert the rack temperature sensor connector in the temperature sensor port at the user interface.
See “User interface connectors” on page 31.
 - a. For a top installation, push the rack temperature sensor through the wire channel located at the top of the equipment in the left hand side just above the user interface connectors.
 - b. For a bottom installation, route the sensor through the wire clamps along the electrical panel and then push the sensor through the customer access hole in the bottom of the equipment.
2. Route the sensor through either the top or the bottom of the adjacent server rack.
3. Secure the temperature sensor cable to the front door of the adjacent server rack at multiple locations using the provided wire clips as shown.

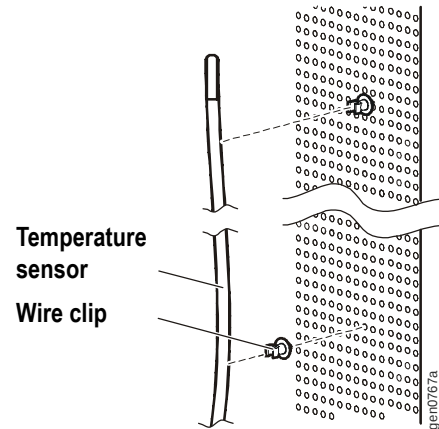

Note: Remote temperature sensors must be installed for proper operation.


The sensors must be installed where lack of sufficient cooling air is most likely. The optimum position of the rack temperature sensors will vary from installation to installation. Servers most likely to have insufficient or inadequately cooled cooling air due to the recirculation of hot air from the hot aisle include:

- a. Servers positioned at the top of a rack.
- b. Servers positioned at any height in the last rack at an open end of a row.
- c. Servers positioned behind flow-impairing obstacles such as building elements.
- d. Servers positioned in a bank of high-density racks.
- e. Servers positioned next to racks with Air Removal Units (ARU).
- f. Servers positioned very far from the equipment.
- g. Servers positioned very close to the equipment.

Water outlet temperature sensors

There are two water outlet temperature sensors, one for top connection and one for bottom connection. These sensors are wired to the main board on the electrical panel. See “Main controller board” on page 9.

The unit is delivered with top connection as the default configuration, i.e. the wire with a green wire tie is positioned in connector J23 (marked with green) on the main board. If the configuration is changed from top to bottom, switch the wire already positioned in the connector J23 with the wire labeled with a green and a white wire tie. This wire is part of the wire harness inside the electrical panel.

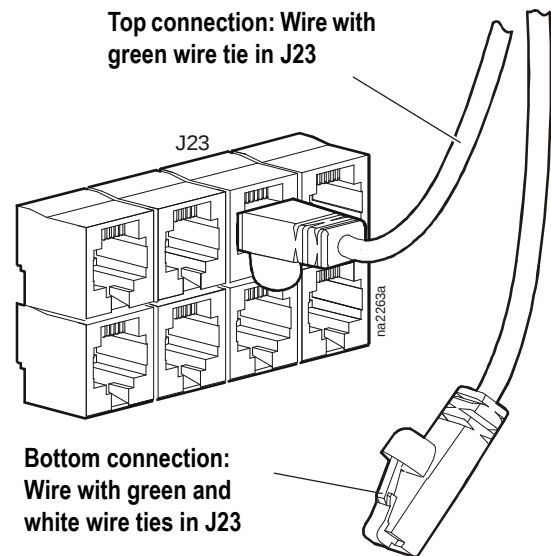


Communication connections

A-Link connections. The A-Link bus connection allows communication between equipment. Only one InRow RP needs to be defined through the display. The numbering of the other equipment (up to a maximum of twelve) will take place automatically.

To enable the equipment to work as a group, link the units using CAT-5 cables with RJ-45 connectors as shown. Terminators must be inserted into the A-Link ports at the first and last InRow RP.


The maximum wire length for the entire group may not exceed 305 m (1,000 ft).

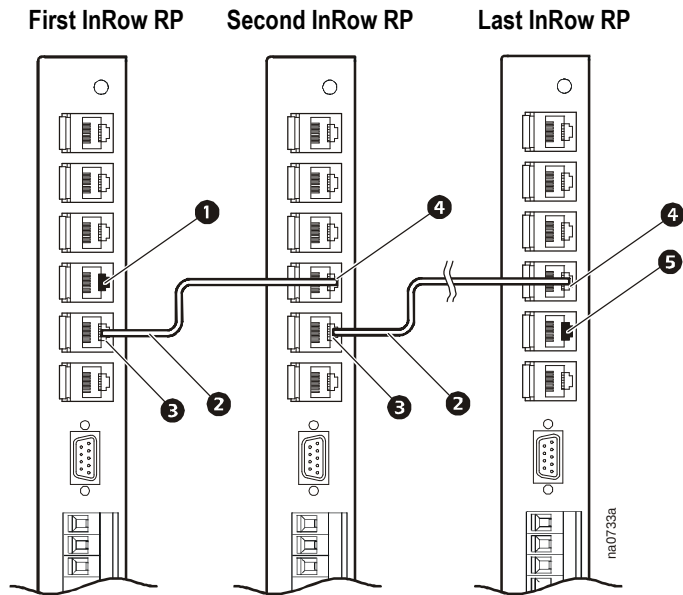


- ❶ A-Link IN (with provided RJ-45 terminator)
- ❷ InRow A-Link cable (CAT-5 ethernet cable)
- ❸ A-Link out
- ❹ A-Link IN
- ❺ A-Link OUT (with provided RJ-45 terminator)

Building Management System (BMS). The Modbus interface allows each InRow RP to communicate with the BMS. Use a three-wire cable to connect each InRow RP in turn. Wire a terminator resistor (150 Ohm, 1/4 W) into the Modbus master and the final InRow RP between Modbus D0 and Modbus D1. This terminator is included in the installation kit. See “Install kit inventory” on page 4.

Each InRow RP has a three-wire Modbus terminal on the user interface. A connector with screw terminals is used to allow wiring to be attached. See “User interface connectors” on page 31 for specific layout of the user interface.




For information on setup of Modbus parameters, see the *InRow RP Operation* manual.

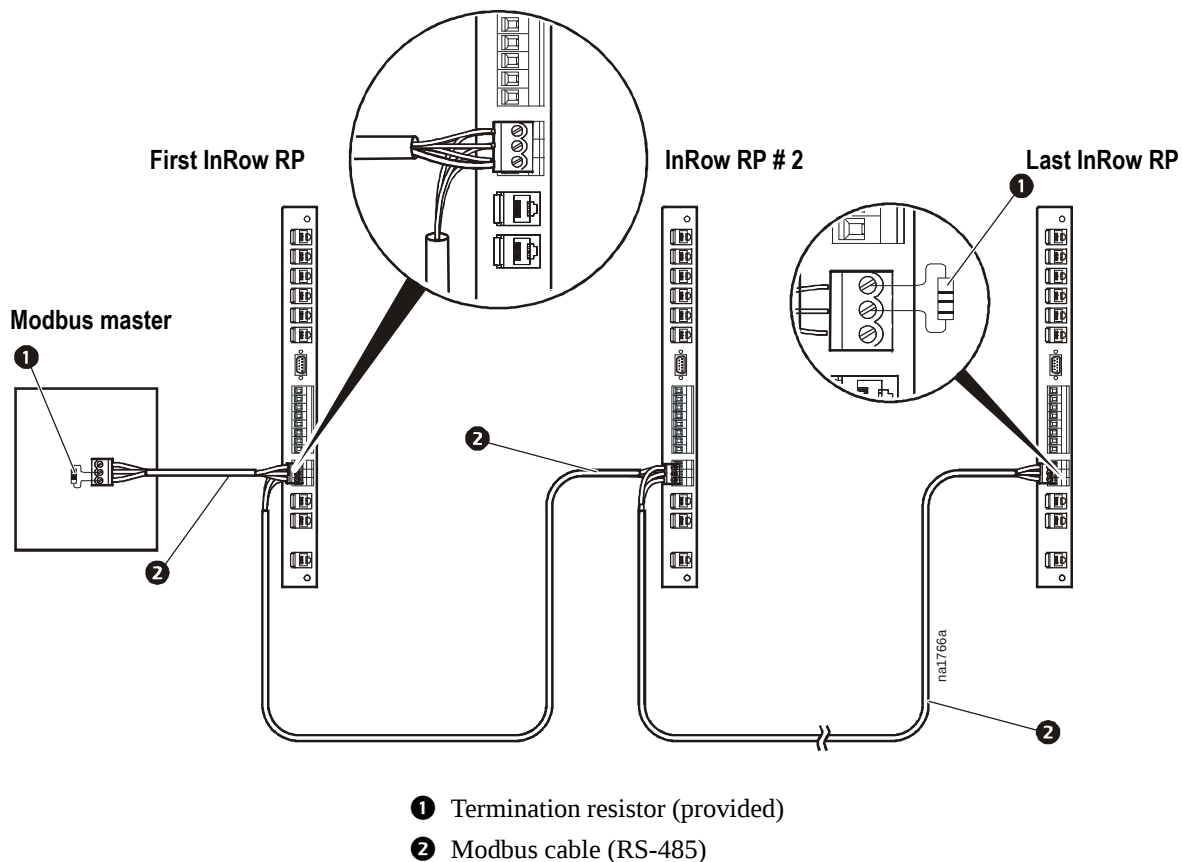

Network port

The Network port allows communication from the InRow RP to the network.

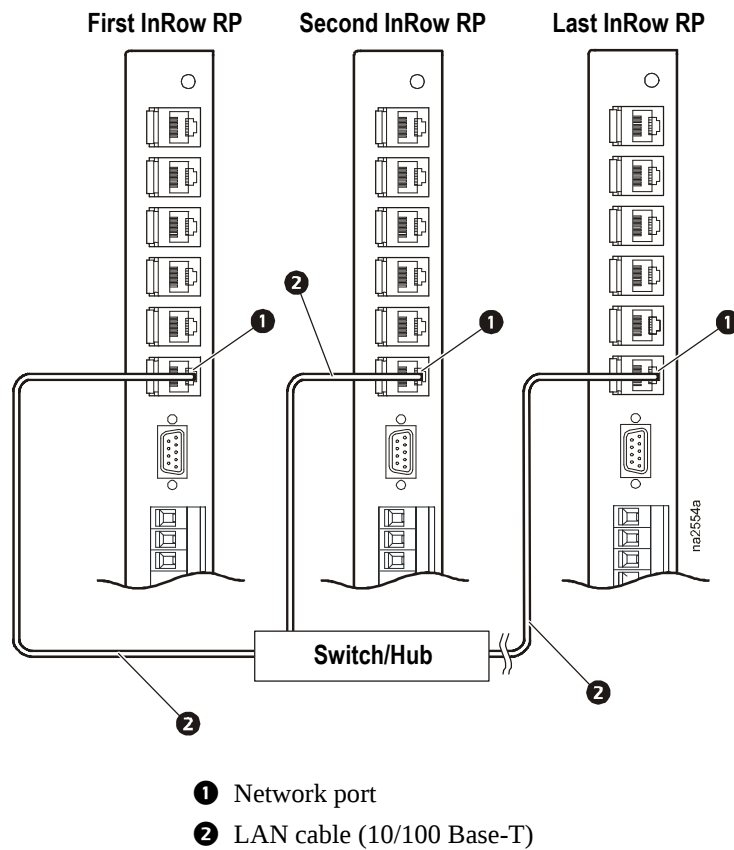

Power Connections


Wiring configurations

⚠ WARNING
UNEXPECTED BEHAVIOR OF APPLICATION
Only a licensed electrician may connect the equipment to utility power.
Failure to follow these instructions can result in death, serious injury, or equipment damage.

Route incoming power from the PDU to the electrical panel located in the left side of the equipment. Power can be routed either through the top or the bottom.


Top routing

1. Roll the unit into the row.
2. Remove the electrical panel cover. See “Removing the electrical panel cover” on page 20.
3. Locate the power connection plate in the top of the unit. See “Top piping and power access locations (top view)” on page 15.
4. Loosen the screw securing the connection plate, and remove the plate.
5. Attach the conduit connectors using the pilot hole in the connection plate.
6. Route the cabling to the main breakers as shown.
7. Connect feed A and B power wiring to the tops of the two main circuit breakers using the torque specified on the breakers. Connect the phases of the two power feeds as marked next to the terminals.
8. Connect the ground wires to the ground terminal block located above the main circuit breakers.
9. Reinstall the connection plate and the electrical panel cover.

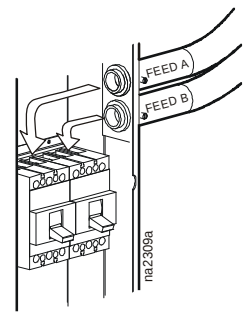

Bottom routing


1. Roll the equipment into the row.
2. Remove the electrical panel cover. See “Removing the electrical panel cover” on page 20.
3. Locate the power connection plate in the bottom of the unit. See “Bottom piping and power access locations (bottom view)” on page 16.
4. Loosen the screw securing the connection plate, and remove the plate.
5. Attach the conduit connectors using the two pilot holes in the connection plate.
6. Route the cabling to the main breakers as shown.
7. Fasten the cabling inside the unit with the provided wire ties.
8. Connect feed A and feed B power wiring to the tops of the two main circuit breakers using the torque specified on the breakers. Connect the phases of the two power feeds as marked next to the terminals.
9. Connect the ground wires to the ground terminal block located just above the main circuit breakers.
10. Reinstall the connection plate and the electrical panel cover.

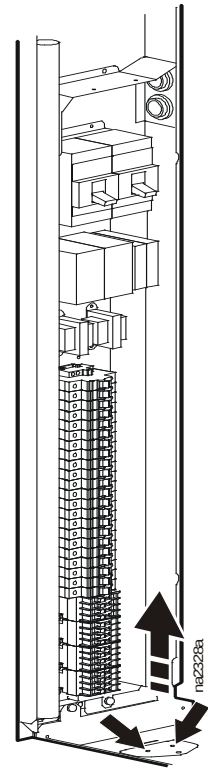

Strain relief (ACRP502 only)


Adjustable metal strain reliefs are provided. See “Install kit inventory” on page 4.

1. Hook one strain relief into a pair of slots in each of the two locations shown.
2. Route the electrical cable up from the bottom of the equipment, passing through the strain reliefs.
3. Tighten the screws on the strain reliefs to capture the electrical cable, taking the weight off of the inner conductors.
4. Continue connecting electrical wiring to the circuit breaker.

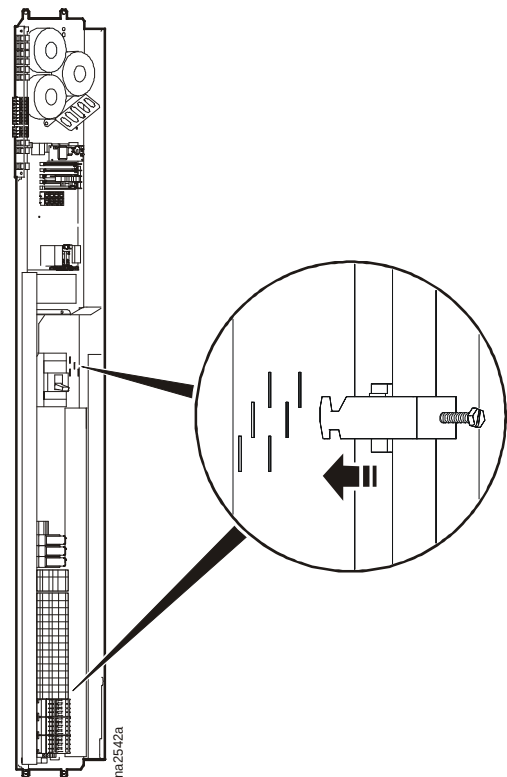

Voltage selection

Your equipment can operate at various supply voltages, provided the proper voltage jumpers are connected to the input transformers. Read the part number on the jumpers connected at the factory and compare that number to the table below. If the correct jumpers for your input voltage are not connected, remove them and connect the proper jumper.

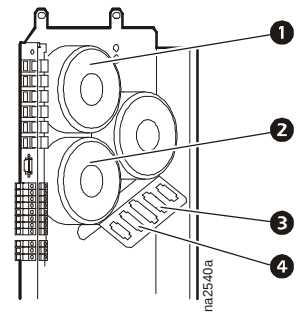

Jumper Connections

- ❶ Transformer B connected to J51 (❸)
- ❷ Transformer A connected to J50 (❹)

SKU	Input Voltage	Use Jumper Part Number
ACRP500	208 (50/60 Hz)	0W2540 (default)
	230 (50/60 Hz)	0W2541
ACRP501	460 (60 Hz)	0W2545
	480 (60 Hz)	0W2546 (default)
	380 (50/60 Hz)	0W2542
ACRP502	400 (50/60 Hz)	0W2543 (default)
	415 (50/60 Hz)	0W2544

Radio Frequency Interference



Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

USA—FCC

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with this user manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference. The user will bear sole responsibility for correcting such interference.

Canada—ICES

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

Japan—VCCI

This is a Class A product based on the standard of the Voluntary Control Council for Interference by Information Technology Equipment (VCCI). If this equipment is used in a domestic environment, radio disturbance may occur, in which case, the user may be required to take corrective actions.

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラス A 情報技術装置です。この装置を家庭環境で使用すると、電波妨害を引き起こすことがあります。この場合には、使用者が適切な対策を講ずるよう要求されることがあります。

Taiwan—BSMI

警告使用者：
這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當的對策。

APC Worldwide Customer Support

Customer support for this or any other APC product is available at no charge in any of the following ways:

- Visit the APC Web site to access documents in the APC Knowledge Base and to submit customer support requests.
 - **www.apc.com** (Corporate Headquarters)
Connect to localized APC Web sites for specific countries, each of which provides customer support information.
 - **www.apc.com/support/**
Global support searching APC Knowledge Base and using e-support.
- Contact the APC Customer Support Center by telephone or e-mail.
 - Local, country-specific centers: go to **www.apc.com/support/contact** for contact information.

For information on how to obtain local customer support, contact the APC representative or other distributors from whom you purchased your APC product.

© APC, the APC logo, and InRow APC by Schneider Electric. APC, the APC logo, and InRow are owned by Schneider Electric Industries S.A.S., American Power Conversion Corporation, or their affiliated companies. All other trademarks are property of their respective owners.