



NetShelter[®] SX 42-U, 23-in EIA Mounting Flange (AR7510)—Installation

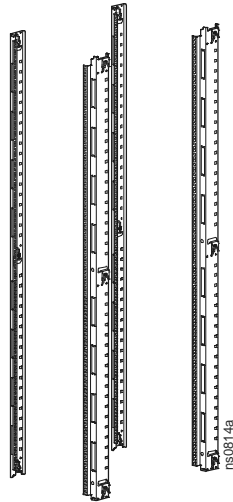

Installation


1. Remove the vertical mounting flanges that were provided with your NetShelter SX enclosure.
 - a. Use the Torx[®] T30/Phillips #2 wrench (provided with your enclosure) to remove the Torx screws in the slots of each mounting flange.
 - b. Remove the mounting flanges.

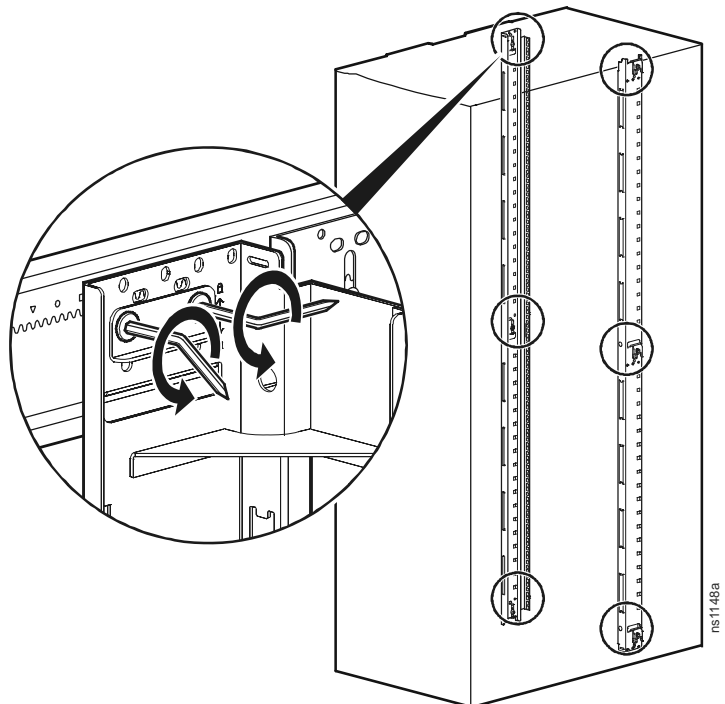

2. Place the 23-in EIA vertical mounting flange onto the enclosure side braces. Make sure that the top, middle, and bottom of the flange are attached to the adjacent side braces of the enclosure.
3. Repeat step 2 for the opposite side of the enclosure.




Note: All vertical mounting flanges are attached to the enclosure using the same procedure.

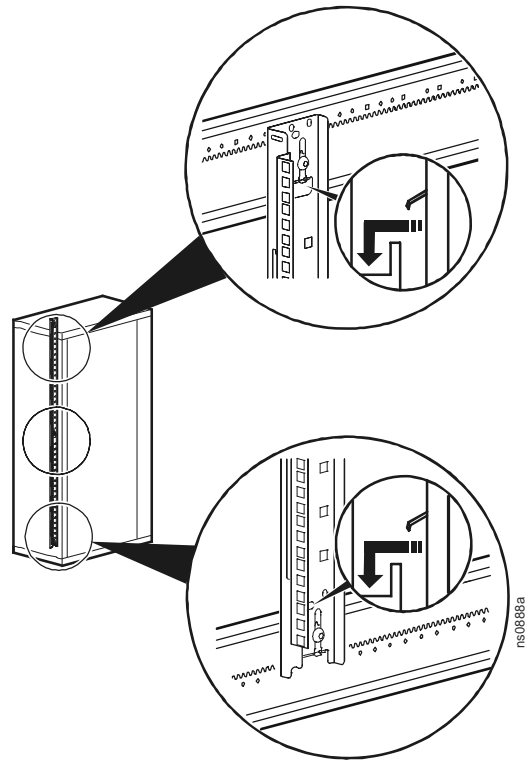

4. When the vertical mounting flange is in the proper location, slide each screw up until the teeth in the bracket engage fully with the teeth in the side brace, and tighten the screws.



See “Vertical Mounting Flanges” in the “Installation” section of the *NetShelter SX Enclosure Unpacking, Installation, and Customization* manual for further instructions on aligning and adjusting the vertical mounting flanges.

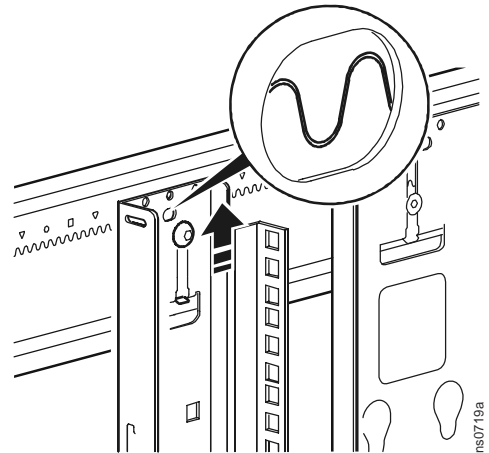

Customer support and warranty information is available at the APC Web site, www.apc.com.

© 2007 American Power Conversion. All rights reserved. All APC trademarks are property of American Power Conversion. Other trademarks are property of their respective owners.

990-3114
04/2007

