
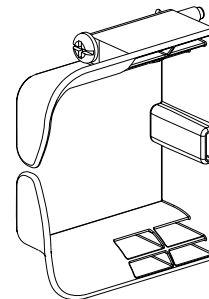


INSTRUCTIONS CM142A

© Panduit Corp. 2005


1. Mounting OPEN-ACCESS panels.

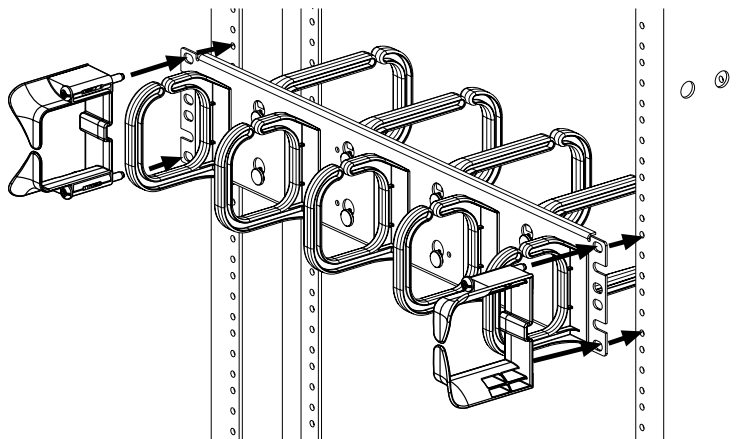


CMSRC2

Note: Screws installed in the STRAIN RELIEF CLIPS are used to mount the clips and the panel. Additional screws to mount the panel are not required.

2. Mounting HORIZONTAL CABLE MANAGEMENT panels.

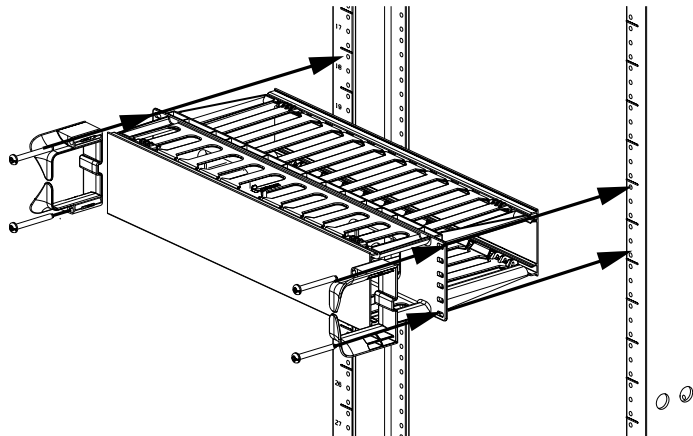

3. Attaching the STRAIN RELIEF CLIP to panels equipped with a strain relief mounting feature.

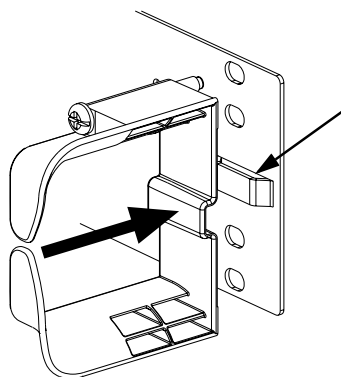

STRAIN RELIEF MOUNTING FEATURE

