


INSTRUCTIONS CM271A

© Panduit Corp. 2004

FRME Enclosure Parts


FRME3

- 1 FRME Enclosure
- 1 FRME Kit
- 1 Port I.D. Label
- 2 EIA Enclosure Brackets

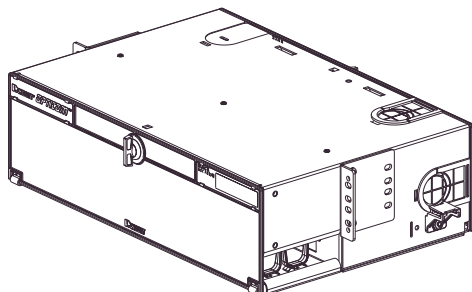

FRME4

- 1 FRME Enclosure
- 1 FRME Kit
- 1 Port I.D. Label
- 2 EIA Enclosure Brackets

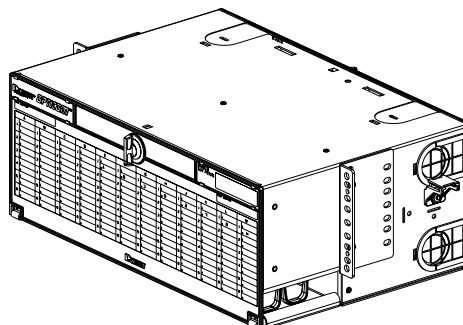


Assembly Instructions:

1. Determine the cable entry location on the enclosure. Remove the knockout by inserting a screwdriver into the slot located in the center of the knockout and apply a twisting upward motion then lift out. Insert grommet following proper cutting diagram. Snap in saddle clips. Grounding Lug attaches to a stud at the rear, inside the enclosure on the top or bottom with a #10-32 nut. Apply Laser Warning Label and Caution Label in a clearly visible location. Apply Port I.D. Label (s) on the inside of the door.


GROMMET CUTTING DIAGRAM




Cut the small circle for 1" diameter innerduct

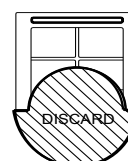


Cut the large circle for 1-1/2" diameter innerduct

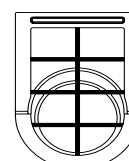


Cut the straight lines when not using any innerduct

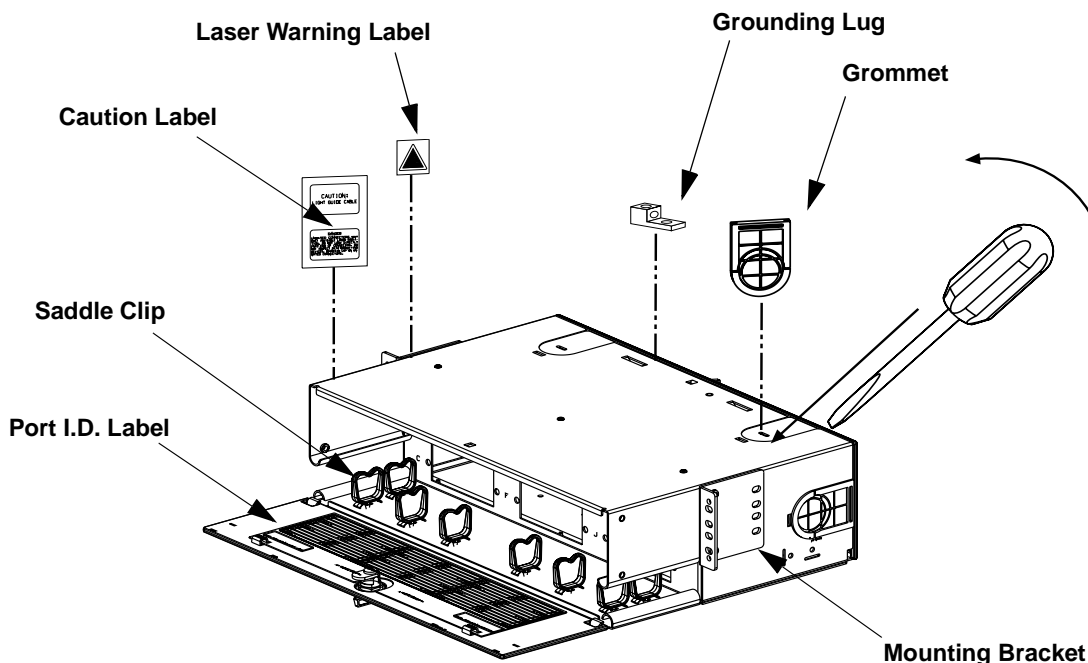


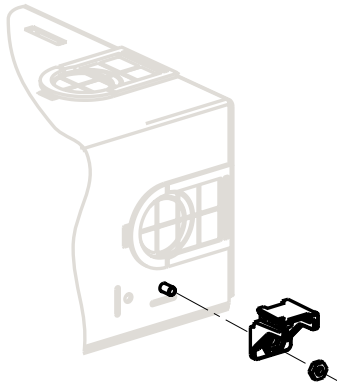


Attach Strain Relief Clip with the #10-32 screw and nut provided.

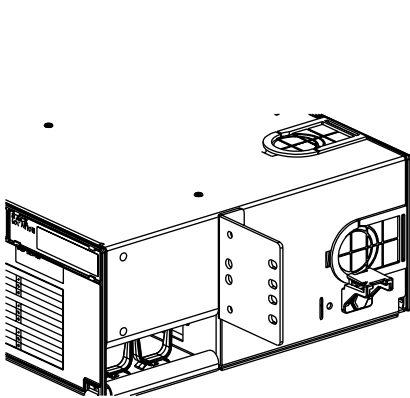

Bracket orientation for 23 inch rack
Attach the short leg of the bracket to the enclosure.


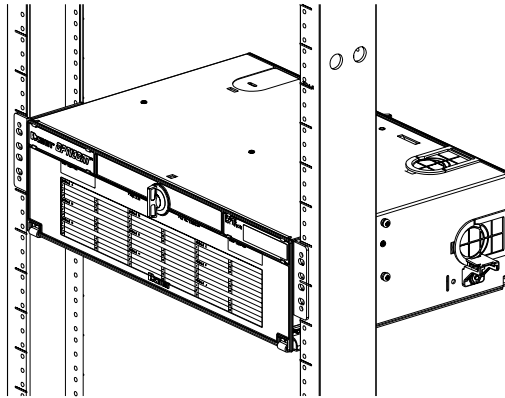


Bracket orientation for flush mount on a 19 inch rack
Locate rack bracket on the front mounting holes for flush mounting

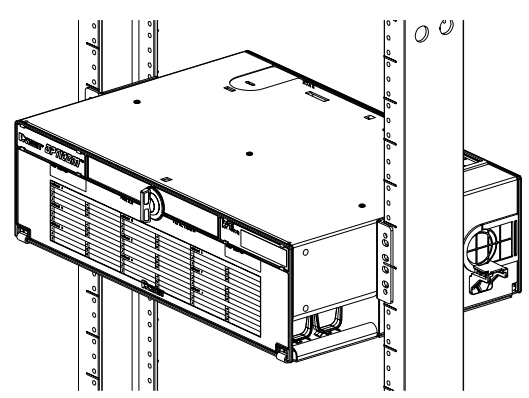

Bracket orientation for projection mount on a 19 inch rack
Locate rack bracket on the mid enclosure mounting holes for projection mounting

Label Installation

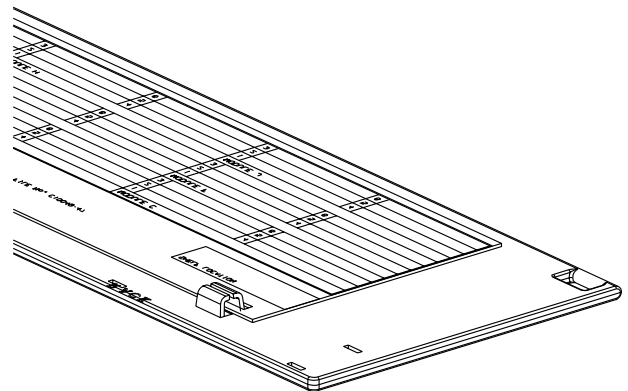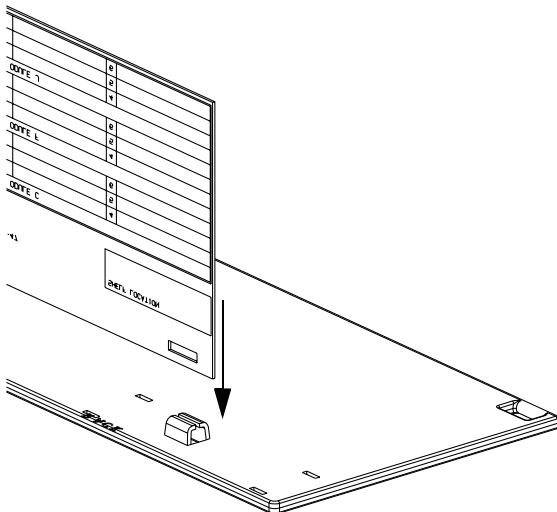

For instructions in Local Languages
and Technical Support:

www.panduit.com/resources/install_maintain.asp



E-mail:
cs@panduit.com
Fax:
(708)444-6448