



INSTRUCTIONS CM290B

© Panduit Corp. 2004


Optional Accessories




(1) Shelf
(4) #12-24 Screws
SRM19X18A1
SRM19X25A1




(1) *NETFRAME* Extender
Door Brackets for
23" Mtg
(4) #10-32 Screws
NFEDB23




(1) End Panel
(6) 3/8"-16x1.625" Hex Bolts
3/8"-16 Hex Nuts
3/8" Split Lock washers
NFEP



(1) Spool
PRSP5




(8) D-Rings
CMVDR1-8




(1) Vertical
Slack Manager
NFVSM4
NFVSM8



(1) Dual
hinged Door,
8" wide w/
Brackets
NFD884
NFD1284




(1) Vertical Duct,
4"x5" with
(2) Covers
(8) #12-24 Screws
WMPVFM45




Bend Radius Fin-
gers
NFBRFK

Shelf Installation SRM19X18A1 SRM19X25A1

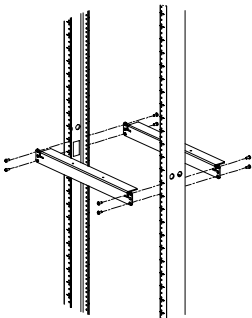


Step 1
Line up shelf bracket flange
holes with EIA tapped holes on
rack. Fasten with (4) #12-24
screws on each bracket.

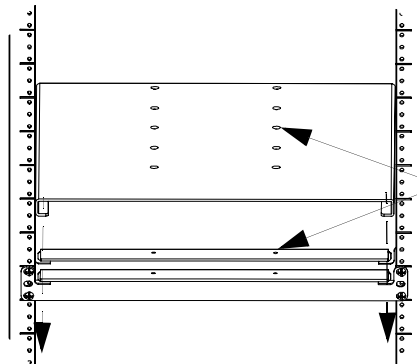

Screw holes on
shelf and brackets


Step 2
Slide side flanges of shelf through
notches in brackets until screw
holes line up at desired location.

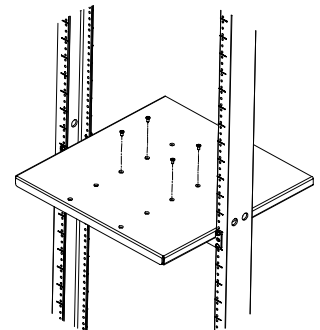

Step 3
Secure shelf in place using
(4) provided #10-32 screws.


D-Rings Installation: CMVDR1K

Use (2) #12-24 screws to attach D-Ring

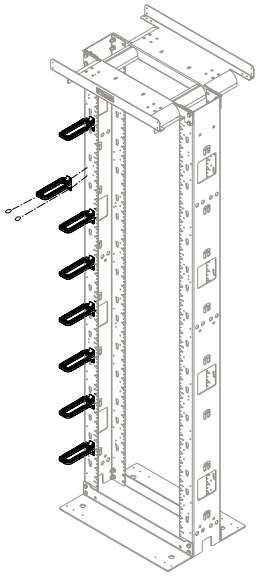


CMVDR1K

Hinged Door Installation: NFD884

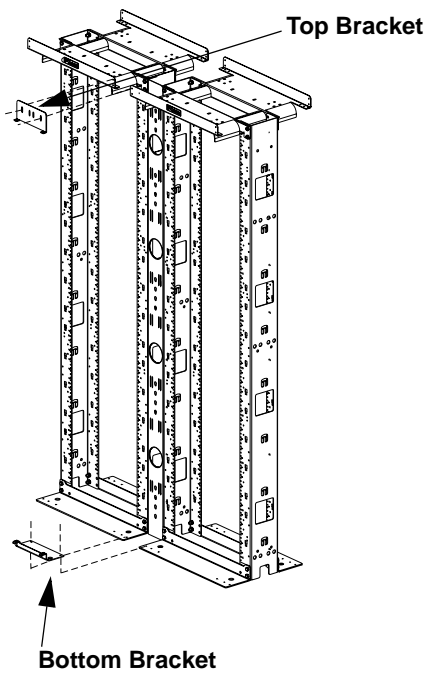


1. Use 3/8"-16x1" bolt, 3/8"-16 nut and 3/8" lock washer fasten slack spool spacer between two *NETFRAMES* using junction holes located on side of rack channels.
2. Straddling the two racks, fasten Top Bracket and Bottom Bracket with #10-32x5/16" screws provided.
3. Door installs to top and bottom brackets by aligning lower hinge pin to hinge pin mounting hole. Squeeze knobs together, then align upper hinge pin to upper hinge pin mounting hole. Release pressure on knobs to set door in place.

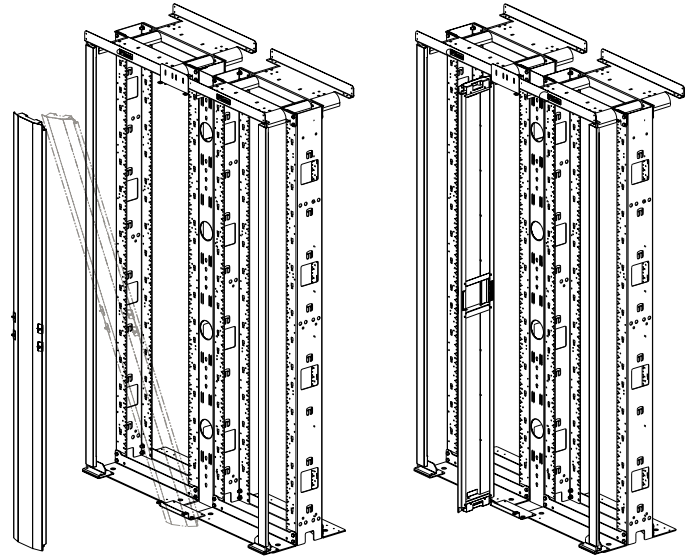


Side Mount EIA/*NETFRAME* Racks


Vertical Slack Manager attaches to your frame with (3) 3/8" bolts, nuts and lock washers.

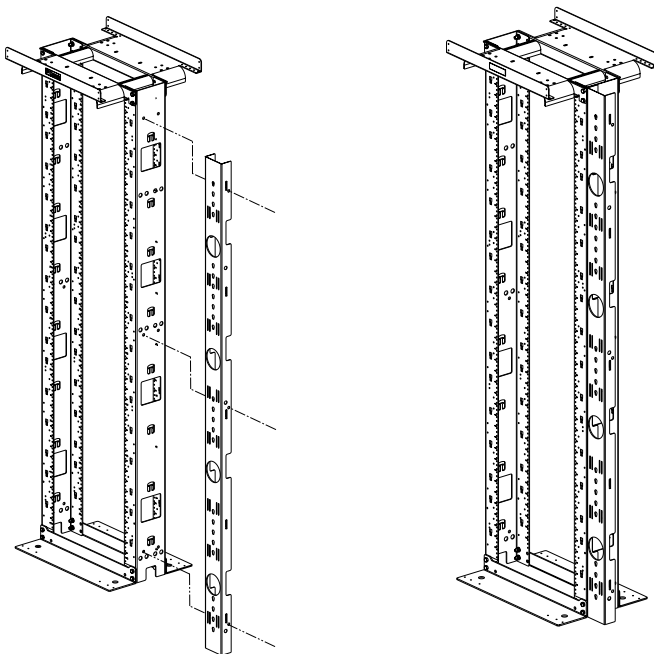


Vertical Duct Installation WMPVFM45

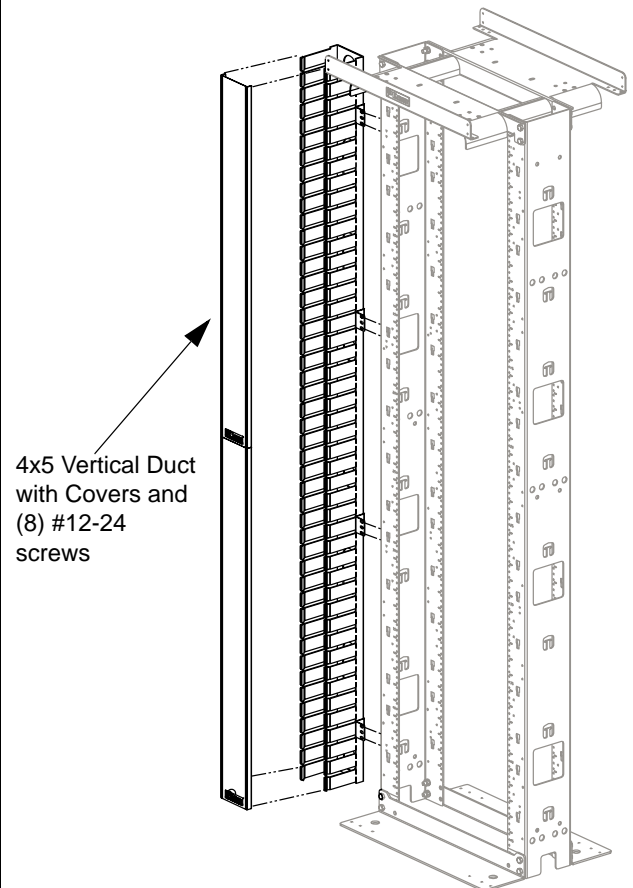


NetRack Vertical Slack Manager: NFVSM4,NFVSM8
Spool Installation

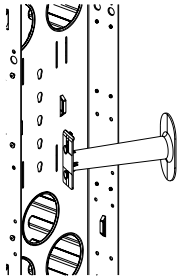

Step 1
 Align buttons with mounting leg slot

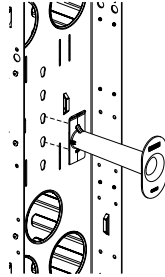

Step 2
 Push buttons through backbone until mounting face is flush with backbone.

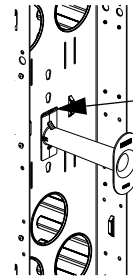

Step 3
 Apply downward pressure until plastic spool clicks into place.

Angled Flange


Removal/Replacement

Step 4
 Pull back on angled flange while applying upward pressure

Step 5
 Repeat steps 1-3

Bend Radius Fingers Installation
NFBRFK

Fingers install by snapping down use (3) #12-24 screws to secure each finger section in desired location.

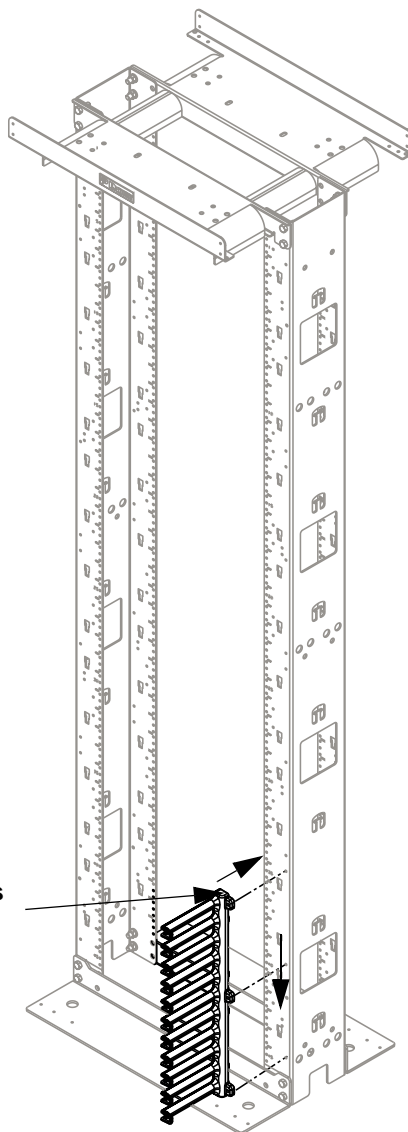


Note:
 Start finger installation from bottom of rack and continue upwards.

(3) #12-24 Screws

End Panel
NFEP

NFEP attaches to rack with (6) 3/8"-16x.625" Hex Bolts, 3/8"-16 Hex Nuts and 3/8" Split Lock washers provided.

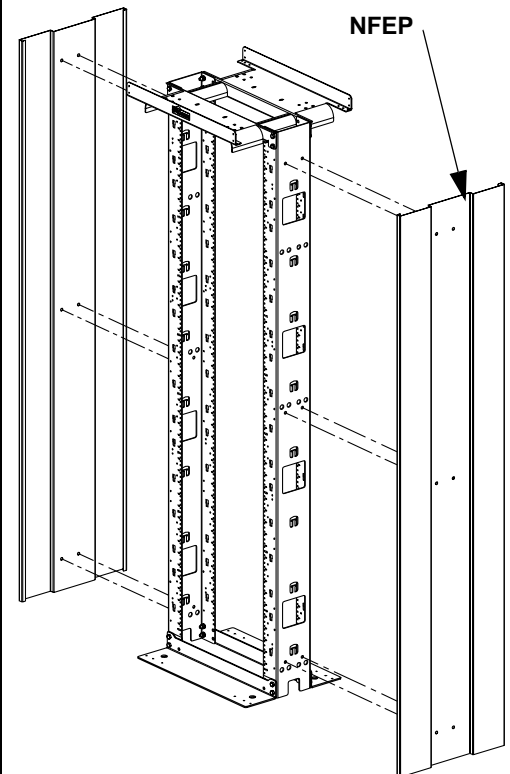

NFEP

For instructions in Local Languages
 and Technical Support:

www.panduit.com/resources/install_maintain.asp



E-mail:
cs@panduit.com
Fax:
 (708)444-6448