


## **Mini-Com Tamper Resistant Faceplate**

Part Number: CFPTR4\*\*




© Panduit Corp. 2011

## **INSTALLATION INSTRUCTIONS**

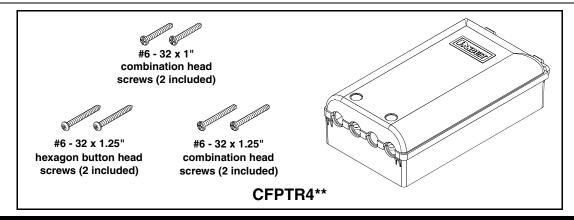




1.

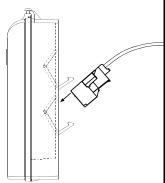


Align notch on module with tab on faceplate.

2.

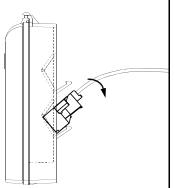


Rotate downward.

3.

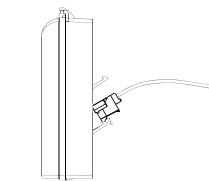


Snap into place. Repeat for all openings.

4.

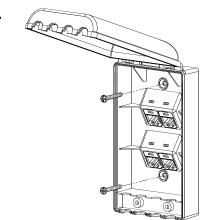


After modules have been installed, align #6-32 x 1" combination head screws with holes as shown above to mount faceplate.

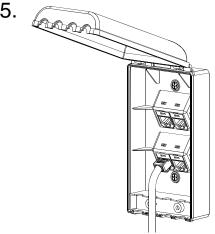

Insert compatible plugs into modules. Align cables 1 per notch on the faceplate as shown above.

6.

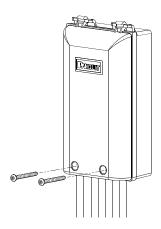

After cables have been aligned, close cover and secure with #6-32 x 1.25" hexagon button head screws or #6-32 x 1.25" combination head screws. For hexagon button head screws use a 5/64" hex key tool.

For Instructions in Local Languages and Technical Support:

www.panduit.com/resources/install\_maintain.asp



E-mail: cs@panduit.com

**Fax:** (708) 444-6993