



CMAA1\*\*-X


### Module Installation

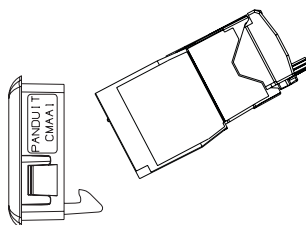

1. Orient module and Adapter as shown above.

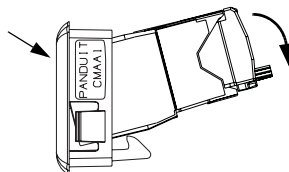


2. Align groove on module with notch on Adapter. Swing module downward.

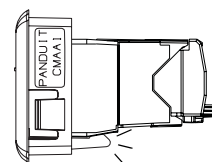


3. Snap into place.

### Module Removal

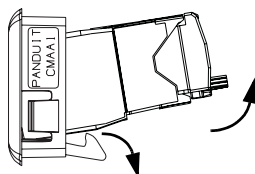


1. Press down on tab while pushing upward on the module.

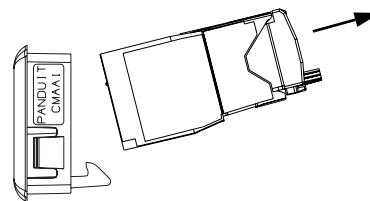

2. Remove module from Adapter.

The Adapter can fit into a 25mm or 1.00" square knock out in any metal or plastic panel that is 1.5mm - 2mm (.06" - .08") thick.

The knock out could be located in a furniture panel, raceway, or desk as long as it meets the previous criteria.

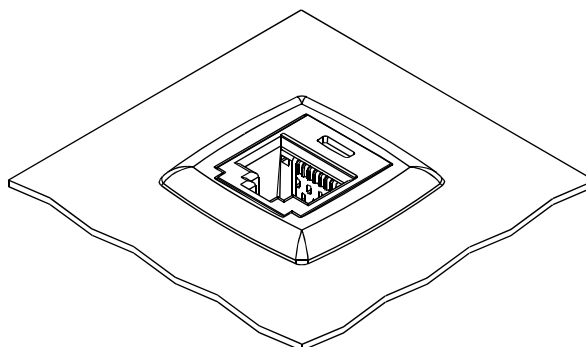

\*\* Denotes color.

For Instructions in Local Languages  
and Technical Support:

[www.panduit.com/resources/install\\_maintain.asp](http://www.panduit.com/resources/install_maintain.asp)

# PANDUIT

[www.panduit.com](http://www.panduit.com)

E-mail:  
[cs@panduit.com](mailto:cs@panduit.com)

Fax:  
(708) 444-6993