




DPOE Wall Mount Bracket

Part Number: DPOEWM8B

© Panduit Corp. 2006


INSTALLATION INSTRUCTIONS PN423B

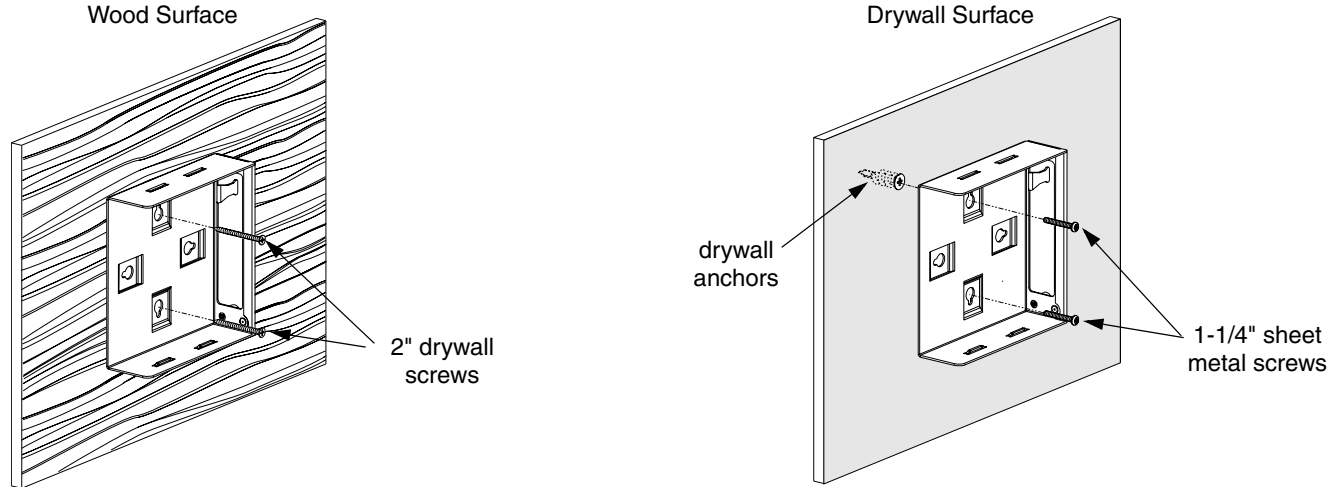

The *PANDUIT DPoE* Wall Mount Bracket can be installed in any orientation on either a wood surface using the included 2" (5 cm) drywall screws or a drywall surface using the included drywall anchors and sheet metal screws. Drive screw or insert drywall anchor and sheet metal screw approximately 1" below the highest point on the surface where the unit is to be located. (NOTE: If the back side of the bracket is the highest location, take into account the additional space needed for the power harness tie down, the thumb screw, and the ground stud.) Slip bracket over screw head. Drive second screw or mark location of second anchor for mounting hole opposite first screw. Make sure bracket is properly in place and tighten down both screws.

For Technical Support: www.panduit.com/resources/install_maintain.asp

INSTALLATION INSTRUCTIONS PN423B

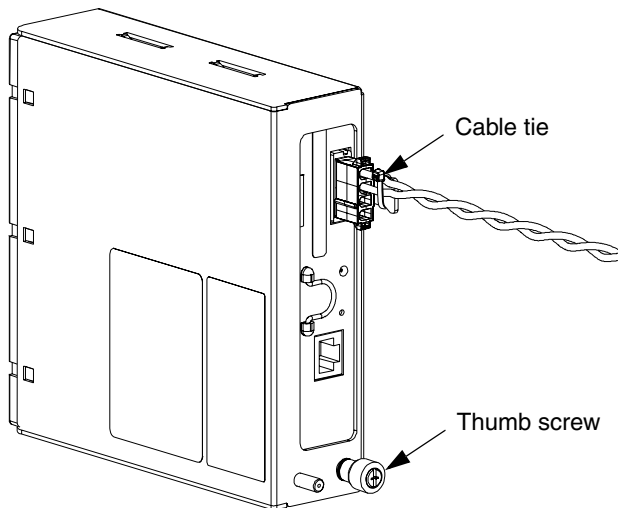

Slide-in and secure the *DPoE Compact 8 Midspan* (*PANDUIT* part no. DPOE8S2XG) or the *DPoE Modular 8 Port Passive Module* (*PANDUIT* part no. DPOEPL8BU) to the Wall Mount Bracket with the thumb screw. Be sure to fasten the power harness to the Wall Mount Bracket with the included cable tie (*PANDUIT* part no. PLT1.5I).

Refer to the *DPoE Compact 8 Midspan Installation Instructions* (*PANDUIT* part no. PN420*) or the *DPoE Modular 8 Port Passive Module Installation Instructions* (*PANDUIT* part no. PN422*) for more detailed installation information.

* Denotes revision letter

For Instructions in Local Languages
and Technical Support:

www.panduit.com/resources/install_maintain.asp



www.panduit.com

E-mail:
cs@panduit.com

Fax:
(708) 444-6993