




Angled Patch Panel (Transitional) Cover Plate


Part Number: CPATCBL

© Panduit Corp. 2007


INSTALLATION INSTRUCTIONS PN430A

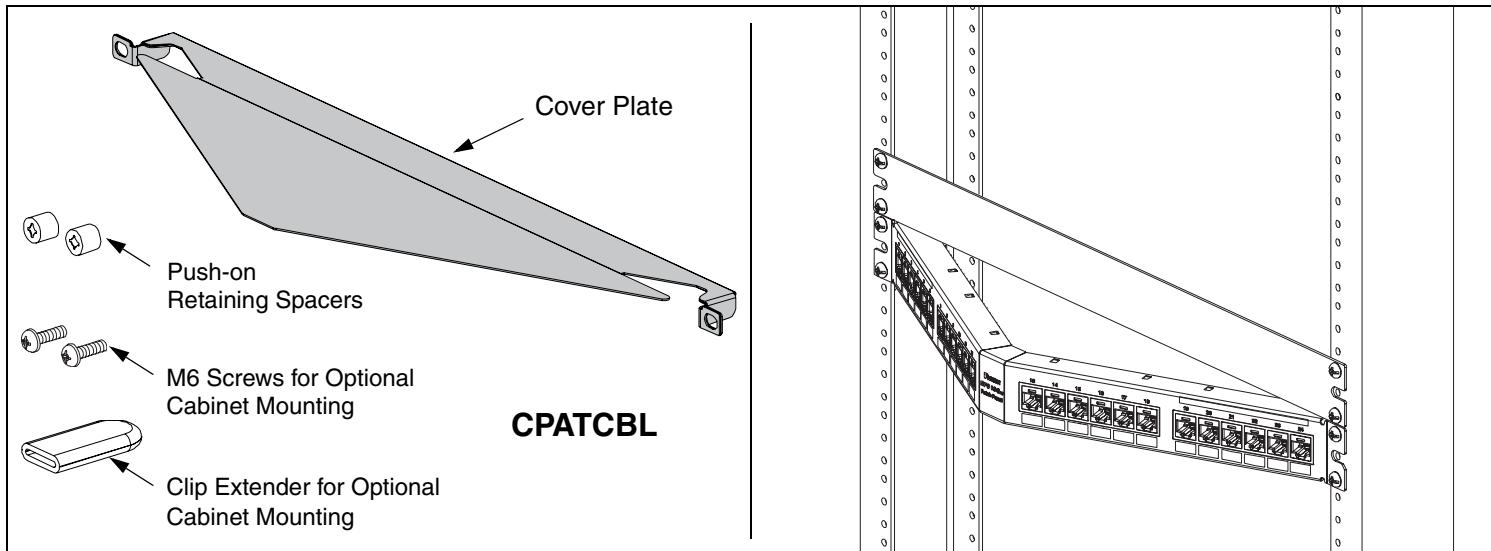



1 Top View

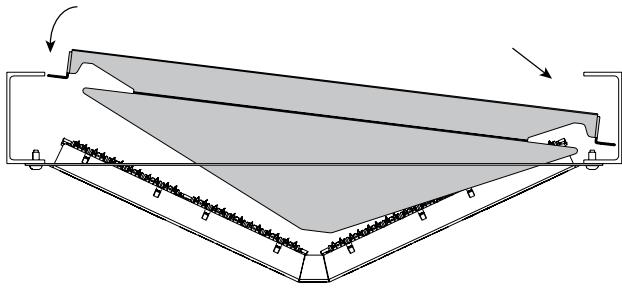

2


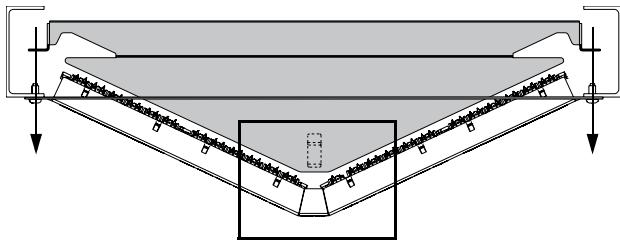


3 View from Rear of Panel

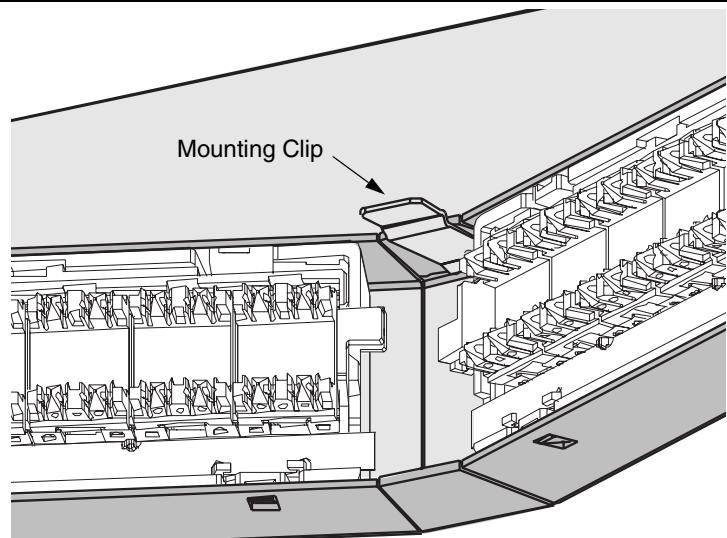
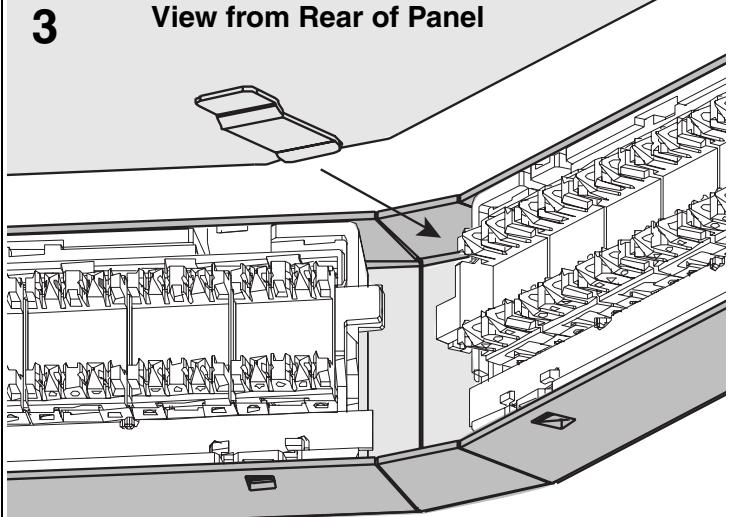


4



Retaining Tabs on
Spacers Facing IN

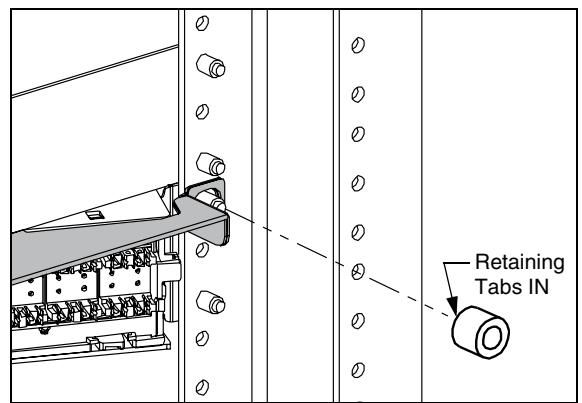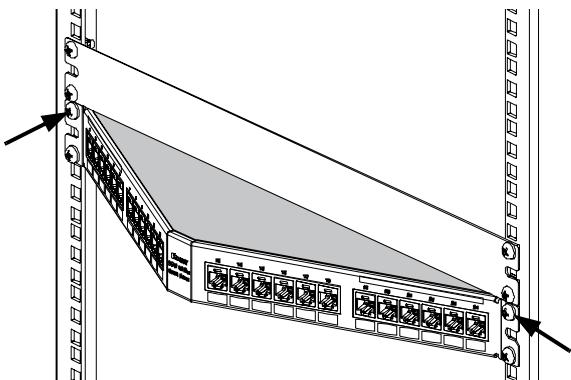**Optional: Cabinet Mounting with Cage Nuts**

Replace existing M6 screws with the longer screws provided to allow retaining spacers to grip the threads.

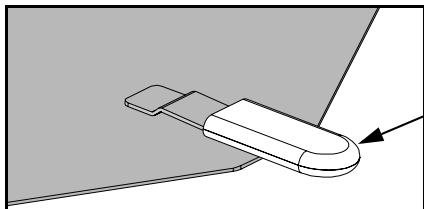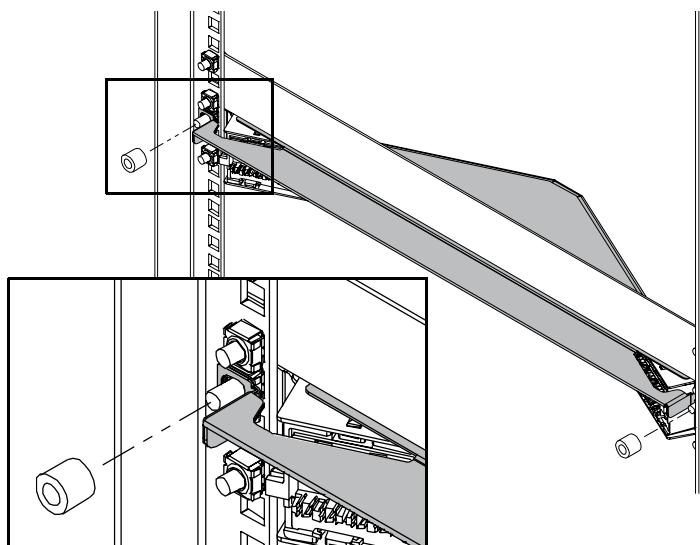

Clip extender may be necessary
to ensure proper clip engagement
for cabinet mounting.

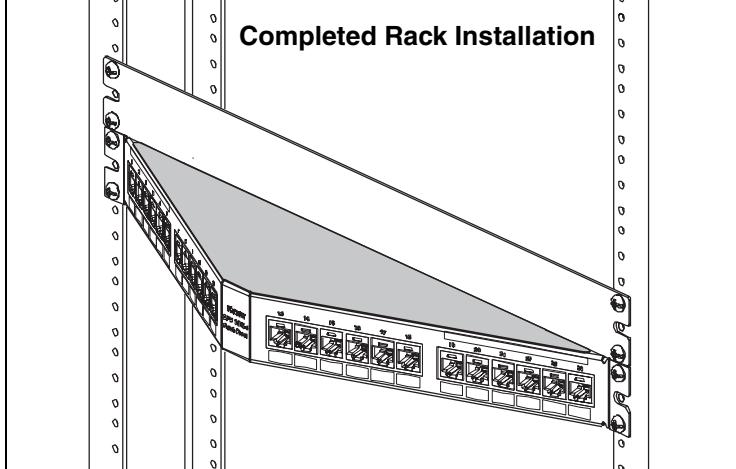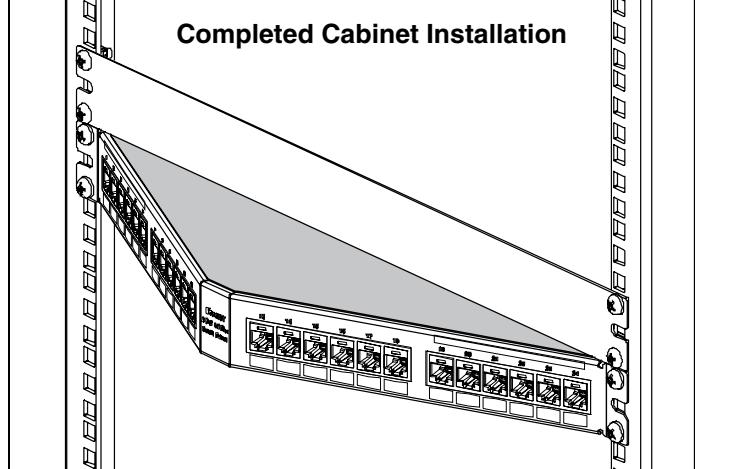Completed Rack Installation**Completed Cabinet Installation**

For Instructions in Local Languages
and Technical Support:

www.panduit.com/resources/install_maintain.asp

 **PANDUIT**
www.panduit.com

E-mail:
cs@panduit.com

Fax:
(708) 444-6993