



1 Selecting Location

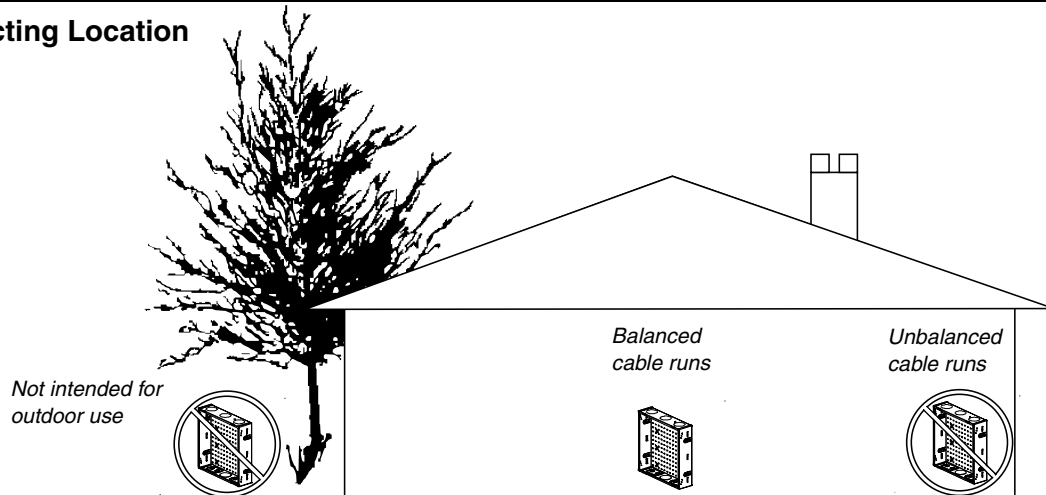


2 Mounting

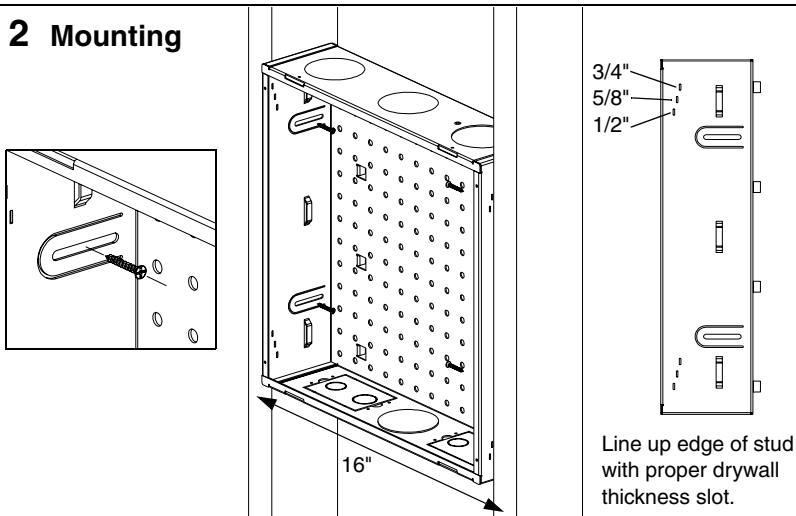

3 Electric Box Installation

(Not sold by PANDUIT)


Caution: A qualified electrician should install all electrical connections in compliance with the NEC.

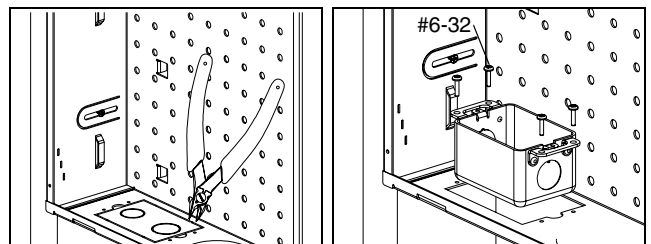

Smaller breakouts are for use with 1/2" and 3/4" conduit.

4 Cable Rough In

Provide sufficient slack for termination and cable management.

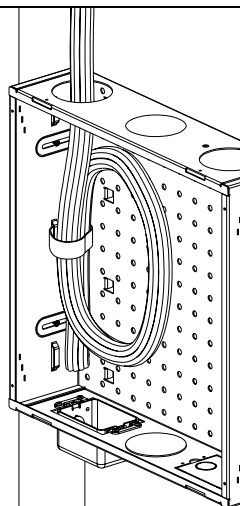

5 Mud Guard

When rough in is complete, use the provided mud guard to keep the enclosure free from dust and debris during final construction and painting.

