


Thermostat



A Pentair Company

Hoffman Enclosures Inc.
2100 Hoffman Way
Anoka, MN 55303-1745
(763) 422-2211 Tel
www.hoffmanonline.com

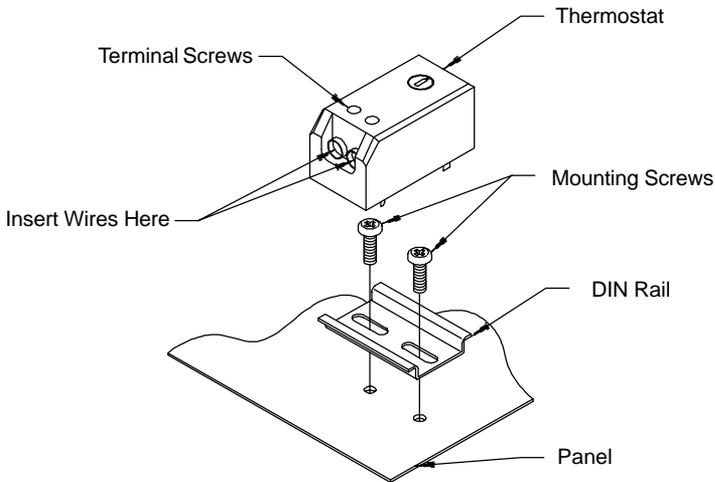

THERMOSTAT MOUNTING INSTRUCTIONS

1. Insert wires (14 AWG Max.) into terminal holes and tighten screws.
2. Drill two .140 inch diameter holes (#28 drill) in panel using a two inch length of DIN rail as a guide.
3. Fasten DIN rail to panel using the screws provided. Tighten to 15 in-lbs.
4. Snap thermostat into DIN rail.
5. Steps two through three may be omitted if there is space available on an existing DIN rail.