

Analog Encoder Kit

サービス担当者用設置説明書 Installation Manual for Service Personnel

お買い上げいただきありがとうございます。

警告 電気製品は安全のための注意事項を守らないと、火災や人身事故になることがあります。
この取扱説明書およびNSBK-A16設置説明書をよくお読みの上、製品を安全にお使いください。お読みになったあとは、いつでも見られるところに必ず保管してください。

NSBK-A16

© 2009 Sony Corporation Printed in Taiwan

日本語

本書について
本書はサービス担当者専用です。サービストレーニングを受けた技術者のみご利用ください。

商標について
• “IPELA” および **IPELA** は、ソニー株式会社の商標です。
• その他、本書に記載されているシステム名、製品名、会社名は一般に各開発メーカーの登録商標または商標です。
なお、本文中では、®、™マークは明記していません。

安全上のご注意

本機を装着する技術者のかたへ
• 装着の前に、NSBK-A16設置説明書およびNSR-1200/1100に付属の設置説明書を必ずお読みください。
• 本機の取り付けは、NSR-1200/1100の電源プラグを抜き、内部が冷めてから行ってください。


はじめに

本書では、アナログエンコーダーキットNSBK-A16をソニーのネットワークサーバランスサーバNSRに取り付ける方法を記載しています。

対象モデル／バージョン

NSR-1100	全バージョン
NSR-1200	全バージョン

設置の流れ

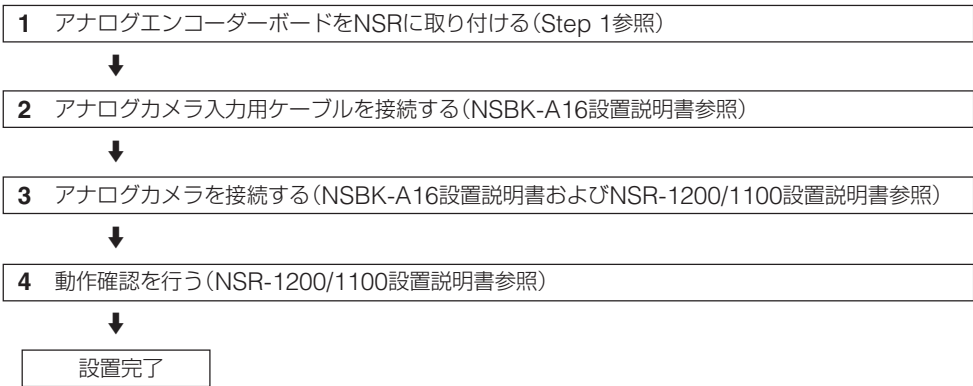


取り付け手順


- ご注意**
- 静電対策を行った上で、作業を行ってください。
 - アナログエンコーダーボードを装着するときは、NSRの電源プラグを抜き、内部の温度が冷めてから行ってください。

Step 1 アナログエンコーダーボードをNSRに取り付ける


- 1** ネジを3本取りはすす (下図参照)。
取り付け時の締め付けトルク：6 kgf・cm

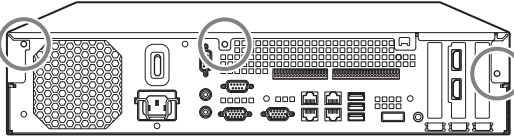


- 2** トップカバーを矢印の方向にスライドしてはすす。

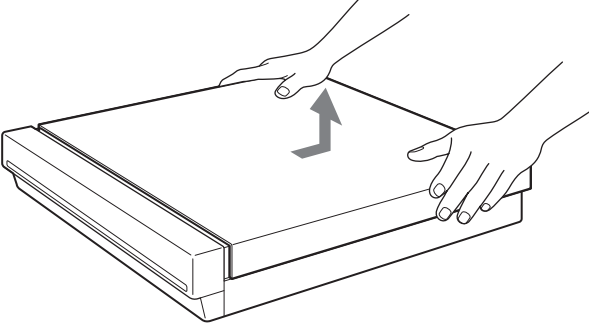


- 3** アナログエンコーダーボードを取り付ける位置を確認する。

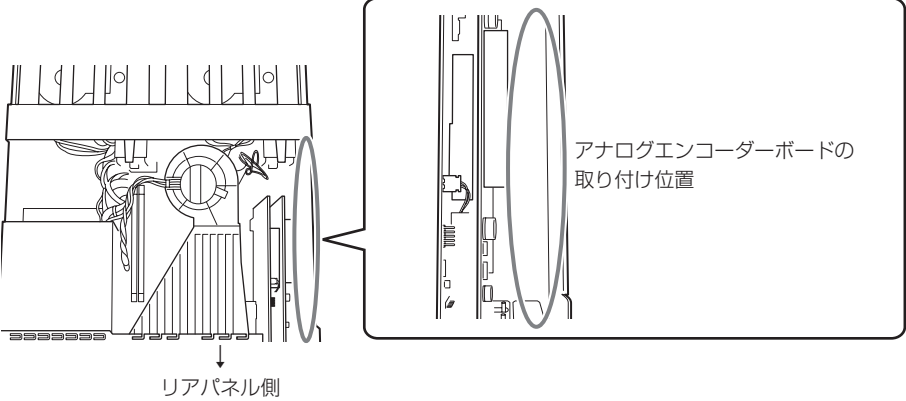


- 4** 保護カバーを上方向に引き抜いて取りはすす。

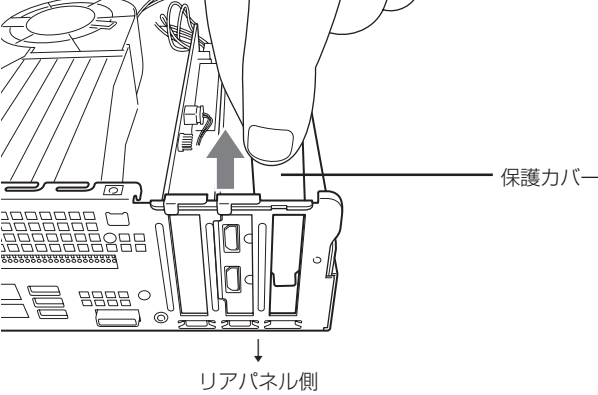

- 5** 基板の向きに注意して、アナログエンコーダーボードを挿入する。

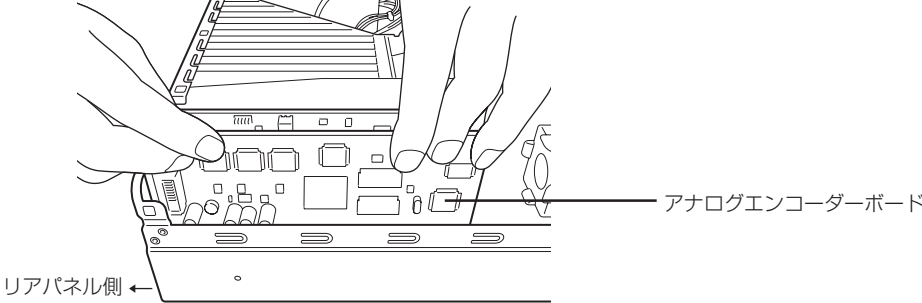

- 6** アナログエンコーダーボードを取り付ける。
このとき、下図に示す箇所を目視でチェックし、基板が確実に接続されていることを確認してください。

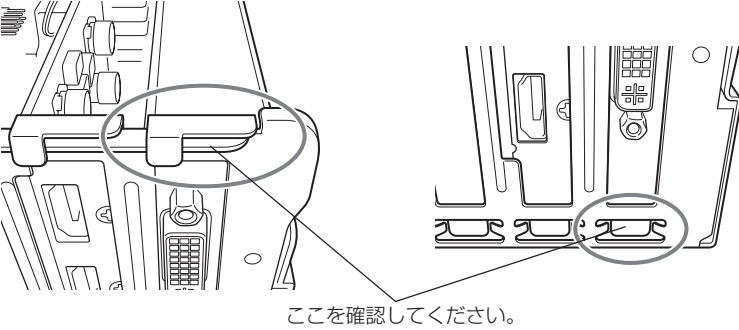

- ご注意**
半差し、斜め差しなど、接続不良がないことを確認してください。

- 7** 手順1、2とは逆の手順で、トップカバーを元に戻す。

About This Document
This manual is intended for qualified service personnel only.

Trademarks

- “IPELA” and **IPELA** are trademarks of Sony Corporation.
- Other products or system names appearing in this document are trademarks or registered trademarks of their respective owners.

Further, the ® or ™ symbols are not used in the text.

Precautions

To the technician installing the unit

- Please refer to the Installation Manual supplied with the NSR-1200/1100 and NSBK-A16 for installation instructions.
- Before installing the unit, be sure to unplug the NSR-1200/1100 and wait until the internal temperature drops.


Before Use

This document describes how to install the Analog Encoder Kit NSBK-A16 in the Sony Network Surveillance Server NSR.

Applicable Models/Versions

NSR-1100	All Versions
NSR-1200	All Versions

Setup Flowchart

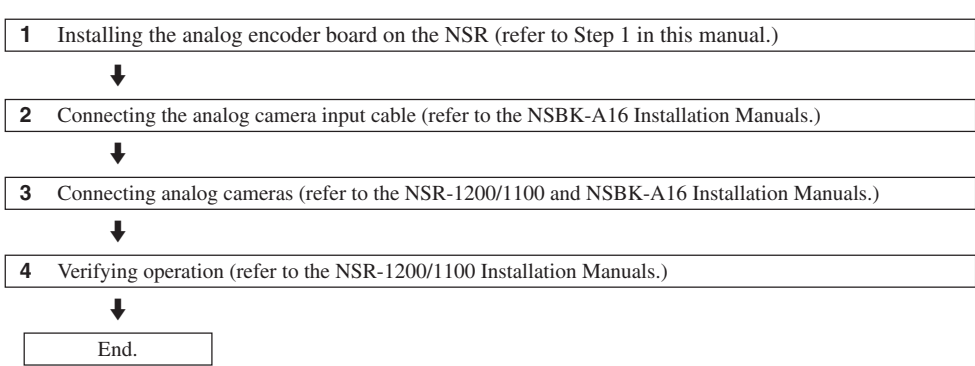


Procedures

Caution


- Perform installation work in an antistatic environment.
- Before installing the analog encoder board, be sure to turn off and unplug the NSR and wait until the internal temperature drops.

Step 1 Installing the analog encoder board on the NSR


1 Remove the three screws shown below.
Tightening torque when installing: 6 kgf·cm

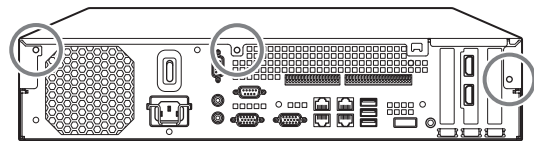


2 Slide the top cover in the direction of the arrow to remove it.

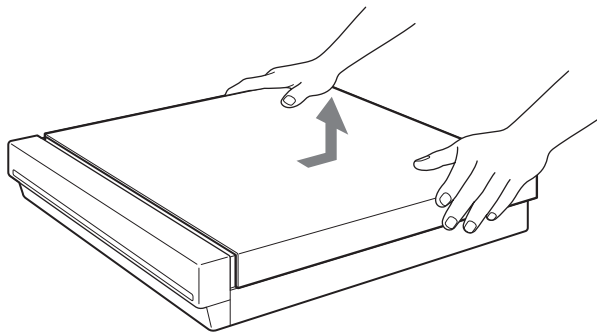


3 Confirm the installation position.

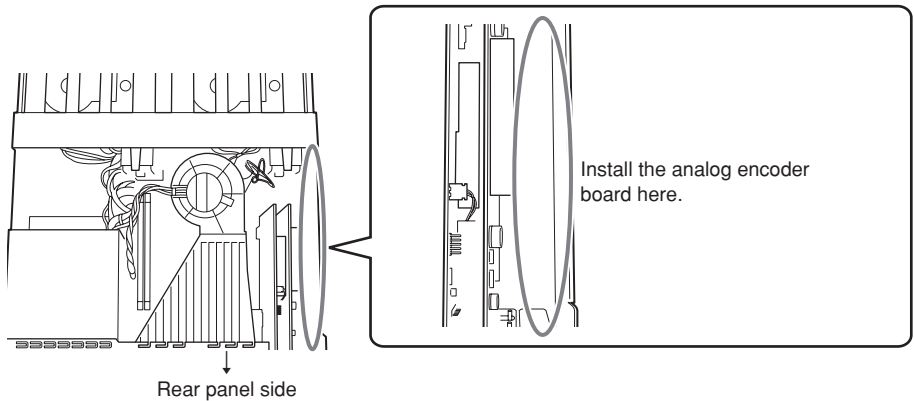


4 Pull the protection cover upward and remove it.

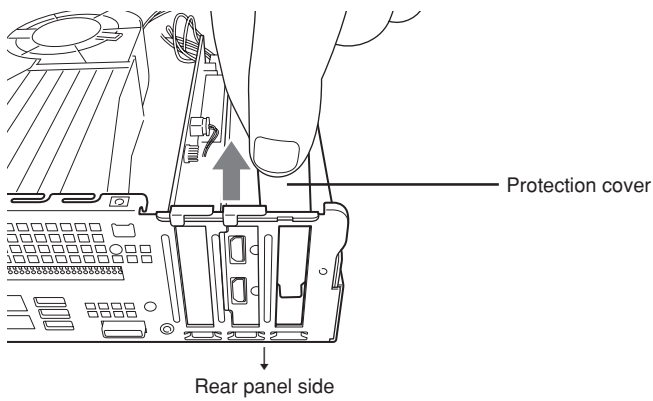

5 Insert the analog encoder board with the proper orientation.

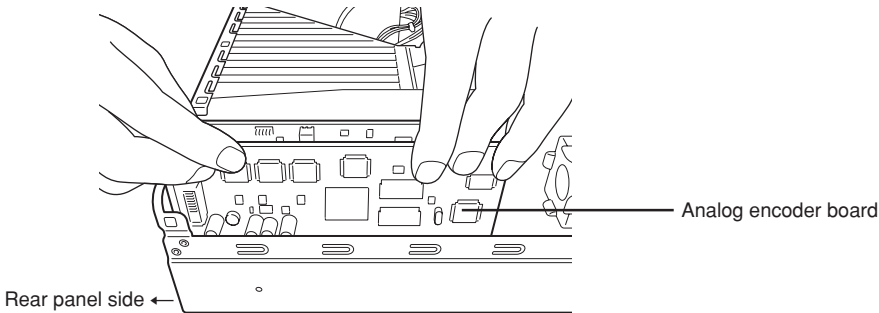

6 Install the analog encoder board.
Make a visual check at the following two points and confirm that the board is firmly connected.

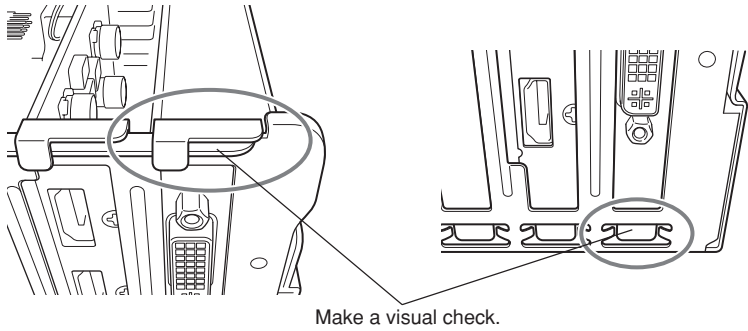

Caution
Incomplete and/or skewed insertion of the board can cause improper connection.

7 Reattach the top cover by reversing removal procedures **1** and **2**.