



### ► Spacers For 7/8" diameter locks


**WP21** 3/32" thickness  
Use with 100, 200, 500, 600, L20V, N078, R078

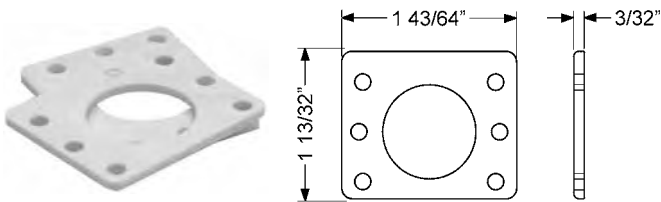


**WP22** 1/4" thickness  
Use with 100, 200, 500, 600, L20V, N078, R078

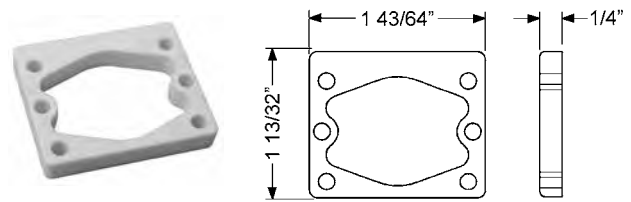

**WP23** 1/2" thickness  
Use with 100, 200, 500, 600, L20V, N078, R078

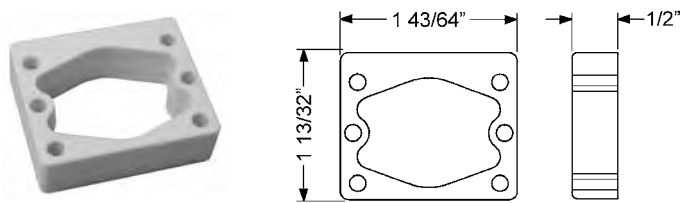


**WP24** 1/8" thickness  
Use with 996, 997, 998, 999

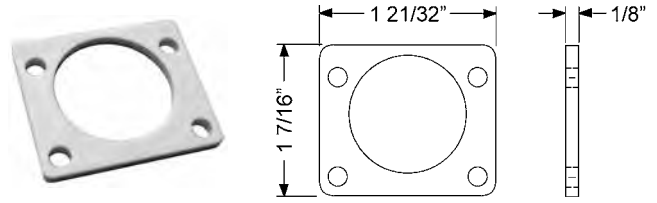


### ► Spacers For 1-1/8" diameter locks


**10-348** 1/4" thickness  
Use with 700, 721, 754, 777, 800, 850, 854, 888, 931, 950, L92, L72

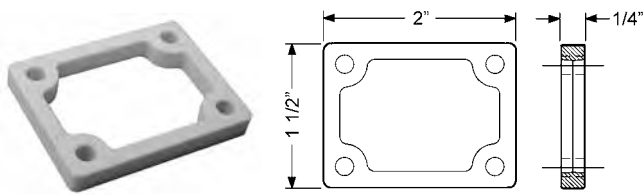


**10-349** 1/2" thickness  
Use with 700, 721, 754, 777, 800, 850, 854, 888, 931, 950, L92, L72

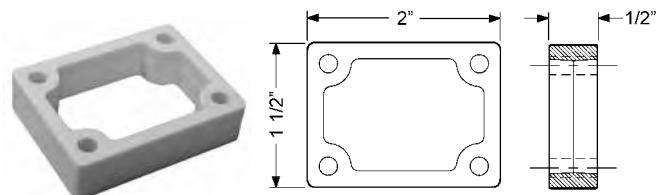


**10-350** 1/8" thickness  
Use with: 700, 721, 754, 777, 800, 850, 854, 888, 931, 950, L92, L72

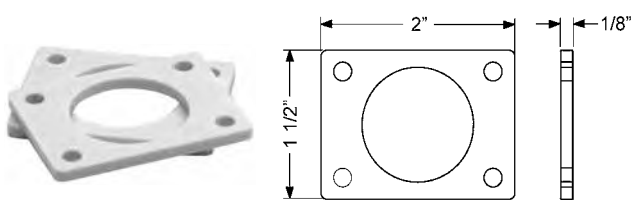

**10-351** 1/8" thickness  
Use with: L78

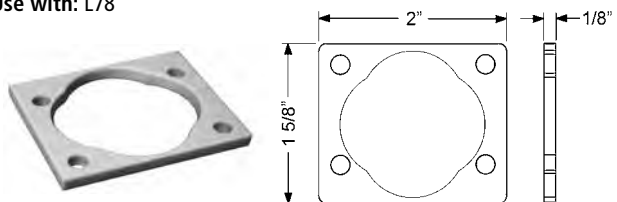

**WP725** 1/8" thickness  
Use with: 725RD, 725RL, CR1125

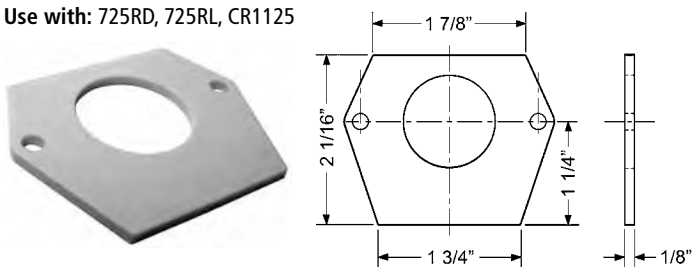

**WP726** 1/4" thickness  
Use with: 725RD, 725RL, CR1125

