



Vanity Cover

Installation Instructions


****** WARNING ******

Please thoroughly read the product warning below before installation to provide for a safe work environment.

1. Always consider the hazard to other people:
 - a. During installation, use warning signs, etc.
 - b. Don't work with people directly below the work area as equipment could fall and cause an injury
2. Be sure to securely fasten the access point to the wall or ceiling to before installing the vanity cover.

Installation Instructions

Vanity Cover

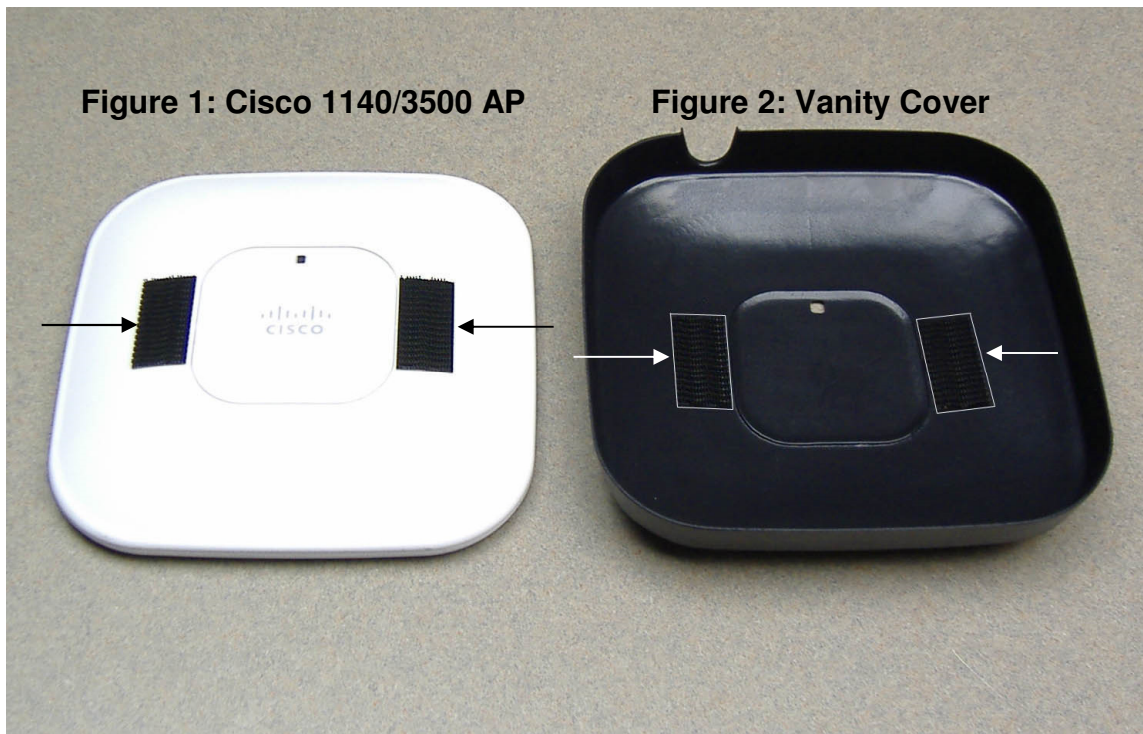

The following procedure should be used to attach the vanity cover to the access point (AP).

- 1) Prepare both surfaces by wiping with an alcohol swab to remove dirt and oil.
- 2) Remove the protective covering to expose the adhesive on the mushroom head fastener strips and place two strips as shown in Figure 1.
- 3) Repeat the procedure for the vanity cover, making sure the strips align with the ones already attached to the AP as shown in Figure 2.
- 4) Place the vanity cover onto the AP and press firmly to lock the mushroom head fastener strips together. Note that the mushroom head fastener strips have significant holding power and removing the cover should be somewhat difficult.

NOTE: The LED hole can be covered with a piece of electrical tape, and/or a new LED hole can be drilled if necessary.