


**INSTRUCTIONS
FOR REPLACING
THE ELASTIC IN
TYPE RER
ELASTIC
RETAINERS**

NOTE:


The following replacement sequence shows the base removed from the harness board; however, the elastic can also be replaced without removing the base from the board.

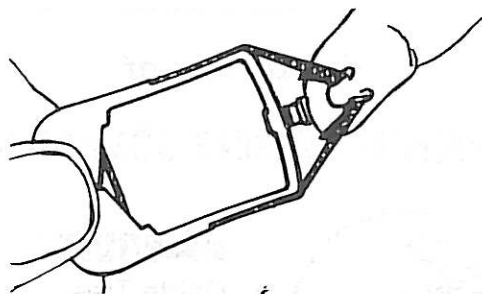

4 Loop free end of elastic around wire form.




5 Slip wire form around button on the white retainer arms.

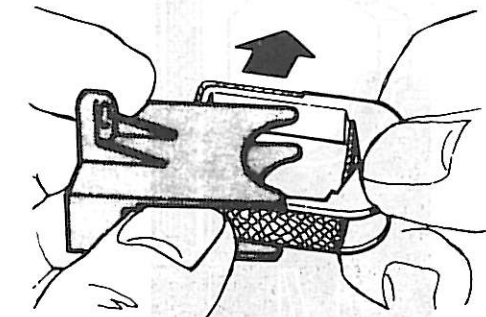


- 1**
- With one hand hold black base between your middle and index fingers, while using your thumb to push white retainer arms.
 - With your other hand, pull white retainer arms in opposite direction that your thumb is pushing; white piece will then snap out.

2 Unhook worn elastic or wire form from button at bottom of white retainer arms and discard.

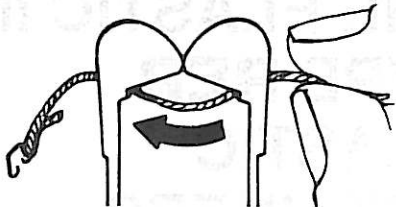

3 Thread new elastic through white retainer arms and wrap around bottom edge.

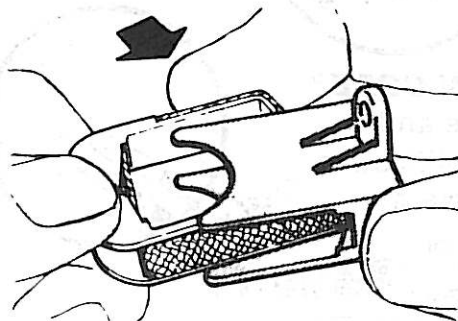

6 The bottom on the white retainer arms should be inserted into the black base and snapped into place.