

1. INTRODUCTION

This instruction sheet covers installation procedures for the AMP* FLEX-MODE back-up plate, accessory clip, and adapter into Herman Miller† Modular Furniture.

NOTE

Dimensions are in millimeters [with inches in brackets]. Figures are for reference only and are not drawn to scale.

Reasons for reissue of this sheet are provided in Section 3, REVISION SUMMARY.

2. INSTALLATION PROCEDURES

2.1. Herman Miller Action Office 1 (see Figure 1)

1. Install accessory clip between raceway cover and bezel.
2. Put adapter into bezel/raceway cover.

NOTE

The adapter is required only when using standard FLEX-MODE kits which fit a panel opening of 34.0/35.6 X 67.4/69.9 mm [1.34/1.40 X 2.66/2.75 in.]

3. Install standard FLEX-MODE module into adapter.

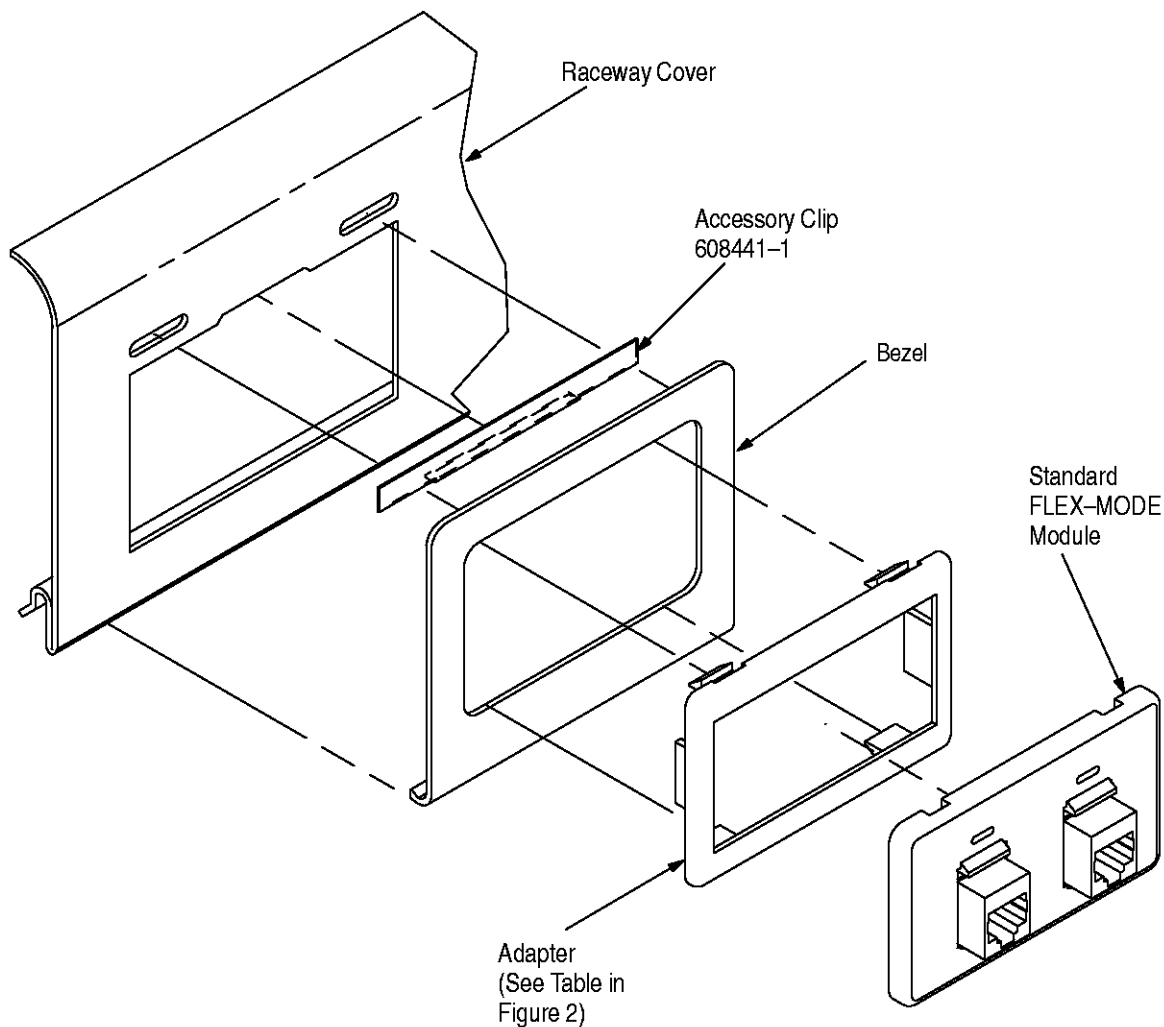


Figure 1

2.2. Herman Miller Action Office 2 (Encore) and Ethospace (see Figure 2)

1. Install back-up plate into raceway cover.

NOTE

For Ethospace baseline manufactured prior to 1991, use Accessory Clip 608441-1. For Ethospace beltline, the back-up plate is not required.

2. Put adapter into raceway cover.

NOTE

The adapter is required only when using standard FLEX-MODE kits which fit a panel opening of 34.0/35.6 X 67.4/69.9 mm [1.34/1.40 X 2.66/2.75 in.]


3. Install standard FLEX-MODE module into adapter.

3. REVISION SUMMARY

Revisions to this document include:

Per EC 0990-0105-99:

- Added adapter part number table to Figure 2

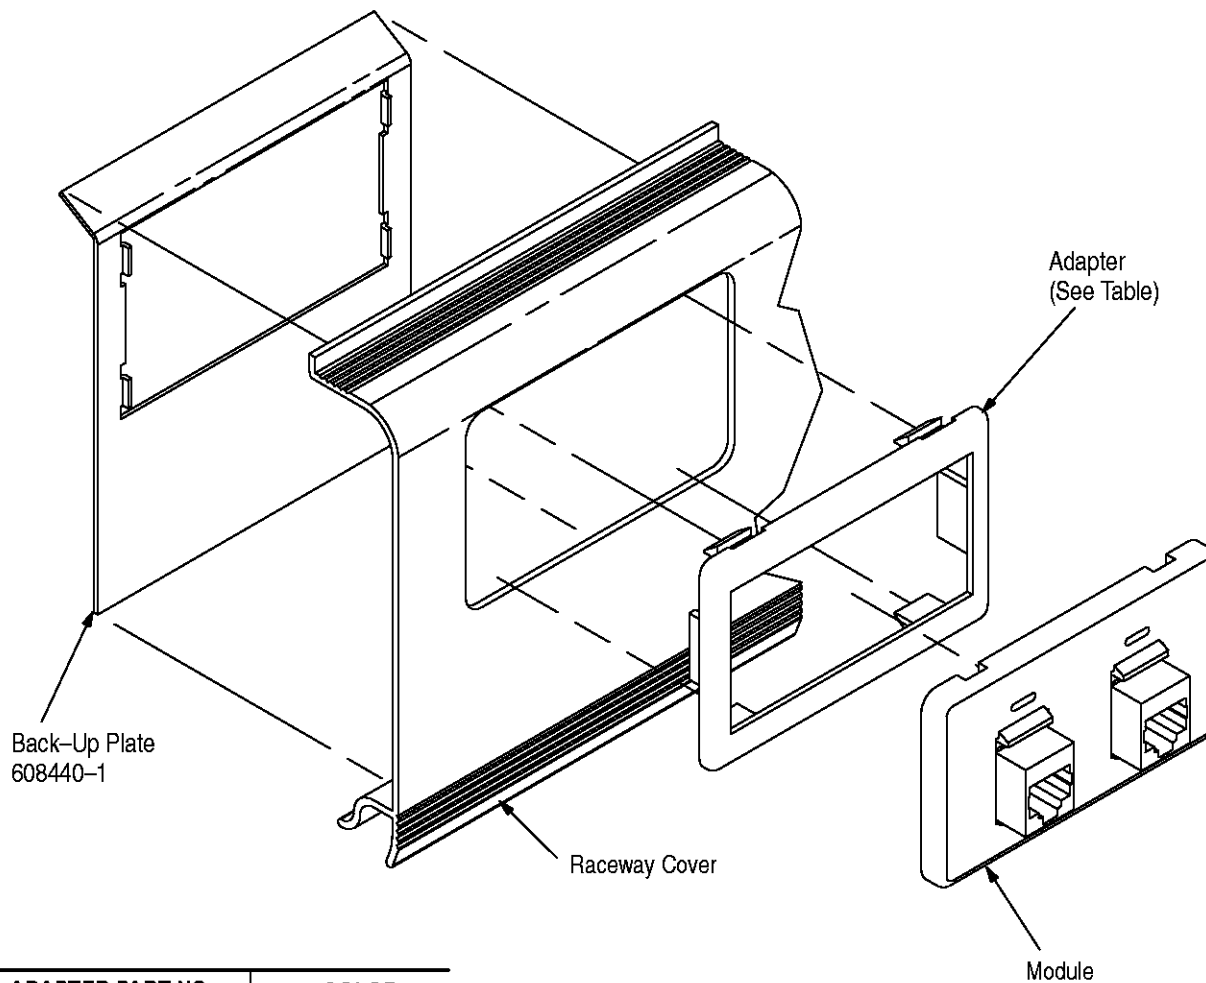

ADAPTER PART NO.	COLOR
558493-1	Black
558493-2	Soft White
558493-4	NEMA Gray

Figure 2