

HIGHWIRE™
POWERSTAR
 ETHERNET & POE-OVER-COAX



Ethernet and POE-over-coax to IP cameras without the need to re-cable

HIGHWIRE Powerstar uses existing coax cable to connect and power IP cameras without cabling costs. Easy to use and fast to install.

Re-use existing coax cable for IP cameras

Eliminate power cabling with POE-over-Coax™

Reliably power POE Plus cameras (25watts)

Instantly check connection and power status with SafeView™

Fully automatic - no configuration required

Simple fast, cost-effective installation

Full 100Base-T Ethernet performance



A true plug-and-play solution for connecting and powering IP cameras over legacy coaxial cabling

Our unique ultra low-power design and reliable power delivery enables long range extension even over the lowest-grade cable, such as the high-resistance copper-clad steel (CCS) types found in many legacy installations.

Reliability assured

HIGHWIRE Powerstar's unique ultra low-power design and efficient power delivery enables long range extension even over the lowest-grade cable, such as the high-resistance copper-clad steel (CCS) types found in many legacy installations. This means that legacy coax upgrades can be planned with confidence, while a quick check of the SafeView™

power display reaffirms that the devices' connection will continue to be reliable, whatever the cable used.

Reliable power delivery is also ensured at the source, where either dependable screw-terminal connections or a UPS-backed POE supply can be used. And for predictable network operation with no restrictions, HIGHWIRE delivers a

full 200Mbit/s of bandwidth at 300m (1000 ft) of RG-59 or 500m (1600 ft) of RG-11 coax.

If a custom application demands a greater range, HIGHWIRE coax sections can be connected in series to deliver network connections up to 4km (2.5 miles), at full bandwidth and with no extra power wiring.

POE-over-Coax™ Range

HIGHWIRE Powerstar delivers reliable power at long range, even over low-grade CCS cable, and Safeview™ confirms it automatically on installation. In most cases the full 25 watts required by the most powerful POE Plus cameras is available. The table below shows the range achievable by cable type, power source, and camera wattage.

| POWER SOURCE | POE-over-Coax™ Range | | | | | | | | | |
|--------------------|------------------------|----------------|----------------|----------------|------------|-----------------------|----------------|----------------|----------------|----------------|
| | POE OR POE PLUS SWITCH | | | | | VERACITY POWER SUPPLY | | | | |
| | 5 | 10 | 15 | 20 | 25 | 5 | 10 | 15 | 20 | 25 |
| RG-59 (22AWG CCS) | 750ft 225m | 420ft 125m | 330ft 100m | 200ft 60m | N/A N/A | 900ft 270m | 880ft 265m | 620ft 185m | 460ft 140m | 360ft 110m |
| RG-59 (22AWG core) | 1000ft 300m | 1000ft 300m | 880ft 265m | 650ft 195m | N/A N/A | 1000ft 300m | 1000ft 300m | 1000ft 300m | 1000ft 300m | 1000ft 300m |
| RG-59 (20AWG core) | 1000ft 300m | 1000ft 300m | 1000ft 300m | 1000ft 300m | N/A N/A | 1000ft 300m | 1000ft 300m | 1000ft 300m | 1000ft 300m | 1000ft 300m |
| RG-11 (14AWG core) | 1600ft 500m | 1600ft 500m | 1600ft 500m | 1600ft 500m | N/A N/A | 1600ft 500m | 1600ft 500m | 1600ft 500m | 1600ft 500m | 1600ft 500m |



Once HIGHWIRE Powerstar is connected SafeView™ will automatically indicate POE power

HIGHWIRE Powerstar adds the convenience of POE-over-Coax™ technology and gives you the reassurance of SafeView™ monitoring which displays the power available at the base unit without access the remote equipment.

Simply add power

With no need to configure IP addresses, set DIP switches, or make awkward measurements and calculations, installing HIGHWIRE Powerstar is so straightforward, all you need to do is plug it in.

In the most simple implementation, shown below, the BASE unit receives POE power from a standard POE switch or injector and transmits it down the coax. The CAMERA unit receives this power and forwards it on to the IP camera. No external power cabling is required, and all detection and setup occurs automatically.

If POE is not available, or for an extra

power boost at either end of the cable, just connect the optional power supply.

Installer friendly

HIGHWIRE Powerstar features Veracity's unique SafeView™ display, to provide IP camera installers with an instant and very easy-to-understand confirmation of correct operation from either end of the cable.

For example, the network link/activity and POE status of the IP camera can be viewed from the BASE unit, saving the time of accessing remote equipment.

Cable length and quality can be hard to predict or measure, especially in

legacy upgrade scenarios, which is why SafeView™ includes a reassuring bar-graph display of the POE power available, and a warning if the camera's requirement approaches it.

True POE Plus detection means that all POE (IEEE 802.3af) and POE Plus (IEEE 802.3at) cameras are fully supported, and non-POE equipment can be safely connected as well.

Careful POE-over-coax™ detection and management is also employed, to prevent accidental damage to legacy equipment and allow operation with other HIGHWIRE models.

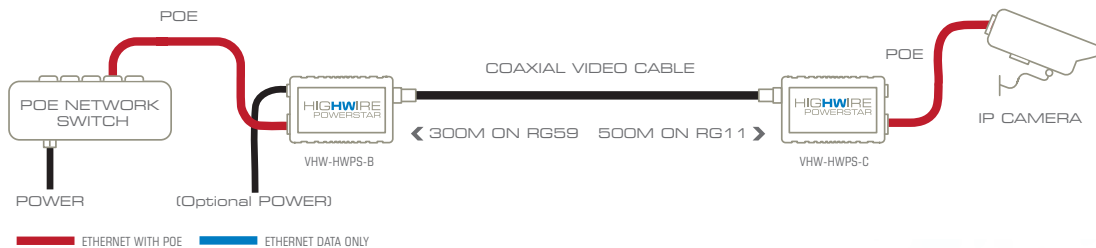


Diagram 1. HIGHWIRE Powerstar delivers Ethernet and POE over legacy coax, for maximum reliability with minimal wiring.



Example 1. HIGHWIRE Powerstar Rack bracket for 8 HIGHWIRE units in 1U.

TECHNICAL SPECIFICATION

HIGHWIRE™ POWERSTAR

| | |
|-------------------------------|--|
| POWER | |
| Unit power | 1.5 watts |
| BASE POE In | IEEE 802.3af (POE) or IEEE 802.3at (POE Plus), 2-event, power class 4 |
| CAMERA POE Out | IEEE 802.3af (POE) or IEEE 802.3at (POE Plus) |
| DC Power input | 40-57 volts, 0.7 amps maximum, class 2 isolated, detachable screw terminal |
| HIGHWIRE INTERFACE | |
| Connector type | BNC 75 Ohm |
| Cable type | Any 75 Ohm coaxial (other impedances supported) |
| Range | Up to 300m [1100ft] on RG59 or 500 metres [1600 feet] on RG11 at full rate. |
| Bandwidth | 200 Mbps (total up + down) |
| ETHERNET INTERFACE | |
| Connector type | RJ45 |
| Cable type | Patch or crossover, auto-detected |
| Rate | 100Base-T full-duplex with auto-negotiation |
| LEDS | |
| Status indicators | HIGHWIRE coax link Ethernet link/activity (BASE) Ethernet link/activity (CAMERA) POE-over-coax POE to camera Power available (5/10/15/20/25W) |
| Colours | Off - Disabled. Green - Enabled. Red - Fault. |
| PHYSICAL/ENVIRONMENTAL | |
| Dimensions | L 104mm W 54mm H24mm (84mm excluding connector) |
| Weight | 140g [5oz] |
| Operating temperature | -10°C to 50°C [14°F to 122°F] (delivering POE < 15w) -10°C to 40°C [14°F to 104°F] (delivering POE Plus > 15w) |
| Relative humidity | 85% non-condensing |
| Compliance | FCC, CE, RoHS |
| PRODUCT CODES | |
| VHW-HWPS-B | HIGHWIRE Powerstar™ Base unit, for installation at the switch side. Features 802.3af/802.3at POE or 57V DC power input & POE-over-coax™ output. |
| VHW-HWPS-C | HIGHWIRE Powerstar™ Camera unit, for installation at the camera side. Features POE-over-Coax™ or 57V DC power input & 802.3af/802.3at POE output. |
| VPSU-57V-800 | Optional 57V DC 800mA power supply. Recommended for maximum range and POE-over-coax™, or as a convenient alternative to a POE switch or injector. |
| VHW-WMB | Wall mounting bracket for a single HIGHWIRE unit. |
| VHW-DNB | DIN rail mounting bracket kit. |
| VHW-1U | Rack-mounting bracket for eight HIGHWIRE units in 1U. |



veracity

Americas & Asia Sales :

Veracity USA Inc.
65 Harristown Road
Glen Rock
NJ 07452
USA

Tel: 1-800-679-1590
Fax: 1-800-679-0714
www.veracityglobal.com
sales@veracityusa.com

EMEA Sales :

Veracity UK Ltd
Prestwick International Aerospace Park
4 Dow Road
Prestwick
KA9 2TU
UK

Tel +44 (0) 1292 264967
Fax +44 (0) 845 528 1081
www.veracityglobal.com
sales@veracityuk.com