

Installation Instructions

Model Number 1028-08-ANT5-F

Assembly Components:

- Enclosure Model 1028-08-ANT5-F assembly – 1 each
- Hanger Wire – 8 each
- 8-32 Screws – 4 each
- Keys for access door lock – 1 each
- Installation Instructions – 1 each
- Internal universal equipment mounting plate – 1 each
- T-bar Bracket – 1 each
- 1" Trade Size Hole Plugs – 3 each
- 1/2" Trade Size Hole Plugs – 4 each

If any of these items are missing, contact your Oberon representative.

Find a flat work surface to assemble the *enclosure* and any other network/cellular components prior to mounting in ceiling.

Step 1 – Place the *enclosure assembly* back side down on the work surface and keyed doorway unlocked. Remove the desired number of hole plugs on the sides and door of the *enclosure* if they are already installed.

⚠️IMPORTANT**** - *Determine the correct access point installation method based on the manufacturer.*

Step 2a – (For Cisco AP's Only) The mounting holes for Cisco AP's are located in the mounting plate. Standard Cisco mounting brackets as well as "Bracket 2" can be attached so the "Cisco" logo of the AP is parallel to the hinge. For "Bracket 1" the logo of the AP will be mounted perpendicular to the hinge. Securely fasten the *access point's mounting plate* to the mounting holes on the mounting plate of the enclosure using four (4) # 8 screws. Attach the *Access Point* to the mounting plate (Figure 1).

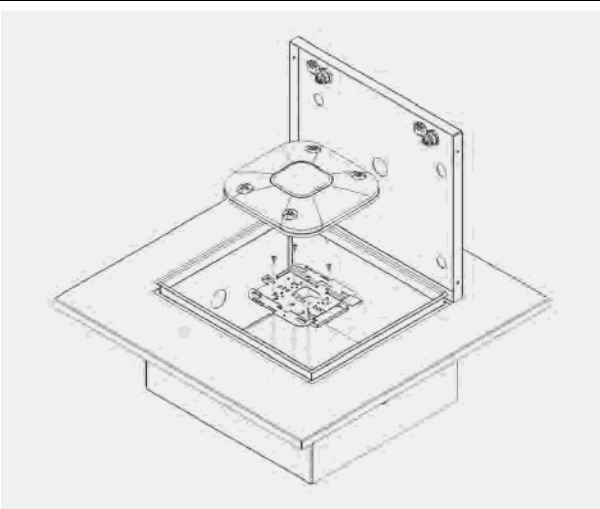


Figure 1

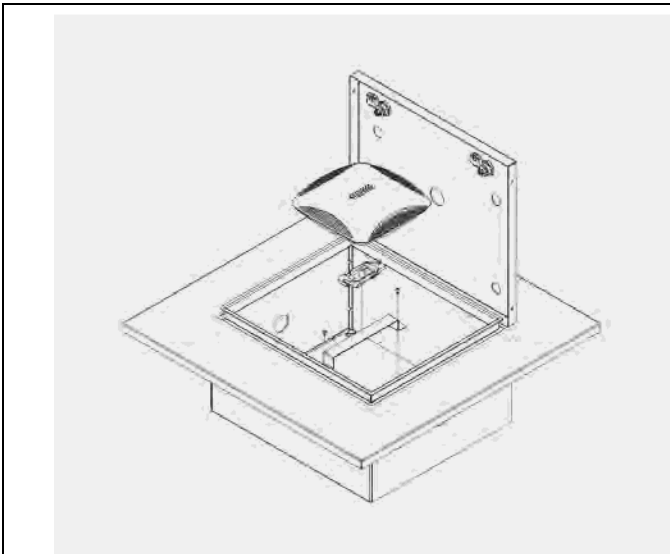


Figure 2

Step 2b – (Any manufacturer's access points) Install the provided "T-Bar" bracket by fastening two (2) #8 screws into the enclosure mounting plate. Attach the access point to the T-Bar bracket using the manufacturer's instructions for attaching the access point to a ceiling tile grid (T-Bar). (Figure 2).

Step 3 – (Optional) With the desired number of holes opened, attach antennas (such as Oberon's BMANT or DMDUAL) and DAS antennas by inserting the cables through the door holes. Fasten the antennas to the door per the antenna manufacturer's instructions. To retain the water and dust resistance of the enclosure, antennas should have a gasket to fill the opening. After installation, connect the *RF coax* cable from the *antenna* to the *access point* (Figure 3). If using Bulkhead connectors, use Oberon Bulkhead connectors with provided o-ring (P/N 35-NFBLKHD) to maintain water tightness.

The assembled unit is now ready for ceiling or wall installation.

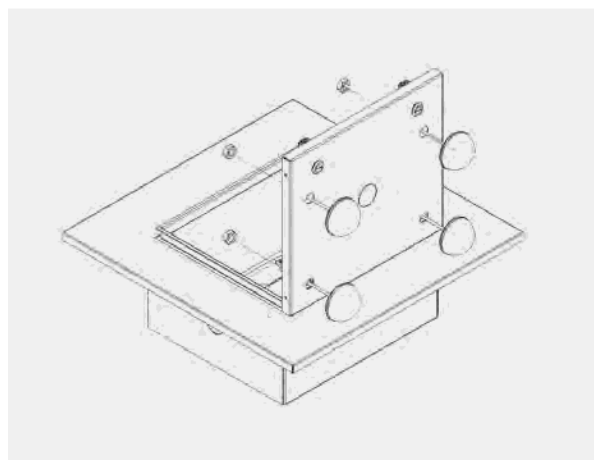


Figure 3

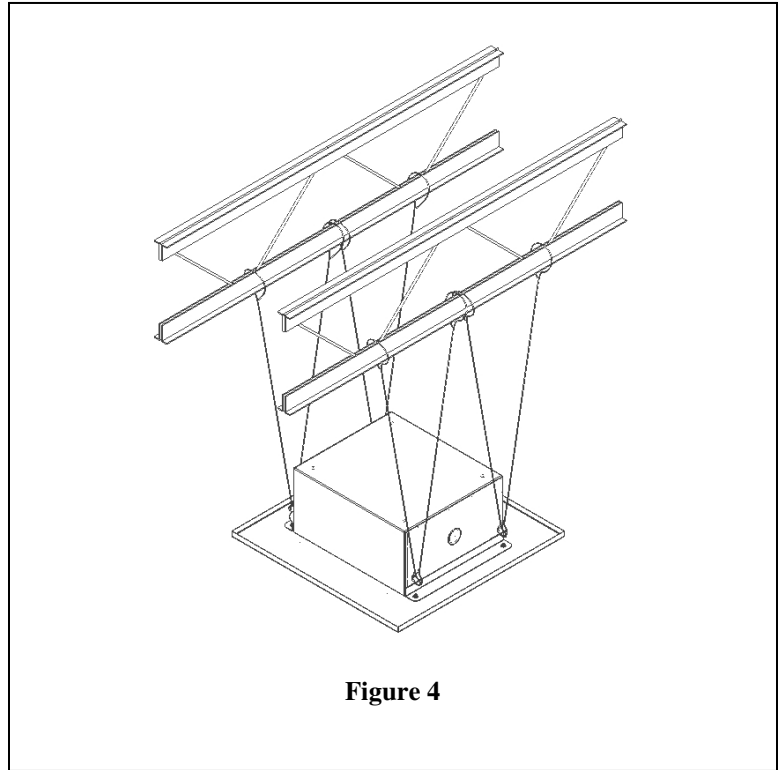


Figure 4


Step 4 – Run the data and power cable (if required) through the conduit connectors which have been installed in sides of the *access point enclosure*. In order to maintain a separation of signal and power, install the data and power cables through opposite sides of the enclosure. Snap the fire stop grommet around the cable and insert it into the conduit connector and pull the data cable through far enough to allow attachment to the access point (8" - 10"). Attach any additional data cables as necessary and power up the networked devices.

⚠ IMPORTANT**** - *This is an important safety feature that could prevent human injury or damage to the equipment should the unit become dislodged from the ceiling.*

Step 8 – Use hanger wires (included) to support the *enclosure*. Attach one end of the wire to the mounting brackets located along the edge of the back box and the other end to a permanent structural component of the building such as a joist. Two supporting grid wires should be attached to each corner. Reference Oberon's OPA 1638 drawing (at <http://oberonwireless.com/WebDocs/OPA-1638-10.pdf>).

Step 9 – Close and lock the access door. Extra force may be necessary to compress the gasket. The installation is now completed.

NOTE: Additional sealing precautions around edges of the enclosure may be necessary.

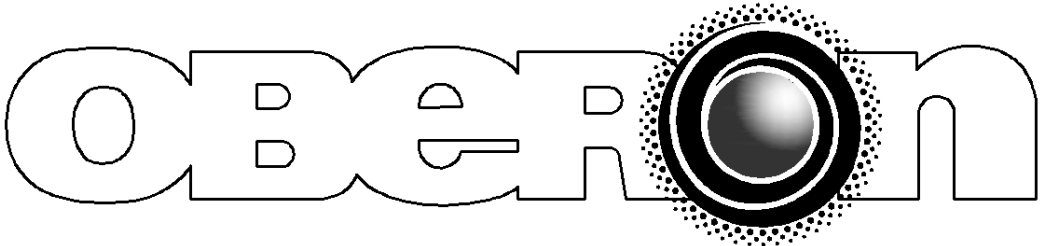

MODEL 1028-08-ANT5-F

Installation Instructions

**** WARNING ****

Please thoroughly read the product warning below before installation to provide for a safe work environment.

1. Ceiling mounted products should be installed in accordance with National Electric Code paragraphs 300.10 (Electrical Continuity of Metal Raceways and Enclosures) and 300.11 (Securing and Supporting). Independent support wires or other means must be used for the installation of this product in the ceiling. Acoustical, suspended, false, drop and concealed spline ceiling grid work is not designed to support the weight of this product. Oberon's ceiling mounted products have four support wire tabs on the back box. These tabs shall be used for supporting the product with independent support wires, wire rope, threaded rod, or other secure support means of adequate gauge and fire resistance.
2. When closing the enclosure access door, be sure that the cam lock is completely engaged to prevent the access door from accidentally swinging open.
3. When opening the enclosure door, be sure to support the door to prevent the door from accidentally falling open.
4. This enclosure has a maximum operating ambient of 55° C (131° F), the temperature within the enclosure may not exceed this temperature, depending on power dissipation within enclosure.
5. A minimum air clearance of 1" between the housing of the access point and the enclosure side walls must be maintained for the safe operation of the equipment.
6. This product is intended to be installed by trained personnel.
7. Only Listed ITE products and Listed AC Receptacles shall be installed within the enclosure.
8. This product is to be repaired by personnel trained by the manufacturer or returned to the manufacturer for repair or replacement.
9. Maximum weight to be installed in the unit is 44 lbs.
10. All knockouts, openings, and holes shall be sealed with a plug constructed of metal, or a non-metal material that complies with UL 2043 or UL 1479.
11. All unused mounting holes should be sealed with tape or other material that complies with UL 1479.
12. If AC power is used inside the enclosure, connect the ground wire to the green ground screw located near the knockout in the backbox.

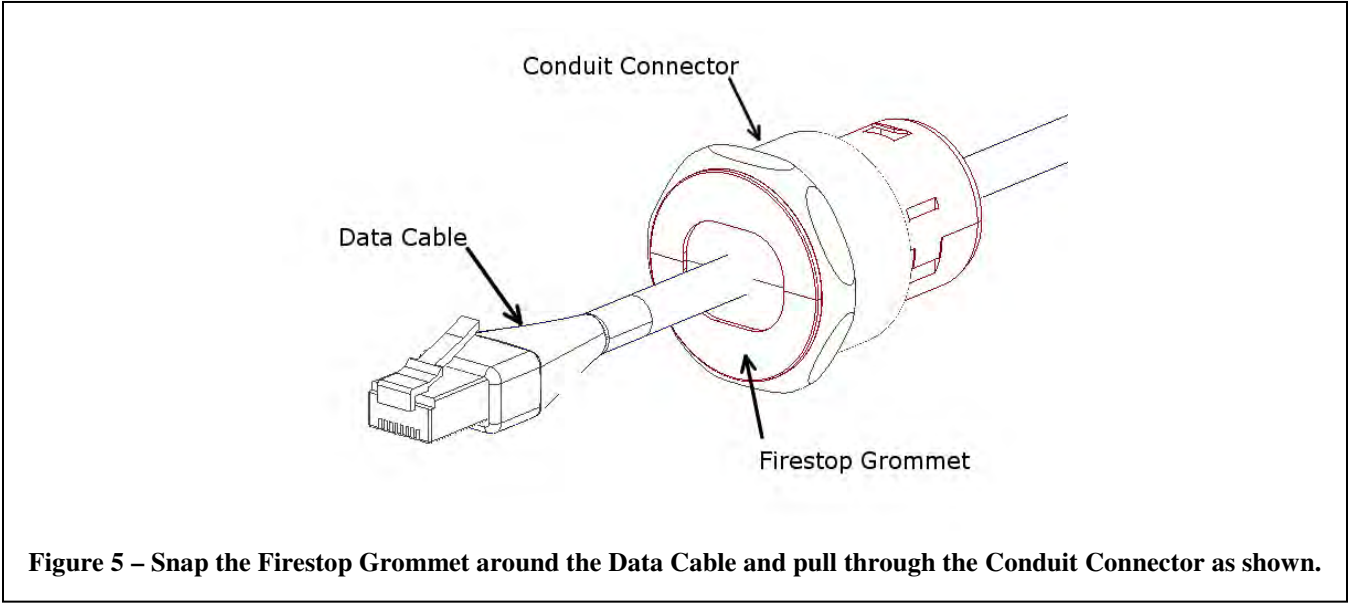


Figure 5 – Snap the Firestop Grommet around the Data Cable and pull through the Conduit Connector as shown.