

Model 295-001x



Features

- Two auto-dial numbers allow quick communication at the touch of a button.
- “Flash” button allows CLEAN PHONE® to use features of a PBX system.
- Completely smooth front panel is sealed with an overlay that keeps the phone particulate-free and makes cleaning quick and easy.
- Auto answer option allows clean room personnel to answer calls without leaving their stations.
- Oversized buttons allow easy operation for gloved hands. Button function is clearly indicated.
- Password Protected Programming
- Two (2) programmable control outputs
- SMART Technology allows central health/activity monitoring via TMA software
- UL Listed



Model 295-001x

The Clean Phone® Telephone's hands-free operation is ideal for clean room, clinical, or sanitary environments. Available in a flush-mount (295-001F) or wall-mount (295-001W) design, the Clean Phone can function in both standard or SMART operation mode. SMART (Self Monitoring And Reporting Technology) operation allows the telephone to be monitored for health and usage via our TMA software (purchased separately).

The visual graphics of the Clean Phone are printed on the reverse side of the overlay to prevent particulate shedding and insure longevity. Operation is simple, allowing placement of calls via two (2) programmable autodial buttons or accessing the full-function keypad for general purpose calling. A flash button is provided to access telephone system features. Each telephone is provided with a 5V dc power supply required for operation (120/240 Vac source required).


The Clean Phone's graphic overlay is designed to withstand wipe-down exposure to many chemicals typically used in sterile environments. Please follow the following link to our website for a complete listing of compatible (and non-compatible) solutions, solvents, and chemicals.

http://www.gai-tronics.com/literature/little/cleanPhone_chemicalList.pdf



Scan QR Code
for Chemical List.

Mounting Details

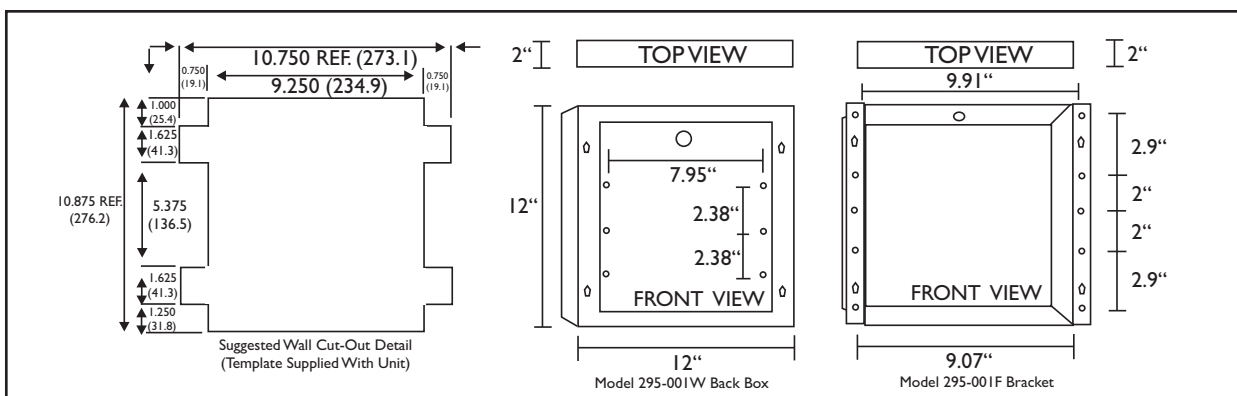

Specifications

TMA compatibility profile type	GTC SMART Hands-free
Auto-dial digit limit	24 digits

ELECTRICAL

Audio Output	1 kHz tone – 87 ± 3dB SPL @ 1 meter with 40 mA loop current
Battery voltage (tip and ring)	24 V dc or 48 V dc
Telephone line requirements	Loop start, central office (CO), or Analog station port (PBX, PABX, or KSU)
Minimum loop current	24 mA (35 mA recommended)
Auxiliary outputs (Isolate solid state switch)	48 V dc @ 125 mA, 28 V _{RMS} ac @ 80 mA _{RMS}
Signaling	DTMF 100 ms tone
Memory	Non-volatile EEPROM

MECHANICAL

Temperature range:

Operating	-4° F to +131° F (-20° C to +55° C)
Storage	-40° F to 158° F (-40° C to +70° C)

Relative Humidity Up to 95%, non-condensing

PCBA (printed circuit board assembly) Conformal coated

Model 295-001F Clean Phone®

Construction Front panel: 8 mil polyester over 16-gauge stainless steel
Mounting Bracket: 16-gauge stainless steel

Dimensions Front panel: 12.00 W x 12.00 H inches; (304.8 x 304.8 mm)
Mounting Bracket: 10.75 W x 10.88 H x 1.75 D inches (273.1 X 276.2 x 44.3 mm)

Model 295-001W Clean Phone®

Construction Front panel: 8 mil polyester over 16-gauge stainless steel
Mounting Bracket: 16-gauge stainless steel

Dimensions Front panel: 12.00 W x 12.00 H inches; (304.8 x 304.8 mm)
Back Enclosure: 12.00W x 12.00 H x 2.06 D inches (304.8 X 304.8 x 52.3 mm)

Shipping Weight & Dimensions	12.15 lbs., 17.00 x 17.00 x 11.00 inches
---	--

Approval Standards

Safety of Information Technology Equipment UL/CSA 60950

47 CFR Part 68

Certification Number US: ADGTE05BGTC2010
 Ringer Equivalence Number 5B
 Network connection (USOC) RJ11

IC Information (Canada)

IC Certification Number	822B-GTC2010
Ringer Equivalence	.5B
Connection Method	CA11A

Ordering Information

Model No.	DESCRIPTION:
295-001F	Flush-Mount Telephone
295-001W	Wall-Mount Telephone

Accessories & Options

Model No.	DESCRIPTION:
235-001	Maintenance Cover
40404-088	Replacement Plug-in Power Supply Kit

**GAI-TRONICS®**

USA Toll Free: 1 (800) 492-1212 Tel: (610) 777-1374 Fax: (610) 796-5954 www.gai-tronics.com
UK Tel: +44 (0)1283 500500 Fax: +44 (0)1283 500400 www.gai-tronics.co.uk
Italy Tel: +39 02 48601460 Fax: +39 02 93663110 www.gai-tronics.it
Malaysia Tel: +60-3-8945-4035 / 8945-7348 Fax: +60-3-8945-4675 www.gai-tronics.com
Australia Tel: 011-61-28-851-5000 Fax: 011-61-29-899-2490 www.austdac.com.au

