



## INSTALLATION AND OPERATION MANUAL

# CNGE2FE8MSPOE

ENVIRONMENTALLY HARDENED MANAGED ETHERNET SWITCH WITH (8) 10/100TX + (2) 10/100/1000TX RJ45 OR 100/1000 FX SFP PORTS

V1.04 – March 2010

CNGE2FE8MSPOE Managed Ethernet Switch provides transmission of (8) 10/100 BASE-TX and (2) 10/100/1000TX or 100/1000FX combo ports. Unlike most Ethernet switches, these environmentally hardened units are designed for deployment in difficult operating environments, and are available for use with either conventional CAT-5e copper or optical transmission media. The 8 electrical ports support the 10/100 Mbps Ethernet IEEE 802.3 protocol, and auto-negotiating and auto-MDI/MDIX features are provided for simplicity and ease of installation. All 8 ports support IEEE.802.3af based POE. 2 ports are 10/100/1000 configurable for copper or fiber media for use with multimode or single mode optical fiber, selected by optional SFP modules. These network managed layer 2 switches are optically (100/1000 BASE-FX) and electrically compatible with any IEEE 802.3 compliant Ethernet devices. Plug-and-play design ensures ease of installation, and no electrical or optical adjustments are ever required. The CNGE2FE8MSPOE incorporates LED indicators for monitoring the operating status of the managed switch and network.

## **FCC Warning**

This Equipment has been tested and found to comply with the limits for a Class-A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy. It may cause harmful interference to radio communications if the equipment is not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## **CE Mark Warning**

This is a Class-A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

# Content

---

<b>Chapter 1</b>	<b>Introduction .....</b>	<b>1</b>
1.1	Hardware Features .....	1
1.2	Software Features.....	5
1.3	Package Contents.....	8
<b>Chapter 2</b>	<b>Hardware Description .....</b>	<b>9</b>
2.1	Physical Dimension.....	9
2.2	Front Panel.....	9
2.3	Top View .....	10
2.4	LED Indicators.....	11
<b>Chapter 3</b>	<b>Hardware Installation.....</b>	<b>13</b>
3.1	Installation Steps.....	13
3.2	DIN-Rail Mounting.....	14
3.3	Wall Mount Plate Mounting .....	17
3.4	Wiring the Power Inputs .....	18
3.5	Wiring the Fault Alarm Contact .....	19
3.6	Cabling .....	20
<b>Chapter 4</b>	<b>Network Application .....</b>	<b>24</b>
4.1	X-Ring Application .....	26
4.2	Coupling Ring Application .....	27
4.3	Dual Homing Application.....	28
<b>Chapter 5</b>	<b>Console Management.....</b>	<b>29</b>
5.1	Connecting to the Console Port .....	29

5.2	Pin Assignment .....	29
5.3	Login in the Console Interface .....	30
5.4	CLI Management .....	32
5.5	Commands Level .....	32
<b>Chapter 6</b>	<b>Web-Based Management.....</b>	<b>34</b>
6.1	About Web-based Management .....	34
6.2	Preparing for Web Management.....	34
6.3	System Login .....	35
6.4	System Information .....	36
6.5	IP Configuration .....	37
6.6	DHCP Server .....	39
6.6.1	System configuration.....	40
6.6.2	Client Entries.....	41
6.6.3	Port and IP Bindings .....	42
6.7	TFTP .....	43
6.7.1	Update Firmware.....	43
6.7.2	Restore Configuration .....	44
6.7.3	Backup Configuration.....	45
6.8	System Event Log .....	46
6.8.1	Syslog Configuration .....	46
6.8.2	System Event Log—SMTP Configuration .....	48
6.8.3	System Event Log—Event Configuration.....	50
6.9	Fault Relay Alarm.....	52
6.10	SNTP Configuration .....	53

6.11	IP Security .....	57
6.12	User Authentication .....	59
6.13	Port Statistics .....	60
6.14	Port Control .....	62
6.15	Port Trunk .....	64
6.15.1	Aggregator setting .....	64
6.15.2	Aggregator Information .....	66
6.15.3	State Activity .....	72
6.16	Port Mirroring .....	74
6.17	Rate Limiting .....	75
6.18	VLAN configuration .....	77
6.18.1	Port-based VLAN .....	78
6.18.2	802.1Q VLAN .....	81
6.19	Rapid Spanning Tree .....	86
6.19.1	RSTP System Configuration .....	86
6.19.2	Port Configuration .....	88
6.20	SNMP Configuration .....	90
6.20.1	System Configuration .....	90
6.20.2	Trap Configuration .....	92
6.20.3	SNMPV3 Configuration .....	93
6.21	QoS Configuration .....	96
6.21.1	QoS Policy and Priority Type .....	96
6.21.2	Port-based Priority .....	98
6.21.3	COS Configuration .....	98
6.21.4	TOS Configuration .....	98

6.22	IGMP Configuration .....	100
6.23	X-Ring .....	102
6.24	LLDP Configuration .....	104
6.25	Security—802.1X/Radius Configuration ..	105
6.25.1	System Configuration .....	105
6.25.2	Port Configuration .....	107
6.25.3	Misc Configuration .....	109
6.26	MAC Address Table .....	110
6.26.1	Static MAC Address .....	110
6.26.2	MAC Filtering .....	112
6.26.3	All MAC Addresses .....	113
6.26.4	MAC Address Table—Multicast Filtering ..	114
6.27	Power over Ethernet .....	116
6.28	Factory Default .....	118
6.29	Save Configuration .....	119
6.30	System Reboot .....	120
<b>Troubles shooting.....</b>		<b>121</b>
<b>Appendix A—RJ45 Pin Assignment.....</b>		<b>122</b>
RJ45 Pin Assignments .....		122
RJ45 Pin Assignment of PoE .....		126
<b>Appendix B—Command Sets .....</b>		<b>128</b>
System Commands Set.....		128
Port Commands Set .....		131
Trunk Commands Set .....		134

VLAN Commands Set .....	135
Spanning Tree Commands Set.....	137
QOS Commands Set.....	140
IGMP Commands Set .....	140
Multicast Filtering Commands Set.....	141
LLDP Commands Set.....	142
Mac / Filter Table Commands Set.....	142
SNMP Commands Set .....	143
Port Mirroring Commands Set.....	145
802.1x Commands Set.....	146
TFTP Commands Set.....	148
SystemLog, SMTP and Event Commands Set ....	149
Fault Relay Alarm Commands Set.....	151
SNTP Commands Set.....	152
X-ring Commands Set.....	153
PoE Commands Set.....	154

# Chapter 1 Introduction

---

The 8 10/100TX + 2 10/100/1000T/Mini-GBIC Combo with 8 PoE Injectors Managed Industrial Switch is a cost-effective solution and meets the high reliability requirements demanded by industrial applications. Using fiber port can extend the connection distance that increases the network elasticity and performance. Besides, the industrial switch provides the PoE function for kinds of Powered Devices to receive power as well as data over the RJ45 cable.

## 1.1 Hardware Features

<b>Standard</b>	IEEE 802.3 10Base-T Ethernet IEEE 802.3u 100Base-TX/ FX IEEE802.3ab 1000Base-T IEEE802.3z Gigabit fiber IEEE802.3x Flow Control and Back Pressure IEEE802.3ad Port trunk with LACP IEEE802.3af Power over Ethernet IEEE802.1d Spanning Tree/ IEEE802.1w Rapid Spanning Tree IEEE802.1p Class of Service IEEE802.1Q VLAN Tag IEEE 802.1x User Authentication (Radius) IEEE802.1ab LLDP
<b>Switch Architecture</b>	Back-plane (Switching Fabric): 5.6Gbps Packet throughput ability(Full-Duplex): 8.3Mpps @64bytes
<b>Transfer Rate</b>	14,880pps for Ethernet port 148,800pps for Fast Ethernet port 1,488,000pps for Gigabit Fiber Ethernet port



<b>Packet Buffer</b>	1Mbits
<b>MAC Address</b>	8K MAC address table
<b>Flash ROM</b>	4Mbytes
<b>DRAM</b>	32Mbytes
<b>Connector</b>	10/100TX: 8 x RJ45 10/100/1000T/ Mini-GBIC Combo: 2 x RJ45 + 2 x 100/1000 SFP sockets RS-232 connector: RJ45 type
<b>Network Cable</b>	10Base-T: 2-pair UTP/STP Cat. 3, 4, 5/ 5E cable EIA/TIA-568 100-ohm (100m) 100Base-TX: 2-pair UTP/STP Cat. 5/ 5E cable EIA/TIA-568 100-ohm (100m) 1000Base-TX: 2-pair UTP/STP Cat. 5/ 5E cable EIA/TIA-568 100-ohm (100m)
<b>Optical Fiber</b>	Distance: Multi mode: 0 to 5 km, 1300 nm (50/125 $\mu$ m, 800 MHz*km) 0 to 4 km, 1300 nm (62.5/125 $\mu$ m, 500 MHz*km) Single mode: 0 to 40 km, 1310 nm (9/125 $\mu$ m, 3.5 PS/(nm*km)) 0 to 80 km, 1550 nm (9/125 $\mu$ m, 19 PS/(nm*km)) Min. TX Output: Multi mode: -20 dBm Single mode: 0 to 40 km, -5 dBm; 0 to 80 km, -5 dBm Max. TX Output: Multi mode: -14 dBm Single mode: 0 to 40 km, 0 dBm; 0 to 80 km, 0 dBm

	Sensitivity: -36 to -32 dBm (Single mode); -34 to -30 dBm (Multi mode)
<b>PoE pin assignment</b>	RJ45 port # 1~# 8 support IEEE 802.3af End-point, Alternative A mode. Per port provides 15.4W ability. Positive (VCC+): RJ45 pin 1,2. Negative (VCC-): RJ45 pin 3,6.
<b>Protocol</b>	CSMA/CD
<b>LED</b>	Per unit: Power (Green), Power 1 (Green), Power 2 (Green), Fault (Red), Master (Green), FWD (Green) 8 port 10/100: Link/Activity (Green), Full duplex/Collision (Amber) SFP port: LNK/ACT(Green), 1000T: LNK/ACT(Green), 1000M(Green)
<b>Power Supply</b>	External Power Supply: DC 48V, Redundant power DC 48V and connective removable terminal block for master and slave power
<b>Power Consumption</b>	116Watts (Full load)
<b>Operating Humidity</b>	5% to 95% (Non-condensing)
<b>Operating Temperature</b>	PIFE-802GBTMA: -10°C ~ 60°C PIFE-802GBTMAE: -40°C ~ 75°C
<b>Storage Temperature</b>	-40°C ~ 85°C
<b>Case Dimension</b>	IP-30, 72mm (W) x 105mm (D) x 152mm (H)
<b>Installation</b>	DIN rail and wall mount ear
<b>EMI</b>	FCC Class A, CE EN61000-4-2, CE EN61000-4-3, CE EN-

	61000-4-4, CE EN61000-4-5, CE EN61000-4-6, CE EN61000-4-8, CE EN61000-4-11, CE EN61000-4-12, CE EN61000-6-2, CE EN61000-6-4
<b>Safety</b>	UL, cUL, CE/EN60950-1
<b>Stability Testing</b>	IEC60068-2-32 (Free fall), IEC60068-2-27 (Shock), IEC60068-2-6 (Vibration)

## 1.2 Software Features

<b>Management</b>	SNMP v1 v2c, v3/ Web/Telnet/CLI
<b>SNMP MIB</b>	RFC 1215 Trap, RFC1213 MIBII, RFC 1157 SNMP MIB, RFC 1493 Bridge MIB, RFC 2674 VLAN MIB, RFC 1643 , RFC 1757, RSTP MIB, Private MIB, LLDP MIB
<b>VLAN</b>	Port Based VLAN IEEE 802.1Q Tag VLAN (256 entries)/ VLAN ID (Up to 4K, VLAN ID can be assigned from 1 to 4094.) GVRP (256 Groups)
<b>Port Trunk with LACP</b>	LACP Port Trunk: 4 Trunk groups/Maximum 4 trunk members
<b>LLDP</b>	Supports LLDP allowing switch to advertise its identification and capability on the LAN
<b>Spanning tree</b>	IEEE802.1d spanning tree IEEE802.1w rapid spanning tree.
<b>X-Ring</b>	Supports X-ring, Dual Homing and Couple Ring Topology Provides redundant backup feature and the recovery time below 20ms
<b>Quality of Service</b>	The quality of service determined by port, Tag and IPv4 Type of service, IPv4 Different Service
<b>Class of Service</b>	Supports IEEE802.1p class of service, per port provides 4 priority queues
<b>Port Security</b>	Supports 100 entries of MAC address for static MAC and another 100 for MAC filter

<b>Port Mirror</b>	Supports 3 mirroring types: "RX, TX and Both packet".
<b>IGMP</b>	Supports IGMP snooping v1,v2 256 multicast groups and IGMP query
<b>IP Security</b>	Supports 10 IP addresses that have permission to access the switch management and to prevent unauthorized intruder.
<b>Login Security</b>	Supports IEEE802.1X Authentication/RADIUS
<b>Bandwidth Control</b>	Support ingress packet filter and egress packet limit The egress rate control supports all of packet type and the limit rates are 100K~102400Kbps(10/100), 100K~256000Kbps(1000) Ingress filter packet type combination rules are Broadcast/Multicast/Unknown Unicast packet, Broadcast/Multicast packet, Broadcast packet only and all of packet. The packet filter rate can be set from 100K~102400Kbps(10/100), 100K~256000Kbps(1000)
<b>Flow Control</b>	Supports Flow Control for Full-duplex and Back Pressure for Half-duplex
<b>System Log</b>	Supports System log record and remote system log server
<b>SMTP</b>	Supports SMTP Server and 6 e-mail accounts for receiving event alert
<b>Relay Alarm</b>	Provides one relay output for port breakdown, power fail Alarm Relay current carry ability: 1A @ DC24V

<b>SNMP Trap</b>	<ol style="list-style-type: none"> <li>1. Cold start</li> <li>2. Link up/down</li> <li>3. X-Ring topology changed</li> <li>4. Authorization fail</li> <li>5. PD disconnect trap-PoE port event</li> </ol>
<b>DHCP</b>	Provides DHCP Client/ DHCP Server/ Port and IP Binding
<b>DNS</b>	Provides DNS client feature and supports Primary and Secondary DNS server
<b>SNTP</b>	Supports SNTP to synchronize system clock in Internet
<b>Firmware Update</b>	Supports TFTP firmware update, TFTP backup and restore.
<b>Configuration Upload/Download</b>	Supports binary format configuration file for system quick installation
<b>ifAlias</b>	Each port allows importing 128bits of alphabetic string of word on SNMP and CLI interface

## 1.3 Package Contents

Please refer to the package content list below to verify them against the checklist.

- 8 10/100TX + 2 10/100/1000T/Mini-GBIC Combo with 8 PoE Injectors Managed Industrial Switch x 1
- User manual x 1
- Pluggable Terminal Block x 1
- Mounting plate x 2
- RJ45 to DB9-Female cable x 1

Compare the contents of the industrial switch with the standard checklist above. If any item is damaged or missing, please contact the local dealer for service.

# Chapter 2 Hardware Description

---

In this paragraph, it will describe the Industrial switch's hardware spec, port, cabling information, and wiring installation.

## 2.1 Physical Dimension

8 10/100TX w/ X-Ring Managed Industrial Switch dimension (W x D x H) is **72mm x 105mm x 152mm**

## 2.2 Front Panel

The Front Panel of the 8 10/100TX w/ X-Ring Managed Industrial Switch is shown as below:



Front Panel of the industrial switch



## 2.3 Top View

The top panel of the 8 10/100TX w/ X-Ring Managed Industrial Switch has one terminal block connector of two DC power inputs and one fault alarm.



Top Panel of the industrial switch

## 2.4 LED Indicators

The diagnostic LEDs that provide real-time information of system and optional status are located on the front panel of the industrial switch. The following table provides the description of the LED status and their meanings for the switch.

LED	Color	Status	Meaning
<b>PWR</b>	Green	On	The switch unit is power on
		Off	No power
<b>R.M.</b>	Green	On	The industrial switch is the master of X-Ring group
		Off	The industrial switch is not a ring master in X-Ring group
<b>PWR1</b>	Green	On	Power 1 is active
		Off	Power 1 is inactive
<b>PWR2</b>	Green	On	Power 2 is active
		Off	Power 2 is inactive
<b>FAULT</b>	Red	On	Power or port failure
		Off	No failure
<b>P9, P10 (RJ45)</b>	Green (Upper LED)	On	A network device is detected.
		Blinking	The port is transmitting or receiving packets from the TX device.
		Off	No device attached
	Green	On	1000M

	(Lower LED)	Off	10/100M
<b>Link/Active (P9, P10 SFP)</b>	Green	On	The SFP port is linking
		Blinks	The port is transmitting or receiving packets from the TX device.
		Off	No device attached
<b>P1 ~ P8</b>	Green	On	A network device is detected.
		Blinking	The port is transmitting or receiving packets from the TX device.
		Off	No device attached
	Amber	On	The port is operating in full-duplex mode.
		Blinking	Collision of Packets occurs.
		Off	The port is in half-duplex mode or no device is attached.
<b>FWD (P1 ~ P8)</b>	Green	Green	A powered device is connected utilizing Power over Ethernet on the port
		Off	No device is connected or power forwarding fails

# Chapter 3 Hardware Installation

---

In this paragraph, we will describe how to install the 8 10/100TX w/ X-Ring Managed Industrial Switch and the installation points attended to it.

## 3.1 Installation Steps

1. Unpack the Industrial switch
2. Check if the DIN-Rail is screwed on the Industrial switch or not. If the DIN-Rail is not screwed on the Industrial switch, please refer to **DIN-Rail Mounting** section for DIN-Rail installation. If users want to wall mount the Industrial switch, please refer to **Wall Mount Plate Mounting** section for wall mount plate installation.
3. To hang the Industrial switch on the DIN-Rail track or wall.
4. Power on the Industrial switch. Please refer to the **Wiring the Power Inputs** section for knowing the information about how to wire the power. The power LED on the Industrial switch will light up. Please refer to the **LED Indicators** section for indication of LED lights.
5. Prepare the twisted-pair, straight through Category 5 cable for Ethernet connection.
6. Insert one side of RJ45 cable (category 5) into the Industrial switch Ethernet port (RJ45 port) and another side of RJ45 cable (category 5) to the network device's Ethernet port (RJ45 port), ex: Switch PC or Server. The UTP port (RJ45) LED on the Industrial switch will light up when the cable is connected with the network device. Please refer to the **LED Indicators** section for LED light indication.

**[NOTE]** Make sure that the connected network devices support MDI/MDI-X. If it does not support, use the crossover category-5 cable.


7. When all connections are set and LED lights all show in normal, the installation is complete.

## 3.2 DIN-Rail Mounting


The DIN-Rail is screwed on the industrial switch when out of factory. If the DIN-Rail is not screwed on the industrial switch, please see the following pictures to screw the DIN-Rail on the switch. Follow the steps below to hang the industrial switch.




Back Side

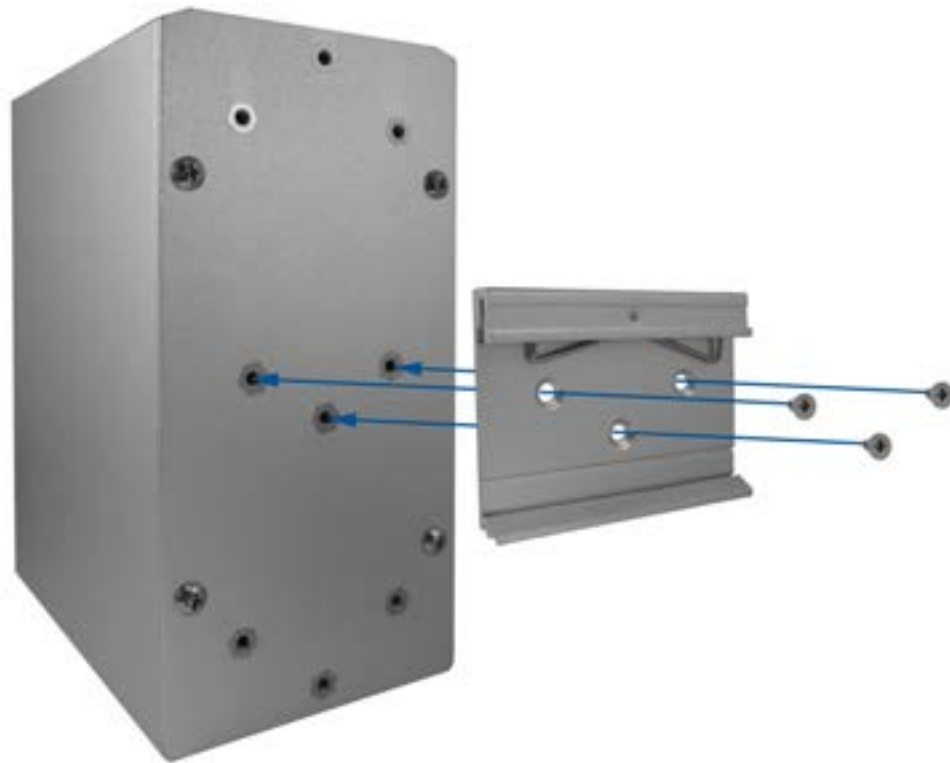

1. First, insert the top of DIN-Rail into the track.

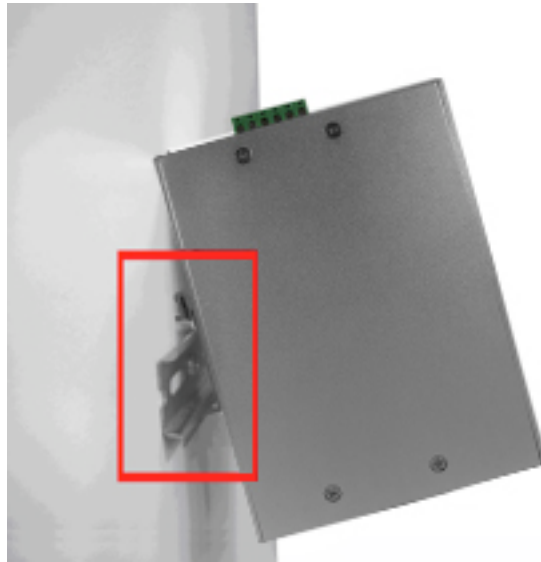

2. Then, lightly push the DIN-Rail into the track.

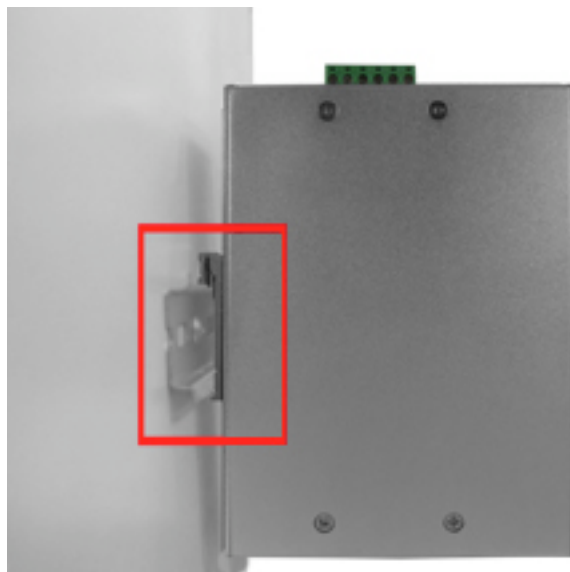


3. Check if the DIN-Rail is tightened on the track or not.
4. To remove the industrial switch from the track, reverse above steps.

### 3.3 Wall Mount Plate Mounting

Follow the steps below to mount the industrial switch with wall mount plate.

1. Remove the DIN-Rail from the industrial switch; loose the screws to remove the DIN-Rail.
2. Place the wall mount plate on the rear panel of the industrial switch.
3. Use the screws to screw the wall mount plate on the industrial switch.
4. Use the hook holes at the corners of the wall mount plate to hang the industrial switch on the wall.
5. To remove the wall mount plate, reverse the above steps.

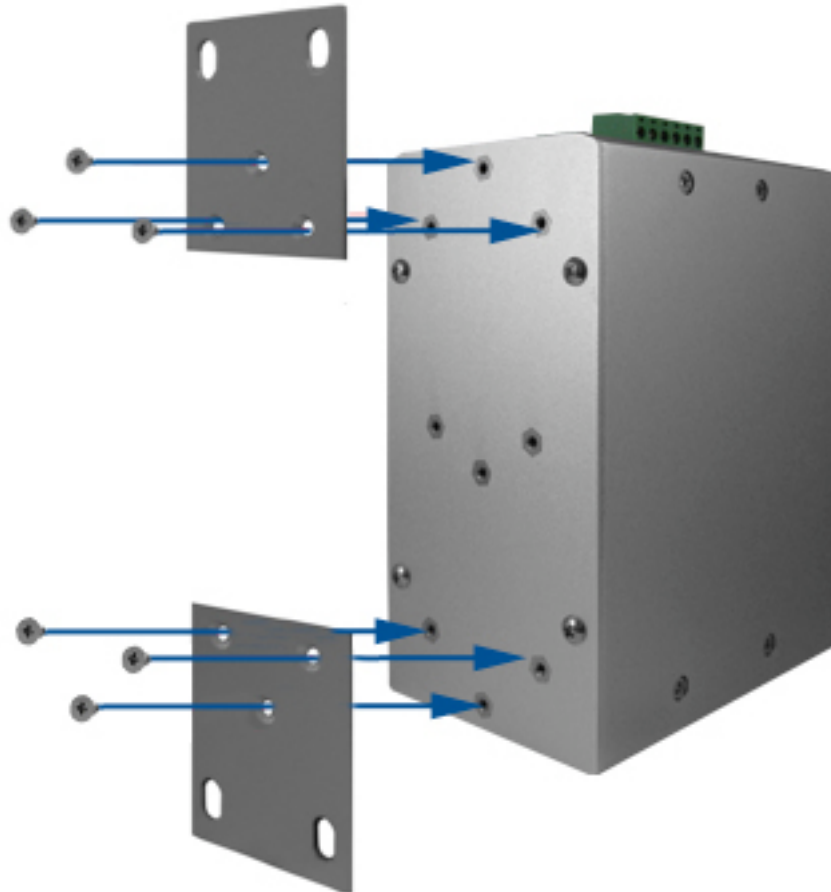



### 3.4 Wiring the Power Inputs

Please follow the steps below to insert the power wire.



1. Insert DC power wires into the contacts 1 and 2 for power 1, or 5 and 6 for power.



2. Tighten the wire-clamp screws for preventing the wires from losing.

**[NOTE]** The wire gauge for the terminal block should be in the range between 12 ~ 24 AWG.


### 3.5 Wiring the Fault Alarm Contact

The fault alarm contacts are in the middle of the terminal block connector as the picture shows below. Inserting the wires, the switch will detect the fault status of the power failure, or port link failure (available for managed model) and then forms an open circuit. The following illustration shows an application example for wiring the fault alarm contacts.



Insert the wires into the fault alarm contacts

**[NOTE]** The wire gauge for the terminal block should be in the range between 12 ~ 24 AWG.

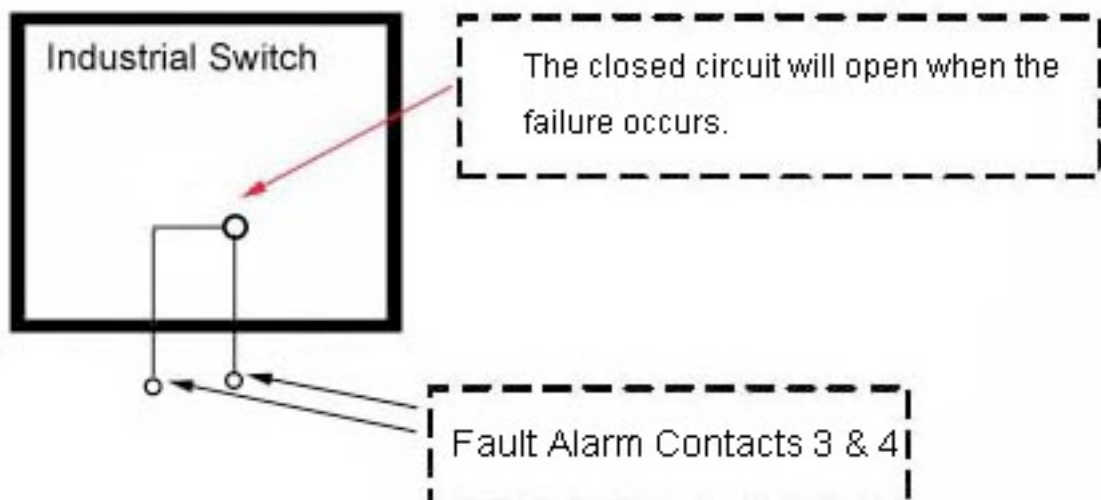

## 3.6 Cabling

- Use four twisted-pair, Category 5e or above cabling for RJ45 port connection. The cable between the switch and the link partner (switch, hub, workstation, etc.) must be less than 100 meters (328 ft.) long.
- Fiber segment using **single-mode** connector type must use 9/125  $\mu\text{m}$  single-mode fiber cable. User can connect two devices in the distance up to **30km**.
- Fiber segment using **multi-mode** connector type must use 50 or 62.5/125  $\mu\text{m}$  multi-mode fiber cable. User can connect two devices up to **2km** distances.
- **Gigabit Copper/SFP (mini-GBIC) combo port:**

The Industrial switch has the auto-detected Giga port—Gigabit Copper/SFP combo ports. The Gigabit Copper (10/100/1000T) ports should use Category 5e or above UTP/STP cable for the connection up to 1000Mbps. The small form-factor pluggable (SFP) is a compact optical transceiver used in optical communications for both telecommunication and data communications. The SFP slots supporting dual mode can switch the connection speed between 100 and 1000Mbps. They are used for connecting to the network segment with single or multi-mode fiber. You can choose the appropriate SFP transceiver to plug into the slots. Then use proper multi-mode or single-mode fiber according to the transceiver. With fiber optic, it transmits at speed up to 1000 Mbps and you can prevent noise interference from the system.


---

**Note**     *The SFP/Copper Combo port can't both work at the same time. The SFP port has the higher priority than copper port; if you insert the **1000M** SFP transceiver (which has connected to the remote device via fiber cable) into the SFP port, the connection of the accompanying copper port will link down. If you insert the **100M** SFP transceiver into the SFP port even without a fiber connection to the remote, the connection of the accompanying copper port will link down immediately.*

---

To connect the transceiver and LC cable, please follow the steps shown below:

First, insert the transceiver into the SFP module. Notice that the triangle mark is the bottom of the module.

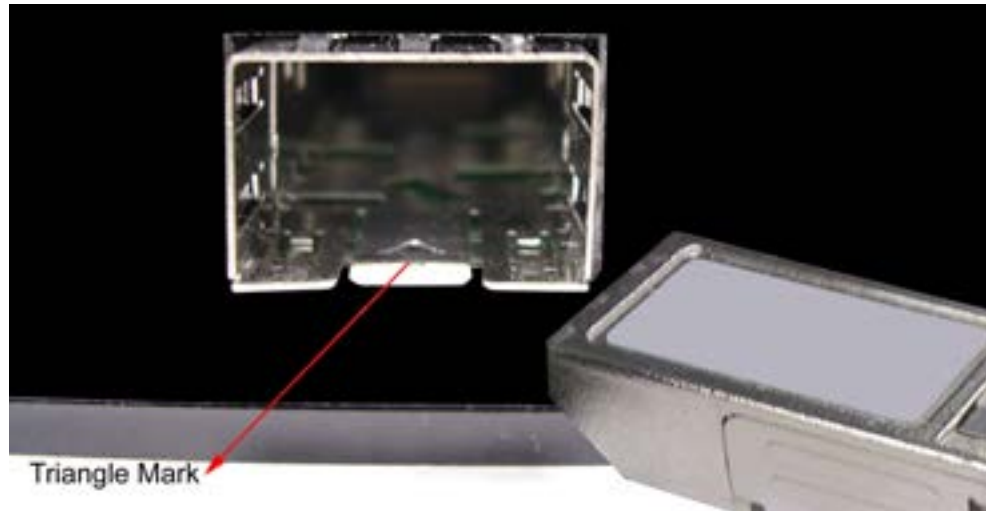

Transceiver to the SFP module



Transceiver Inserted


Second, insert the fiber cable of LC connector into the transceiver.



LC connector to the transceiver


To remove the LC connector from the transceiver, please follow the steps shown below:

First, press the upper side of the LC connector to release from the transceiver and pull it out.

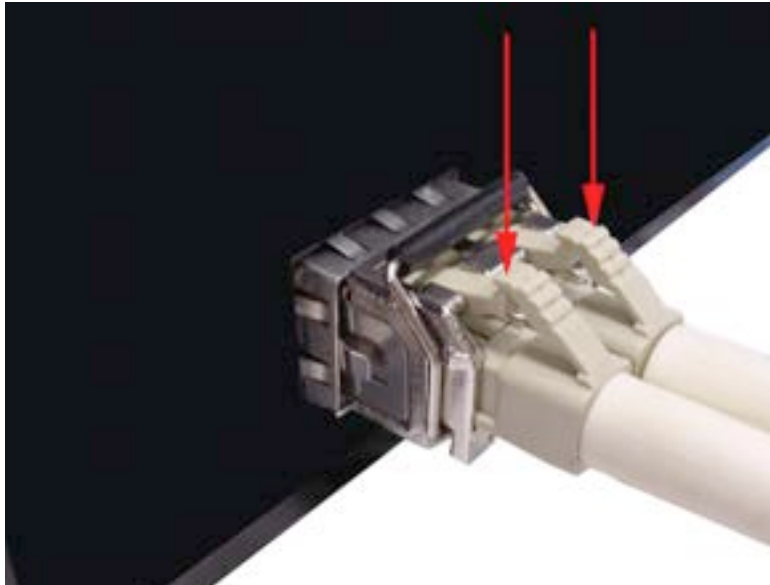

Remove LC connector

Second, push down the metal loop and pull the transceiver out by the plastic handle.

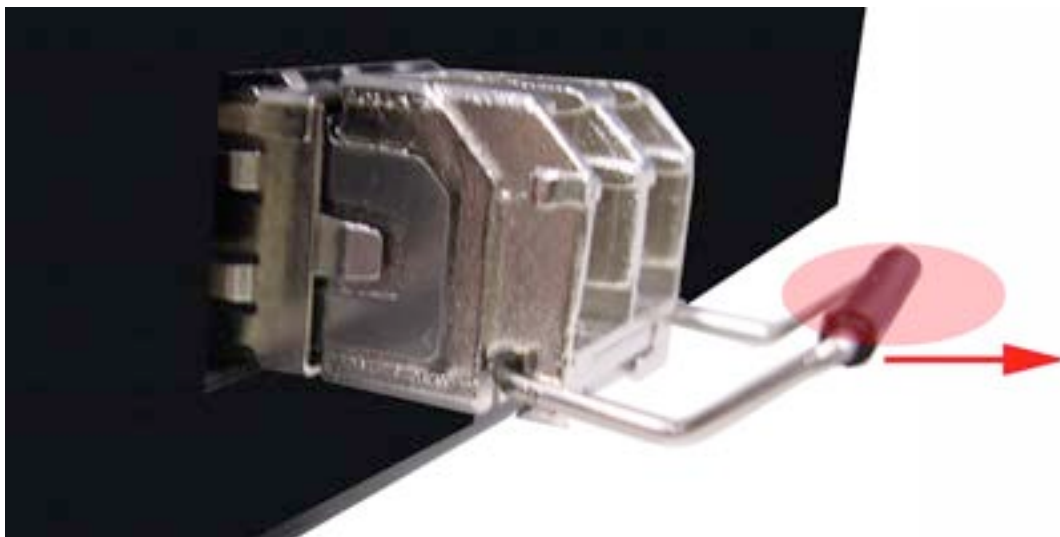


Pull out from the transceiver


# Chapter 4 Network Application

---

This chapter provides some sample applications to help user to have more actual idea of industrial switch function application. A sample application of the industrial switch is as below:

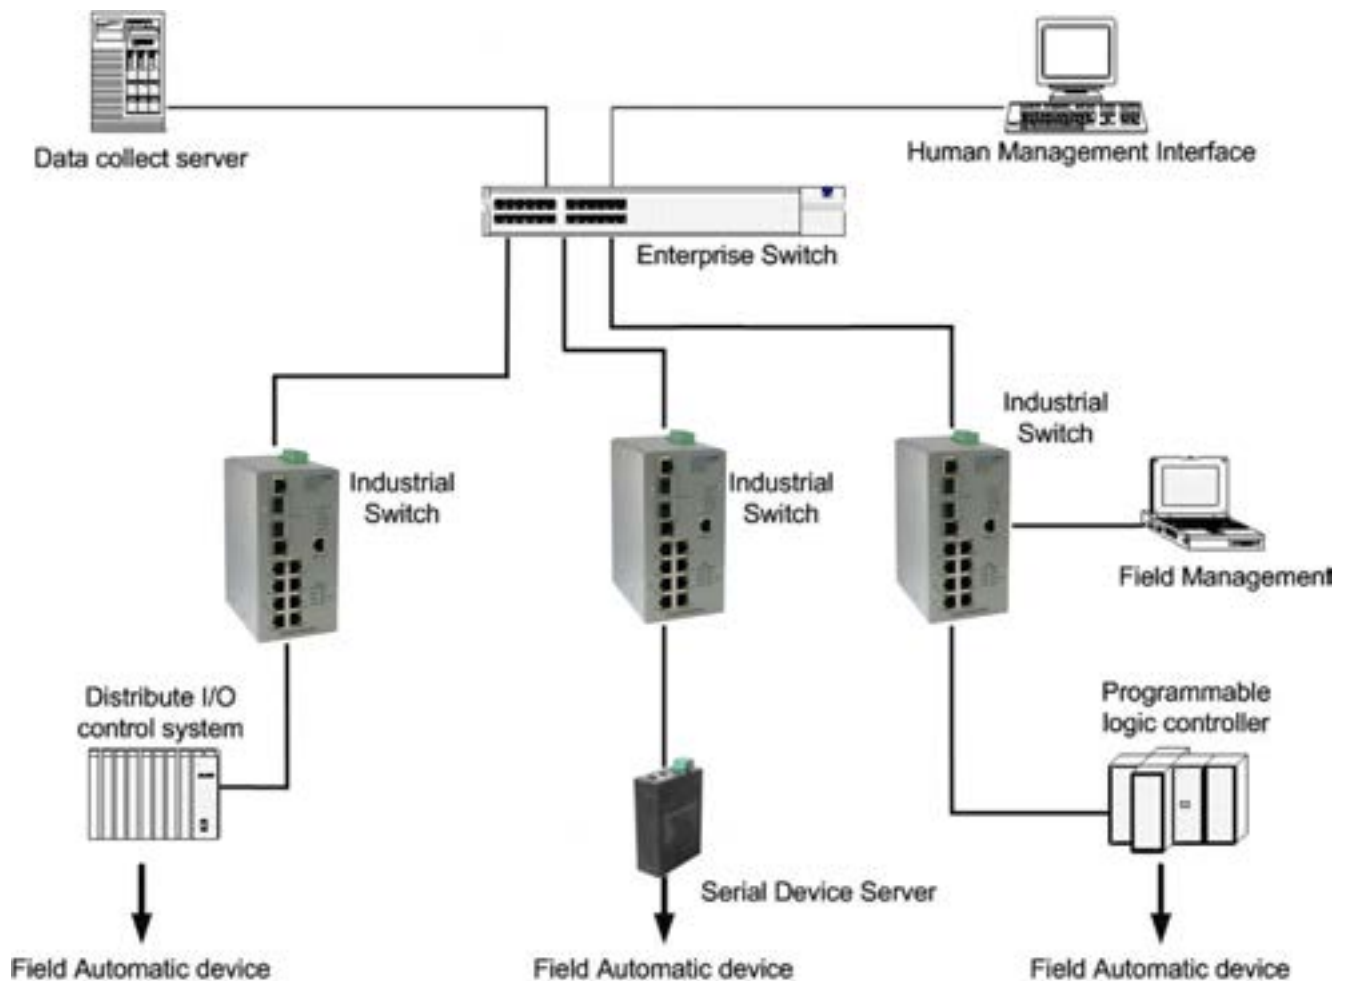


The illustration below shows an example of power over Ethernet application.

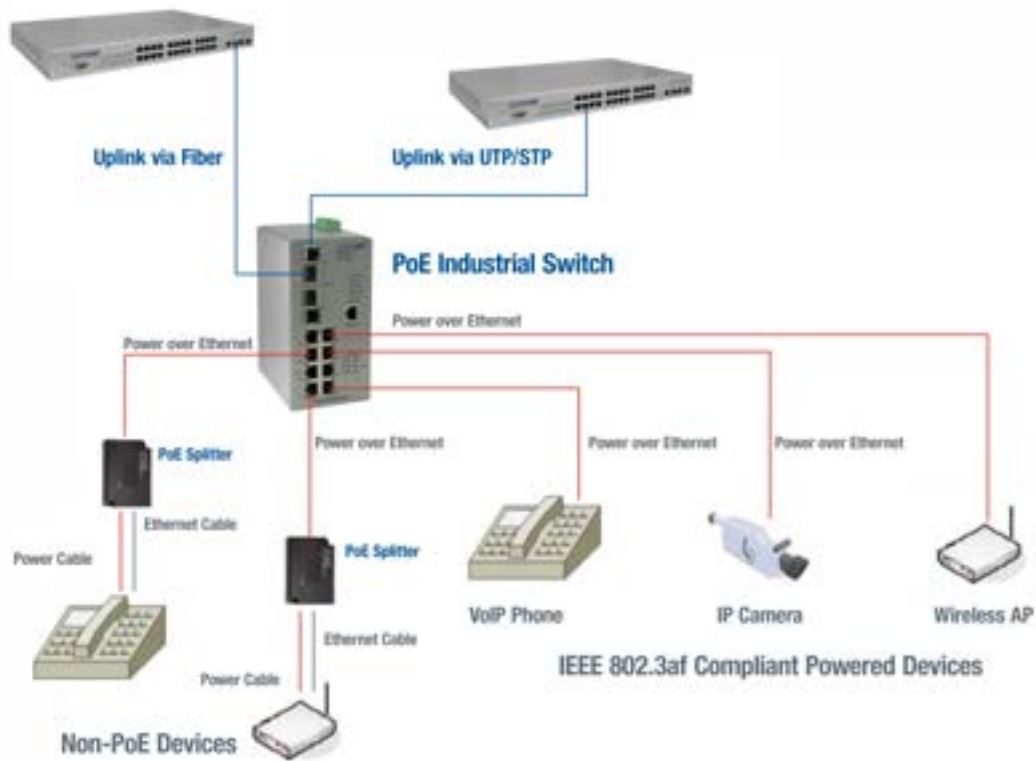




## 4.1 X-Ring Application

The industrial switch supports the X-Ring protocol that can help the network system to recovery from network connection failure within 20ms or less, and make the network system more reliable. The X-Ring algorithm is similar to spanning tree protocol (STP) algorithm but its recovery time is faster than STP. The following figure is a sample X-Ring application.

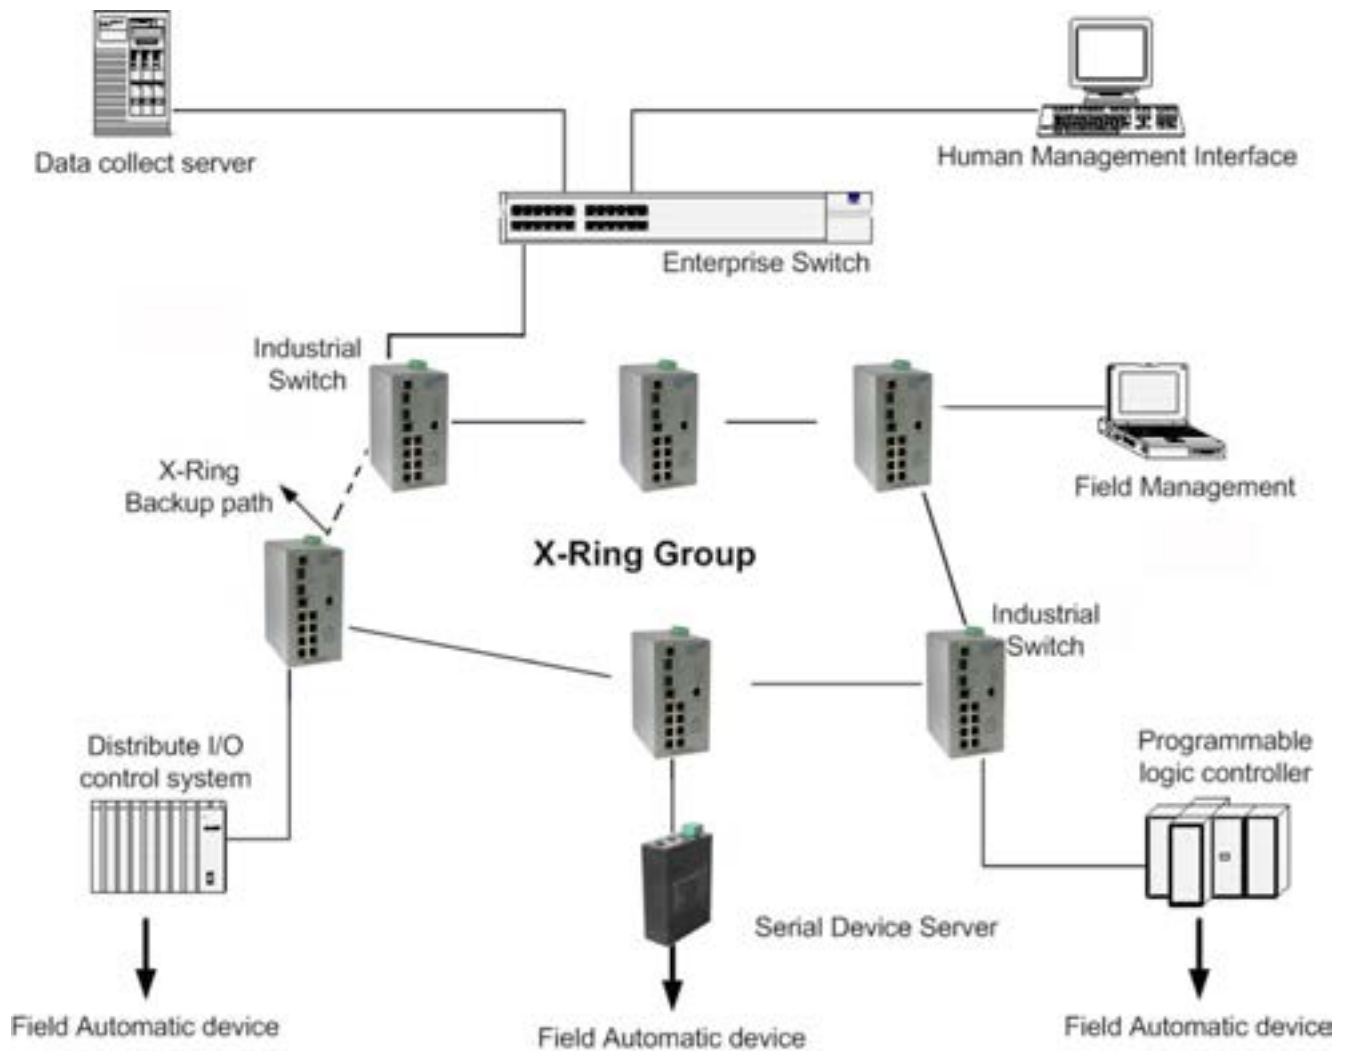

## 4.2 Coupling Ring Application

In the network, it may have more than one X-Ring group. By using the coupling ring function, it can connect each X-Ring for the redundant backup. It can ensure the transmissions between two ring groups not to fail. The following figure is a sample of coupling ring application.

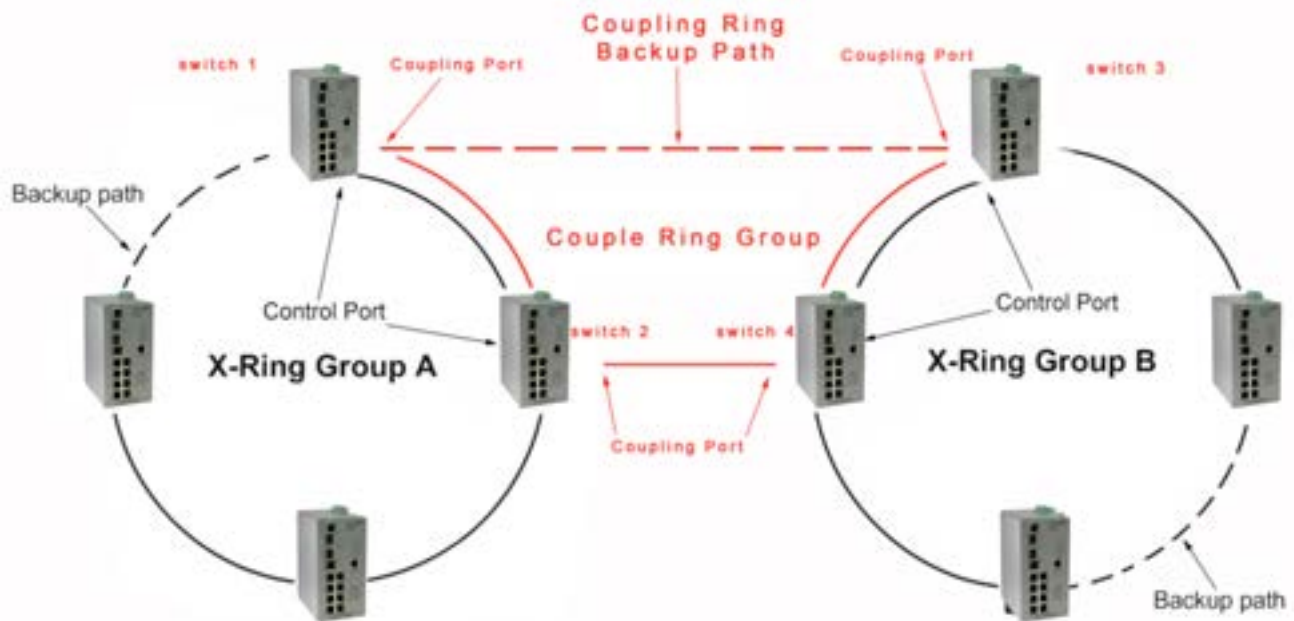


## 4.3 Dual Homing Application

Dual Homing function is to prevent the connection loss from between X-Ring group and upper level/core switch. Assign two ports to be the Dual Homing port that is backup port in the X-Ring group. The Dual Homing function only works when the X-Ring function is active. Each X-Ring group only has one Dual Homing port.

---

**[NOTE]** In Dual Homing application architecture, the upper level switches need to enable the Rapid Spanning Tree protocol.

---

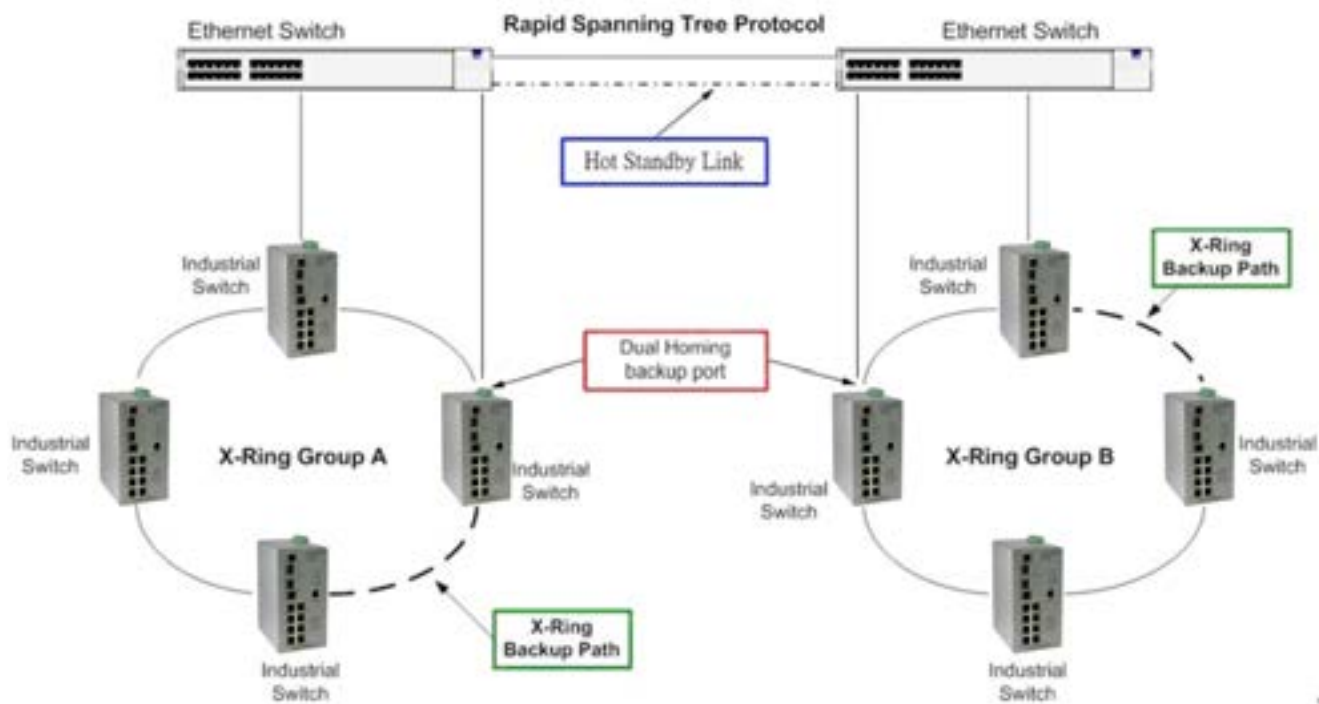


# Chapter 5 Console Management

---

## 5.1 Connecting to the Console Port

The supplied cable which one end is RS-232 connector and the other end is RJ45 connector. Attach the end of RS-232 connector to PC or terminal and the other end of RJ45 connector to the console port of the switch. The connected terminal or PC must support the terminal emulation program.

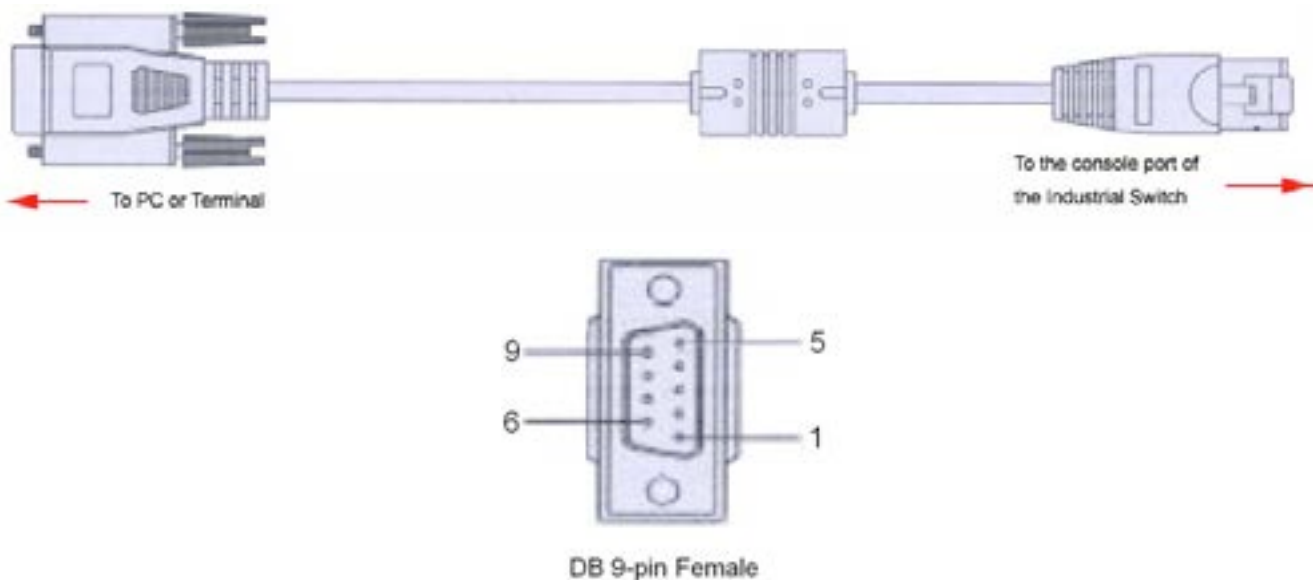

## 5.2 Pin Assignment

DB9 Connector	RJ45 Connector
NC	1 Orange/White
2	2 Orange
3	3 Green/White
NC	4 Blue
5	5 Blue/White
NC	6 Green

NC	7	Brown/White
NC	8	Brown

### 5.3 Login in the Console Interface

When the connection between Switch and PC is ready, turn on the PC and run a terminal emulation program or **Hyper Terminal** and configure its **communication parameters** to match the following default characteristics of the console port:

**Baud Rate: 9600 bps**

**Data Bits: 8**

**Parity: none**


**Stop Bit: 1**

**Flow control: None**



The settings of communication parameters

Having finished the parameter settings, click '**OK**'. When the blank screen shows up, press Enter key to have the login prompt appears. Key in '**admin**' (default value) for both User name and Password (use **Enter** key to switch), then press Enter and the Main Menu of console management appears. Please see below figure for login screen.

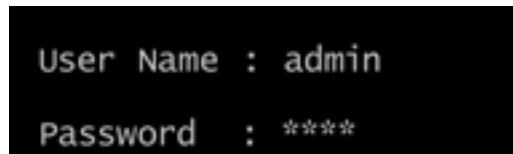A screenshot of a console login interface. It displays two lines of text: "User Name : admin" and "Password : \*\*\*\*". The text is white on a black background.

Console login interface

# 5.4 CLI Management

The system supports the console management—CLI command. After you log in on to the system, you will see a command prompt. To enter CLI management interface, type in “enable” command.

```
switch>e
switch#
```

CLI command interface

The following table lists the CLI commands and description.

# 5.5 Commands Level

Modes	Access Method	Prompt	Exit Method	About This Mode1
User EXEC	Begin a session with your switch.	switch>	Enter <b>logout</b> or <b>quit</b> .	The user commands available at the user level are a subset of those available at the privileged level. Use this mode to <ul style="list-style-type: none"><li>• Perform basic tests.</li><li>• Display system information.</li></ul>
Privileged EXEC	Enter the <b>enable</b> command while in User	switch#	Enter <b>disable</b> to exit.	The privileged command is the advanced mode. Use this mode to

	EXEC mode.			<ul style="list-style-type: none"> <li>• Display advanced function status</li> <li>• Save configuration</li> </ul>
Global Configuration	Enter the <b>configure</b> command while in privileged EXEC mode.	switch (config)#	To exit to privileged EXEC mode, enter <b>exit</b> or <b>end</b>	Use this mode to configure those parameters that are going to be applied to your switch.
VLAN database	Enter the <b>vlan database</b> command while in privileged EXEC mode.	switch (vlan)#	To exit to user EXEC mode, enter <b>exit</b> .	Use this mode to configure VLAN-specific parameters.
Interface configuration	Enter the interface of fast Ethernet command (with a specific interface) while in global configuration mode.	switch (config-if)#	<p>To exit to global configuration mode, enter <b>exit</b>.</p> <p>To exit to privileged EXEC mode, enter <b>exit</b> or <b>end</b>.</p>	Use this mode to configure parameters for the switch and Ethernet ports.



# Chapter 6 Web-Based Management

---

This section introduces the configuration and functions of the Web-Based management.

## 6.1 About Web-based Management

There is an embedded HTML web site residing in flash memory on CPU board of the switch, which offers advanced management features and allows users to manage the switch from anywhere on the network through a standard browser such as Microsoft Internet Explorer.

The Web-Based Management supports Internet Explorer 6.0 or later version. And, it is applied for Java Applets for reducing network bandwidth consumption, enhance access speed and present an easy viewing screen.


## 6.2 Preparing for Web Management

Before using the web management, install the industrial switch on the network and make sure that any one of the PCs on the network can connect with the industrial switch through the web browser. The industrial switch default value of IP, subnet mask, username and password are listed as below:

- IP Address: **192.168.10.1**
- Subnet Mask: **255.255.255.0**
- Default Gateway: **192.168.10.254**
- User Name: **admin**
- Password: **admin**

## 6.3 System Login

1. Launch the Internet Explorer on the PC
2. Key in “http://” “+” the IP address of the switch”, and then Press “**Enter**”.

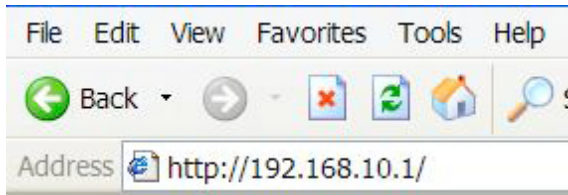


3. The login screen will appear right after
4. Key in the user name and password. The default user name and password are the same as ‘**admin**’.
5. Press **Enter** or click the **OK** button, and then the home screen of the Web-based management appears.




Login screen

## 6.4 System Information

User can assign the system name, description, location and contact personnel to identify the switch. The version table below is a read-only field to show the basic information of the switch.

- **System Name:** Assign the system name of the switch (The maximum length is 64 bytes)
- **System Description:** Describes the switch.
- **System Location:** Assign the switch physical location (The maximum length is 64 bytes).
- **System Contact:** Enter the name of contact person or organization.
- **Firmware Version:** Displays the switch's firmware version
- **Kernel Version:** Displays the kernel software version
- **MAC Address:** Displays the unique hardware address assigned by manufacturer (default)
- And then, click  .



The image shows a web-based configuration interface titled "System Information". It contains four input fields for configuration: "System Name" (value: CNGE2FE8MSPOE), "System Description" (value: 2 GE Port, 8 FE Port with POE Managed Switch), "System Location", and "System Contact". Below these fields are "Apply" and "Help" buttons. A message states: "Please use Save Configuration to permanently save the updates." At the bottom, a read-only table displays system information.

System Name	CNGE2FE8MSPOE
System Description	2 GE Port, 8 FE Port with POE Managed Switch
System Location	
System Contact	


  

Firmware Version	v2.01
Kernel Version	v2.76
MAC Address	00223B030676

Switch settings interface

## 6.5 IP Configuration

The switch is a network device which needs to be assigned an IP address for being identified on the network. Users have to decide a means of assigning IP address to the switch.

- **DHCP Client:** Enable or disable the DHCP client function. When DHCP client function is enabled, the switch will be assigned an IP address from the network DHCP server. The default IP address will be replaced by the assigned IP address on DHCP server. After the user clicks **Apply**, a popup dialog shows up to inform the user that when the DHCP client is enabled, the current IP will lose and user should find the new IP on the DHCP server.
- **IP Address:** Assign the IP address that the network is using. If DHCP client function is enabled, this switch is configured as a DHCP client. The network DHCP server will assign the IP address to the switch and display it in this column. The default IP is 192.168.10.1 or the user has to assign an IP address manually when DHCP Client is disabled.
- **Subnet Mask:** Assign the subnet mask to the IP address. If DHCP client function is disabled, the user has to assign the subnet mask in this column field.
- **Gateway:** Assign the network gateway for the switch. If DHCP client function is disabled, the user has to assign the gateway in this column field. The default gateway is 192.168.10.254.
- **DNS1:** Assign the primary DNS IP address.
- **DNS2:** Assign the secondary DNS IP address.
- And then, click .

# IP Configuration

DHCP Client :

IP Address	192.168.10.1
Subnet Mask	255.255.255.0
Gateway	192.168.10.10
DNS1	0.0.0.0
DNS2	0.0.0.0

Please use Save Configuration to permanently save the updates.


IP configuration interface

## 6.6 DHCP Server

DHCP is the abbreviation of Dynamic Host Configuration Protocol that is a protocol for assigning dynamic IP addresses to devices on a network. With dynamic addressing, a device can have a different IP address every time it connects to the network. In some systems, the device's IP address can even change while it is still connected. DHCP also supports a mix of static and dynamic IP addresses. Dynamic addressing simplifies network administration because the software keeps track of IP addresses rather than requiring an administrator to manage the task. This means that a new computer can be added to a network without the hassle of manually assigning it a unique IP address.

The system provides the DHCP server function. Having enabled the DHCP server function, the switch system will be configured as a DHCP server.

## 6.6.1 System configuration

- **DHCP Server:** Enable or Disable the DHCP Server function. Enable—the switch will be the DHCP server on your local network.
- **Low IP Address:** Type in an IP address. Low IP address is the beginning of the dynamic IP range. For example, dynamic IP is in the range between 192.168.10.100 ~ 192.168.10.200. In contrast, 192.168.10.100 is the Low IP address.
- **High IP Address:** Type in an IP address. High IP address is the end of the dynamic IP range. For example, dynamic IP is in the range between 192.168.10.100 ~ 192.168.10.200. In contrast, 192.168.10.200 is the High IP address.
- **Subnet Mask:** Type in the subnet mask of the IP configuration.
- **Gateway:** Type in the IP address of the gateway in your network.
- **DNS:** Type in the Domain Name Server IP Address in your network.
- **Lease Time (sec):** It is the time period that system will reset the dynamic IP assignment to ensure the dynamic IP will not been occupied for a long time or the server doesn't know that the dynamic IP is idle.
- And then, click .



DHCP Server - System Configuration	
System Configuration	
DHCP Server : <span>Disable</span>	
Low IP Address	192.168.10.100
High IP Address	192.168.10.200
Subnet Mask	255.255.255.0
Gateway	192.168.10.254
DNS	0.0.0.0
Lease Time (sec)	86400


Apply Help

Please use Save Configuration to permanently save the updates.

DHCP Server Configuration interface

## 6.6.2 Client Entries

When the DHCP server function is enabled, the system will collect the DHCP client information including the assigned IP address, the MAC address of the client device, the IP assigning type, status and lease time.

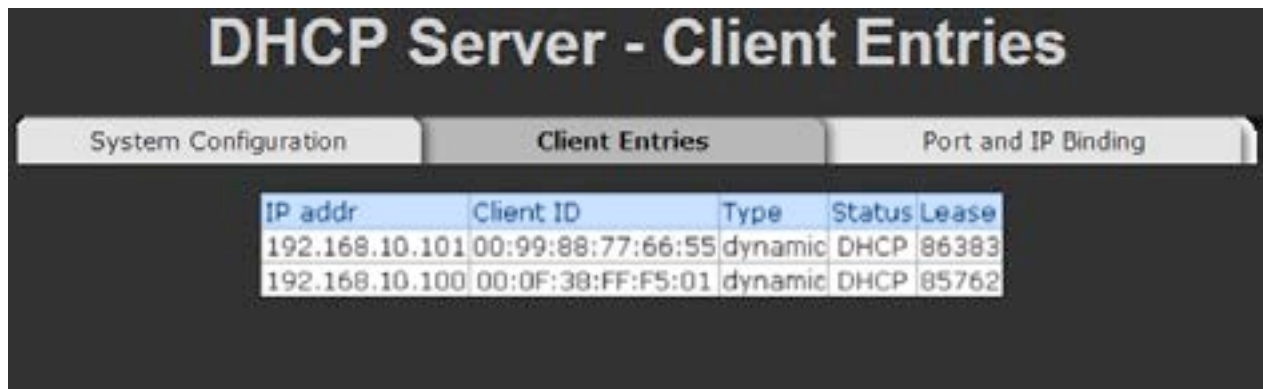

The screenshot displays the 'DHCP Server - Client Entries' interface. It features three tabs: 'System Configuration', 'Client Entries' (which is selected), and 'Port and IP Binding'. Below the tabs is a table with the following data:


IP addr	Client ID	Type	Status	Lease
192.168.10.101	00:99:88:77:66:55	dynamic	DHCP	86383
192.168.10.100	00:0F:38:FF:F5:01	dynamic	DHCP	85762

DHCP Client Entries interface



### 6.6.3 Port and IP Bindings

Assign the dynamic IP address bound with the port to the connected client. The user is allowed to fill each port column with one particular IP address. When the device is connecting to the port and asks for IP assigning, the system will assign the IP address bound with the port.

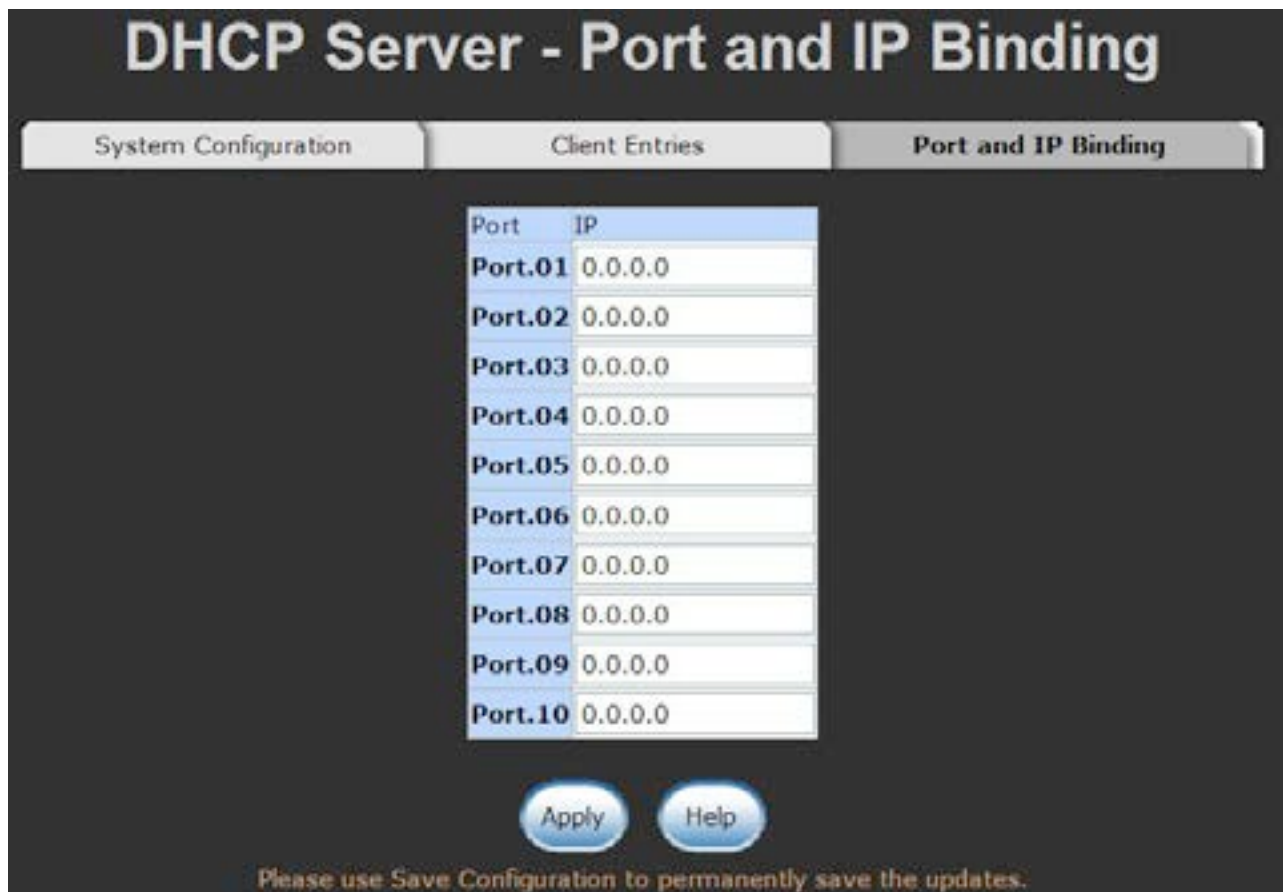

Port	IP
Port.01	0.0.0.0
Port.02	0.0.0.0
Port.03	0.0.0.0
Port.04	0.0.0.0
Port.05	0.0.0.0
Port.06	0.0.0.0
Port.07	0.0.0.0
Port.08	0.0.0.0
Port.09	0.0.0.0
Port.10	0.0.0.0

Apply Help


Please use Save Configuration to permanently save the updates.

Port and IP Bindings interface

## 6.7 TFTP

It provides the functions allowing the user to update the switch firmware via the Trivial File Transfer Protocol (TFTP) server. Before updating, make sure the TFTP server is ready and the firmware image is located on the TFTP server.

### 6.7.1 Update Firmware


- **TFTP Server IP Address:** Type in your TFTP server IP.
- **Firmware File Name:** Type in the name of the firmware image file to be updated.
- Click  .



Update Firmware interface

## 6.7.2 Restore Configuration

You can restore a previous backup configuration from the TFTP server to recover the settings. Before doing that, you must locate the image file on the TFTP server first and the switch will download back the flash image.


- **TFTP Server IP Address:** Type in the TFTP server IP.
- **Restore File Name:** Type in the correct file name for restoring.
- Click  .



Restore Configuration interface

### 6.7.3 Backup Configuration

You can back up the current configuration from flash ROM to the TFTP server for the purpose of recovering the configuration later. It helps you to avoid wasting time on configuring the settings by backing up the configuration.

- **TFTP Server IP Address:** Type in the TFTP server IP.
- **Backup File Name:** Type in the file name.
- Click  .






Backup Configuration interface

## 6.8 System Event Log

This page allows the user to decide whether to send the system event log, and select the mode which the system event log will be sent to client only, server only, or both client and server. What kind of event log will be issued to the client/server depends on the selection on the **Event Configuration** tab. There are four types of event—Device Cold Start, Authentication Failure, X-Ring Topology Change, and Port Event—available to be issued as the event log.

### 6.8.1 Syslog Configuration

- **Syslog Client Mode:** Select the system log mode—**Client Only**, **Server Only**, or **Both**. 'Client Only' means the system event log will only be sent to this interface of the switch, but on the other hand 'Server Only' means the system log will only be sent to the remote system log server with its IP assigned. If the mode is set in 'Both', the system event log will be sent to the remote server and this interface.
- **System Log Server IP Address:** When the 'Syslog Mode' item is set as Server Only/Both, the user has to assign the system log server IP address to which the log will be sent.
- Click  to refresh the event log displaying area.
- Click  to clear all the current event logs.
- Make sure the selected mode is correct, and click  to have the setting take effect.

# System Event Log - Syslog Configuration

Syslog Configuration

SMTP Configuration

Event Configuration

Syslog Client Mode

Both



Syslog Server IP Address

192.168.10.200

Apply

2: Jan 1 00:53:22 : System Log Server IP: 192.168.10.200  
1: Jan 1 00:53:22 : System Log Enable!

Page 1



Reload

Clear


Help

Please use Save Configuration to permanently save the updates.

Syslog Configuration interface

## 6.8.2 System Event Log—SMTP Configuration

Simple Mail Transfer Protocol (SMTP) is the standard for email transmissions across the network. You can configure the SMTP server IP, mail subject, sender, mail account, password, and the recipient email addresses which the e-mail alert will send to. There are also five types of event—Device Cold Start, Authentication Failure, X-Ring Topology Change, and Port Event—available to be issued as the e-mail alert. Besides, this function provides the authentication mechanism including an authentication step through which the client effectively logs in to the SMTP server during the process of sending e-mail alert.

- **Email Alert:** With this function being enabled, the user is allowed to configure the detail settings for sending the e-mail alert to the SMTP server when the events occur.
- **SMTP Server IP:** Assign the mail server IP address (when **Email Alert** is enabled, this function will then be available).
- **Sender:** Type in an alias of the switch in complete email address format, e.g. [switch101@123.com](mailto:switch101@123.com), to identify where the e-mail alert comes from.
- **Authentication:** Having ticked this checkbox, the mail account, password and confirm password column fields will then show up. Configure the email account and password for authentication when this switch logs in to the SMTP server.
- **Mail Account:** Set up the email account, e.g. [johnadmin](mailto:johnadmin), to receive the email alert. It must be an existing email account on the mail server.
- **Password:** Type in the password for the email account.
- **Confirm Password:** Reconfirm the password.
- **Rcpt e-mail Address 1 ~ 6:** You can also fill each of the column fields with up to 6 e-mail accounts to receive the email alert.
- Click  to have the configuration take effect.

# System Event Log - SMTP Configuration

Syslog Configuration

SMTP Configuration

Event Configuration

E-mail Alert:

SMTP Server IP Address :	<input type="text" value="192.168.10.5"/>
Sender :	<input type="text" value="switch101@123.com"/>
<input checked="" type="checkbox"/> Authentication	
Mail Account :	<input type="text" value="admin"/>
Password :	<input type="password" value="*****"/>
Confirm Password :	<input type="password" value="*****"/>
Rcpt e-mail Address 1 :	<input type="text" value="support@123.com"/>
Rcpt e-mail Address 2 :	<input type="text"/>
Rcpt e-mail Address 3 :	<input type="text"/>
Rcpt e-mail Address 4 :	<input type="text"/>
Rcpt e-mail Address 5 :	<input type="text"/>
Rcpt e-mail Address 6 :	<input type="text"/>

Apply

Help

Please use Save Configuration to permanently save the updates.

SMTP Configuration interface



### 6.8.3 System Event Log—Event Configuration

Having ticked the **Syslog/SMTP** checkboxes, the event log/email alert will be sent to the system log server and the SMTP server respectively. Also, Port event log/alert (link up, link down, and both) can be sent to the system log server/SMTP server respectively by setting the trigger condition.

- **System event selection:** There are 3 event types—Device Cold Start, Authentication Failure, and X-ring Topology Change. The checkboxes are not available for ticking unless the **Syslog Client Mode** on the Syslog Configuration tab and the **E-mail Alert** on the SMTP Configuration tab are enabled first.
  - **Device cold start:** When the device executes cold start action, the system will issue the event log/email alert to the system log/SMTP server respectively.
  - **Authentication Failure:** When the SNMP authentication fails, the system will issue the event log/email alert to the system log/SMTP server respectively.
  - **X-ring topology change:** When the X-ring topology has changed, the system will issue the event log/email alert to the system log/SMTP server respectively.
  
- **Port event selection:** Also, before the drop-down menu items are available, the **Syslog Client Mode** selection item on the Syslog Configuration tab and the **E-mail Alert** selection item on the SMTP Configuration tab must be enabled first. Those drop-down menu items have 3 selections—**Link UP**, **Link Down**, and **Link UP & Link Down**. Disable means no event will be sent to the system log/SMTP server.
  - **Link UP:** The system will only issue a log message when the link-up event of the port occurs.
  - **Link Down:** The system will only issue a log message when the link-down event of port occurs.
  - **Link UP & Link Down:** The system will issue a log message at the time when port connection is link-up and link-down.

# System Event Log - Event Configuration

Syslog Configuration

SMTP Configuration

Event Configuration

## System event selection

Event Type	Syslog	SMTP
Device cold start	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Authentication Failure	<input type="checkbox"/>	<input checked="" type="checkbox"/>
X-Ring topology change	<input type="checkbox"/>	<input checked="" type="checkbox"/>
MAC Violation	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

## Port event selection

Port	Syslog	SMTP
Port.01	Disable	Disable
Port.02	Disable	Disable
Port.03	Link Up Link Down Link Up & Link Down	Disable
Port.04	Disable	Disable
Port.05	Disable	Disable
Port.06	Disable	Disable
Port.07	Disable	Disable
Port.08	Disable	Disable
Port.09	Disable	Disable
Port.10	Disable	Disable

Apply

Help


Please use Save Configuration to permanently save the updates.

Event Configuration interface

## 6.9 Fault Relay Alarm

The Fault Relay Alarm function provides the Power Failure and Port Link Down/Broken detection. With both power input 1 and power input 2 installed and the check boxes of power 1/power 2 ticked, the FAULT LED indicator will then be possible to light up when any one of the power failures occurs. As for the Port Link Down/Broken detection, the FAULT LED indicator will light up when the port failure occurs; certainly the check box beside the port must be ticked first. Please refer to the segment of '**Wiring the Fault Alarm Contact**' for the failure detection.

- **Power Failure:** Tick the check box to enable the function of lighting up the **FAULT** LED on the panel when power fails.
- **Port Link Down/Broken:** Tick the check box to enable the function of lighting up **FAULT** LED on the panel when Ports' states are link down or broken.

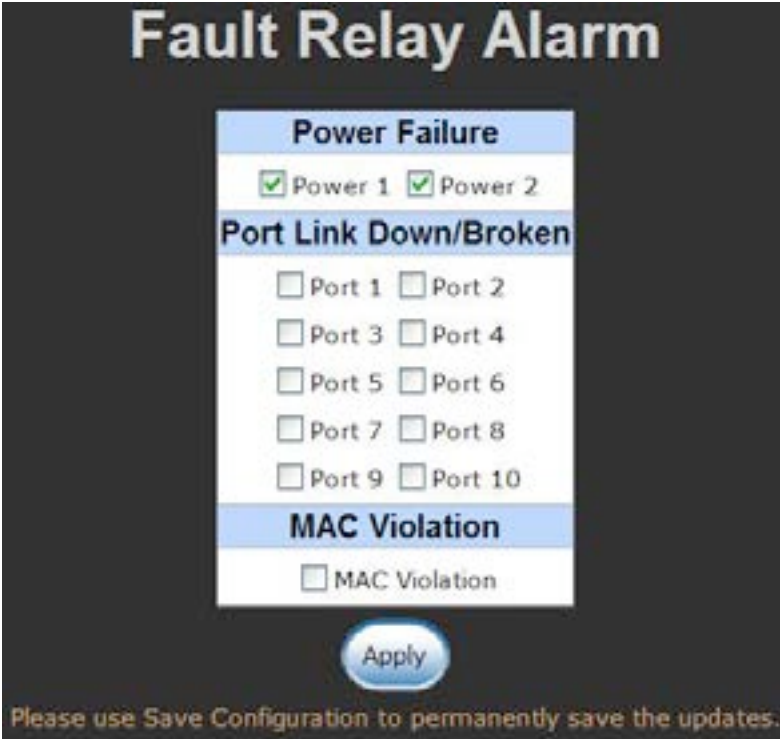

The screenshot shows a configuration window titled "Fault Relay Alarm". It contains three sections: "Power Failure" with checkboxes for "Power 1" and "Power 2" (both checked), "Port Link Down/Broken" with checkboxes for "Port 1" through "Port 10" (all unchecked), and "MAC Violation" with a checkbox for "MAC Violation" (unchecked). An "Apply" button is at the bottom. A note at the bottom states: "Please use Save Configuration to permanently save the updates."

Fault Relay Alarm interface

## 6.10 SNTP Configuration

SNTP (Simple Network Time Protocol) is a simplified version of NTP which is an Internet protocol used to synchronize the clocks of computers to some time reference. Because time usually just advances, the time on different node stations will be different. With the communicating programs running on those devices, it would cause time to jump forward and back, a non-desirable effect. Therefore, the switch provides comprehensive mechanisms to access national time and frequency dissemination services, organize the time-synchronization subnet and the local clock in each participating subnet peer.

Daylight saving time (DST) is the convention of advancing clocks so that afternoons have more daylight and mornings have less. Typically clocks are adjusted forward one hour near the start of spring and are adjusted backward in autumn.

- **SNTP Client:** Enable/disable SNTP function to get the time from the SNTP server.
- **Daylight Saving Time:** This is used as a control switch to enable/disable daylight saving period and daylight saving offset. Users can configure Daylight Saving Period and Daylight Saving Offset in a certain period time and offset time while there is no need to enable daylight saving function. Afterwards, users can just set this item as enable without assign Daylight Saving Period and Daylight Saving Offset again.
- **UTC Timezone:** Universal Time, Coordinated. Set the switch location time zone. The following table lists the different location time zone for your reference.


Local Time Zone	Conversion from UTC	Time at 12:00 UTC
November Time Zone	- 1 hour	11am
Oscar Time Zone	-2 hours	10 am
ADT - Atlantic Daylight	-3 hours	9 am
AST - Atlantic Standard	-4 hours	8 am

EDT - Eastern Daylight		
EST - Eastern Standard CDT - Central Daylight	-5 hours	7 am
CST - Central Standard MDT - Mountain Daylight	-6 hours	6 am
MST - Mountain Standard PDT - Pacific Daylight	-7 hours	5 am
PST - Pacific Standard ADT - Alaskan Daylight	-8 hours	4 am
ALA - Alaskan Standard	-9 hours	3 am
HAW - Hawaiian Standard	-10 hours	2 am
Nome, Alaska	-11 hours	1 am
CET - Central European FWT - French Winter MET - Middle European MEWT - Middle European Winter SWT - Swedish Winter	+1 hour	1 pm
EET - Eastern European, USSR Zone 1	+2 hours	2 pm
BT - Baghdad, USSR Zone 2	+3 hours	3 pm
ZP4 - USSR Zone 3	+4 hours	4 pm
ZP5 - USSR Zone 4	+5 hours	5 pm

ZP6 - USSR Zone 5	+6 hours	6 pm
WAST - West Australian Standard	+7 hours	7 pm
CCT - China Coast, USSR Zone 7	+8 hours	8 pm
JST - Japan Standard, USSR Zone 8	+9 hours	9 pm
EAST - East Australian Standard GST Guam Standard, USSR Zone 9	+10 hours	10 pm
IDLE - International Date Line NZST - New Zealand Standard NZT - New Zealand	+12 hours	Midnight

- **SNTP Sever URL:** Set the SNTP server IP address. You can assign a local network time server IP address or an internet time server IP address.
- **Switch Timer:** When the switch has successfully connected to the SNTP server whose IP address was assigned in the column field of SNTP Server URL, the current coordinated time is displayed here.
- **Daylight Saving Period:** Set up the Daylight Saving beginning date/time and Daylight Saving ending date/time. Please key in the value in the format of 'YYYYMMDD' and 'HH:MM' (leave a space between 'YYYYMMDD' and 'HH:MM').
  - **YYYYMMDD:** an eight-digit year/month/day specification.
  - **HH:MM:** a five-digit (including a colon mark) hour/minute specification.

For example, key in '20070701 02:00' and '20071104 02:04' in the two column fields respectively to represent that DST begins at 2:00 a.m. on March 11, 2007 and ends at 2:00 a.m. on November 4, 2007.



- **Daylight Saving Offset (mins):** For non-US and European countries, specify the amount of time for day light savings. Please key in the valid figure in the range of minute between 0 and 720, which means you can set the offset up to 12 hours.
- **Synchronization Interval (secs):** The Synchronization Interval is used for sending synchronizing packets periodically. User can assign range from 64s to 1024s. The default setting of values is “0” means that you disable the auto synchronizes feature in SNTP client mode. You can enable the feature when filling the interval range from 64s~1024s.
- Click  to have the configuration take effect.

## SNTP Configuration

SNTP Client : Disable ▾

Daylight Saving Time : Disable ▾

UTC Timezone	(GMT)Greenwich Mean Time: Dublin, Edinburgh, Lisbon, London ▾	
SNTP Server URL	0.0.0.0	
Switch Timer		
Daylight Saving Period	20040101 00:00	20040101 00:00
Daylight Saving Offset(mins)	0	
Synchronization Interval(secs)	0	





Please use Save Configuration to permanently save the updates.

SNTP Configuration interface

## 6.11 IP Security

IP security function allows the user to assign 10 specific IP addresses that have permission to manage the switch through the http and telnet services for the securing switch management. The purpose of giving the limited IP addresses permission is to allow only the authorized personnel/device can do the management task on the switch.

- **IP Security Mode:** Having set this selection item in the **Enable** mode, the **Enable HTTP Server**, **Enable Telnet Server** checkboxes and the ten security IP column fields will then be available. If not, those items will appear in grey.
- **Enable HTTP Server:** Having ticked this checkbox, the devices whose IP addresses match any one of the ten IP addresses in the Security IP1 ~ IP10 table will be given the permission to access this switch via HTTP service.
- **Enable Telnet Server:** Having ticked this checkbox, the devices whose IP addresses match any one of the ten IP addresses in the Security IP1 ~ IP10 table will be given the permission to access this switch via telnet service.
- **Security IP 1 ~ 10:** The system allows the user to assign up to 10 specific IP addresses for access security. Only these 10 IP addresses can access and manage the switch through the HTTP/Telnet service once **IP Security Mode** is enabled.
- And then, click  to have the configuration take effect.

---

**[NOTE]** Remember to execute the “Save Configuration” action, otherwise the new configuration will lose when the switch powers off.

---



# IP Security

IP Security Mode: Enable

☒ Enable HTTP Server

☒ Enable Telnet Server

Security IP1	192.168.10.200
Security IP2	192.168.10.147
Security IP3	192.168.10.225
Security IP4	192.168.10.10
Security IP5	0.0.0.0
Security IP6	0.0.0.0
Security IP7	0.0.0.0
Security IP8	0.0.0.0
Security IP9	0.0.0.0
Security IP10	0.0.0.0

Apply


Help

Please use Save Configuration to permanently save the updates.

IP Security interface

## 6.12 User Authentication

Change web management login user name and password for the management security issue.

- **User name:** Type in the new user name (The default is 'admin')
- **Password:** Type in the new password (The default is 'admin')
- **Confirm password:** Re-type the new password
- And then, click 




The screenshot shows a 'User Authentication' window with a dark background. It contains three input fields: 'User Name :', 'New Password :', and 'Confirm Password :'. The 'User Name' field contains the text 'admin'. The 'New Password' and 'Confirm Password' fields contain six dots each. Below the fields are two buttons: 'Apply' and 'Help'. At the bottom, a message reads: 'Please use Save Configuration to permanently save the updates.'

Field	Value
User Name :	admin
New Password :	*****
Confirm Password :	*****

User Authentication interface

## 6.13 Port Statistics

The following chart provides the current statistic information which displays the real-time packet transfer status for each port. The user might use the information to plan and implement the network, or check and find the problem when the collision or heavy traffic occurs.

- **Port:** The port number.
- **Type:** Displays the current speed of connection to the port.
- **Link:** The status of linking—‘Up’ or ‘Down’.
- **State:** It’s set by Port Control. When the state is disabled, the port will not transmit or receive any packet.
- **Tx Good Packet:** The counts of transmitting good packets via this port.
- **Tx Bad Packet:** The counts of transmitting bad packets (including undersize [less than 64 octets], oversize, CRC Align errors, fragments and jabbers packets) via this port.
- **Rx Good Packet:** The counts of receiving good packets via this port.
- **Rx Bad Packet:** The counts of receiving good packets (including undersize [less than 64 octets], oversize, CRC error, fragments and jabbers) via this port.
- **Tx Abort Packet:** The aborted packet while transmitting.
- **Packet Collision:** The counts of collision packet.
- **Packet Dropped:** The counts of dropped packet.
- **Rx Bcast Packet:** The counts of broadcast packet.
- **Rx Mcast Packet:** The counts of multicast packet.
- Click  button to clean all counts.

# Port Statistics

Port	Type	Link	State	Tx Good Packet	Tx Bad Packet	Rx Good Packet	Rx Bad Packet	Tx Abort Packet	Packet Collision	Packet Dropped	RX Bcast Packet	RX Mcast Packet
Port.01	100TX	Down	Enable	0	0	0	0	0	0	0	0	0
Port.02	100TX	Down	Enable	0	0	0	0	0	0	0	0	0
Port.03	100TX	Down	Enable	0	0	0	0	0	0	0	0	0
Port.04	100TX	Down	Enable	0	0	0	0	0	0	0	0	0
Port.05	100TX	Down	Enable	0	0	0	0	0	0	0	0	0
Port.06	100TX	Down	Enable	0	0	0	0	0	0	0	0	0
Port.07	100TX	Up	Enable	931	0	10492	0	0	0	0	7940	575
Port.08	100TX	Down	Enable	0	0	0	0	0	0	0	0	0
Port.09	1GTX/mGBIC	Down	Enable	0	0	0	0	0	0	0	0	0
Port.10	1GTX/mGBIC	Down	Enable	0	0	0	0	0	0	0	0	0


Clear

Help

Port Statistics interface

## 6.14 Port Control

In Port control you can configure the settings of each port to control the connection parameters, and the status of each port is listed beneath.

- **Port:** Use the scroll bar and click on the port number to choose the port to be configured.
- **State:** Current port state. The port can be set to disable or enable mode. If the port state is set as 'Disable', it will not receive or transmit any packet.
- **Negotiation:** Auto and Force. Being set as Auto, the speed and duplex mode are negotiated automatically. When you set it as Force, you have to set the speed and duplex mode manually.
- **Speed:** It is available for selecting when the Negotiation column is set as Force. When the Negotiation column is set as Auto, this column is read-only.
- **Duplex:** It is available for selecting when the Negotiation column is set as Force. When the Negotiation column is set as Auto, this column is read-only.
- **Flow Control:** Whether or not the receiving node sends feedback to the sending node is determined by this item. When enabled, once the device exceeds the input data rate of another device, the receiving device will send a PAUSE frame which halts the transmission of the sender for a specified period of time. When disabled, the receiving device will drop the packet if too much to process.
- **Security:** When the Security selection is set as 'On', any access from the device which connects to this port will be blocked unless the MAC address of the device is included in the static MAC address table. See the segment of **MAC Address Table—Static MAC Addresses**.
- Click  to have the configuration take effect.

# Port Control

Port	State	Negotiation	Speed	Duplex	Flow Control	Security
Port.01						
Port.02	Enable	Auto	100	Full	Enable	Off
Port.03						
Port.04						

Apply

Help

Please use Save Configuration to permanently save the updates.

Port	Group ID	Type	Link	State	Negotiation	Speed Config	Duplex Actual	Flow Control Config	Flow Control Actual	Security
Port.01	N/A	100TX	Down	Enable	Auto	100	Full N/A	Enable	N/A	OFF
Port.02	N/A	100TX	Down	Enable	Auto	100	Full N/A	Enable	N/A	OFF
Port.03	N/A	100TX	Down	Enable	Auto	100	Full N/A	Enable	N/A	OFF
Port.04	N/A	100TX	Down	Enable	Auto	100	Full N/A	Enable	N/A	OFF
Port.05	N/A	100TX	Down	Enable	Auto	100	Full N/A	Enable	N/A	OFF
Port.06	N/A	100TX	Down	Enable	Auto	100	Full N/A	Enable	N/A	OFF
Port.07	N/A	100TX	Up	Enable	Auto	100	Full 100 Full	Enable	ON	OFF
Port.08	N/A	100TX	Down	Enable	Auto	100	Full N/A	Enable	N/A	OFF
Port.09	N/A	1GTX/mGBIC	Down	Enable	Auto	1G	Full N/A	Enable	N/A	OFF
Port.10	N/A	1GTX/mGBIC	Down	Enable	Auto	1G	Full N/A	Enable	N/A	OFF






Port Control interface

## 6.15 Port Trunk

Port trunking is the combination of several ports or network cables to expand the connection speed beyond the limits of any one single port or network cable. Link Aggregation Control Protocol (LACP), which is a protocol running on layer 2, provides a standardized means in accordance with IEEE 802.3ad to bundle several physical ports together to form a single logical channel. All the ports within the logical channel or so-called logical aggregator work at the same connection speed and LACP operation requires full-duplex mode.

### 6.15.1 Aggregator setting

- **System Priority:** A value which is used to identify the active LACP. The switch with the lowest value has the highest priority and is selected as the active LACP peer of the trunk group.
- **Group ID:** There are 13 trunk groups to be selected. Assign the "**Group ID**" to the trunk group.
- **LACP:** When enabled, the trunk group is using LACP. A port which joins an LACP trunk group has to make an agreement with its member ports first. Please notice that a trunk group, including member ports split between two switches, has to enable the LACP function of the two switches. When disabled, the trunk group is a static trunk group. The advantage of having the LACP disabled is that a port joins the trunk group without any handshaking with its member ports; but member ports won't know that they should be aggregated together to form a logic trunk group.
- **Work ports:** This column field allows the user to type in the total number of active port up to four. With **LACP static trunk group**, e.g. you assign four ports to be the members of a trunk group whose work ports column field is set as two; the exceed ports are standby/redundant ports and can be aggregated if working ports fail. If it is a **static trunk group** (non-LACP), the number of work ports must equal the total number of group member ports.

- Select the ports to join the trunk group. The system allows a maximum of four ports to be aggregated in a trunk group. Click  and the ports focused in the right side will be shifted to the left side. To remove unwanted ports, select the ports and click .
- When LACP enabled, you can configure LACP Active/Passive status for each port on the **State Activity** tab.
- Click .
- Use  to delete Trunk Group. Select the Group ID and click .

## Port Trunk - Aggregator Setting



Aggregator Setting
Aggregator Information
State Activity

System Priority




1

<b>Group ID</b>	Trunk.1 ▾	Select
<b>LACP</b>	Enable ▾	
<b>Work Ports</b>	4	

Port.01  
Port.02  
Port.03  
Port.04

Port.05  
Port.06  
Port.07  
Port.08  
Port.09  
Port.10

Please use Save Configuration to permanently save the updates.

Notice: The trunk function do not support GVRP and X-Ring.

Port Trunk—Aggregator Setting interface (four ports are added to the left field with LACP enabled)



## 6.15.2 Aggregator Information

- **LACP disabled**

Having set up the aggregator setting with LACP disabled, you will see the local static trunk group information on the tab of **Aggregator Information**.

**Port Trunk - Aggregator Setting**

Aggregator Setting | **Aggregator Information** | State Activity

**System Priority**  
1

<b>Group ID</b>	Trunk.2	Select
<b>LACP</b>	Disable	
<b>Work Ports</b>	2	

Port.01  
Port.02

<<Add  
Remove>>

Port.05  
Port.06  
Port.07  
Port.08  
Port.09  
Port.10  
Port.03  
Port.04

Apply Delete Help

Please use Save Configuration to permanently save the updates.

Notice: The trunk function do not support GVRP and X-Ring.

Assigning 2 ports to a trunk group with LACP disabled

Port Trunk - Aggregator Information	
Aggregator Setting	Aggregator Information
State Activity	
Static Trunking Group	
Group Key	1
Port Member	1 2

Static Trunking Group information

- **Group Key:** This is a read-only column field that displays the trunk group ID.
- **Port Member:** This is a read-only column field that displays the members of this static trunk group.


- **LACP enabled**

Having set up the aggregator setting with LACP enabled, you will see the trunking group information between two switches on the tab of **Aggregator Information**.

- **Switch 1 configuration**

1. Set **System Priority** of the trunk group. The default is 1.
2. Select a **trunk group ID** by pull down the drop-down menu bar.
3. Enable LACP.

4. Include the member ports by clicking the  button after selecting the port number and the column field of **Work Ports** changes automatically.

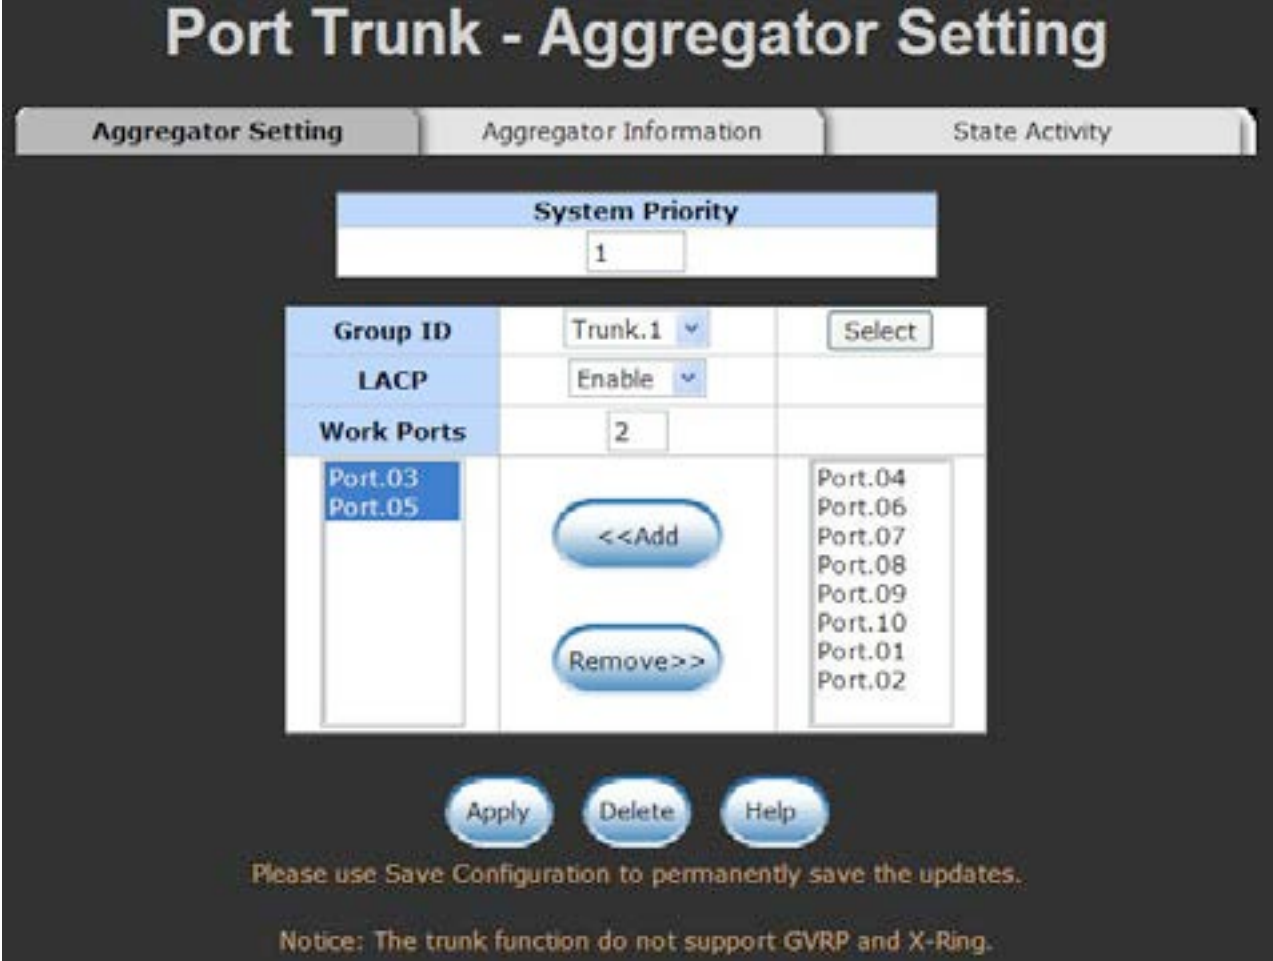

## Port Trunk - Aggregator Setting

Aggregator Setting

Aggregator Information

State Activity

System Priority

1

Group ID	Trunk.1	Select
LACP	Enable	
Work Ports	2	

Port.03  
Port.05

<<Add  
Remove>>

Port.04  
Port.06  
Port.07  
Port.08  
Port.09  
Port.10  
Port.01  
Port.02

Apply

Delete

Help

Please use Save Configuration to permanently save the updates.

Notice: The trunk function do not support GVRP and X-Ring.

# Switch 1 configuration interface

## Port Trunk - Aggregator Information

Aggregator Setting

**Aggregator Information**

State Activity

Group1					
Actor			Partner		
Priority	1		1		
MAC	001F3820820E		000F38FFF501		
PortNo	Key	Priority	Active	PortNo	Key
3	513	1	selected	8	513
5	513	1	selected	7	513

Static Trunking Group

Group Key

2

Port Member

Port.01 Port.02

Aggregation Information of Switch 1

- Click on the tab of **Aggregator Information** to check the trunked group information as the illustration shown above after the two switches configured.

## ■ Switch 2 configuration

# Port Trunk - Aggregator Setting

Aggregator Setting
Aggregator Information
State Activity

### System Priority

1

<b>Group ID</b>	Trunk.1 ▾	Select	
<b>LACP</b>	Enable ▾		
<b>Work Ports</b>	2		
<div style="background-color: #e6f2ff; padding: 2px;">Port.07</div> <div style="background-color: #e6f2ff; padding: 2px;">Port.08</div> <div style="height: 100px;"></div>	<div style="border: 1px solid black; border-radius: 15px; width: 100px; height: 30px; margin: 5px auto; background-color: #e6f2ff; display: flex; align-items: center; justify-content: center;">&lt;&lt;Add</div> <div style="border: 1px solid black; border-radius: 15px; width: 100px; height: 30px; margin: 5px auto; background-color: #e6f2ff; display: flex; align-items: center; justify-content: center;">Remove&gt;&gt;</div>	<div style="background-color: #e6f2ff; padding: 2px;">Port.01</div> <div style="background-color: #e6f2ff; padding: 2px;">Port.02</div> <div style="background-color: #e6f2ff; padding: 2px;">Port.04</div> <div style="background-color: #e6f2ff; padding: 2px;">Port.06</div> <div style="background-color: #e6f2ff; padding: 2px;">Port.09</div> <div style="background-color: #e6f2ff; padding: 2px;">Port.10</div> <div style="background-color: #e6f2ff; padding: 2px;">Port.03</div> <div style="background-color: #e6f2ff; padding: 2px;">Port.05</div>	

Apply


Delete

Help

Please use Save Configuration to permanently save the updates.

Notice: The trunk function do not support GVRP and X-Ring.

Switch 2 configuration interface

1. Set **System Priority** of the trunk group. The default is 1.
2. Select a **trunk group ID** by pull down the drop-down menu bar.
3. Enable LACP.
4. Include the member ports by clicking the  button after selecting the port number and the column field of **Work Ports** changes automatically.

# Port Trunk - Aggregator Information

Aggregator Setting

Aggregator Information


State Activity

Group1							
Actor				Partner			
Priority	1			1			
MAC	000F38FFF501			001F3820820E			
PortNo	Key	Priority	Active	PortNo	Key	Priority	
7	513	1	selected	5	513	1	
8	513	1	selected	3	513	1	

Aggregation Information of Switch 2

- Click on the tab of **Aggregator Information** to check the trunked group information as the illustration shown above after the two switches configured.

### 6.15.3 State Activity


Having set up the LACP aggregator on the tab of Aggregator Setting, you can configure the state activity for the members of the LACP trunk group. You can tick or cancel the checkbox beside the state label. When you remove the tick mark of the port and click , the port state activity will change to **Passive**.

- **Active:** The port automatically sends LACP protocol packets.
- **Passive:** The port does not automatically send LACP protocol packets, and responds only if it receives LACP protocol packets from the opposite device.

---

**[NOTE]** A link having two passive LACP nodes will not perform dynamic LACP trunk because both ports are waiting for an LACP protocol packet from the opposite device.

---

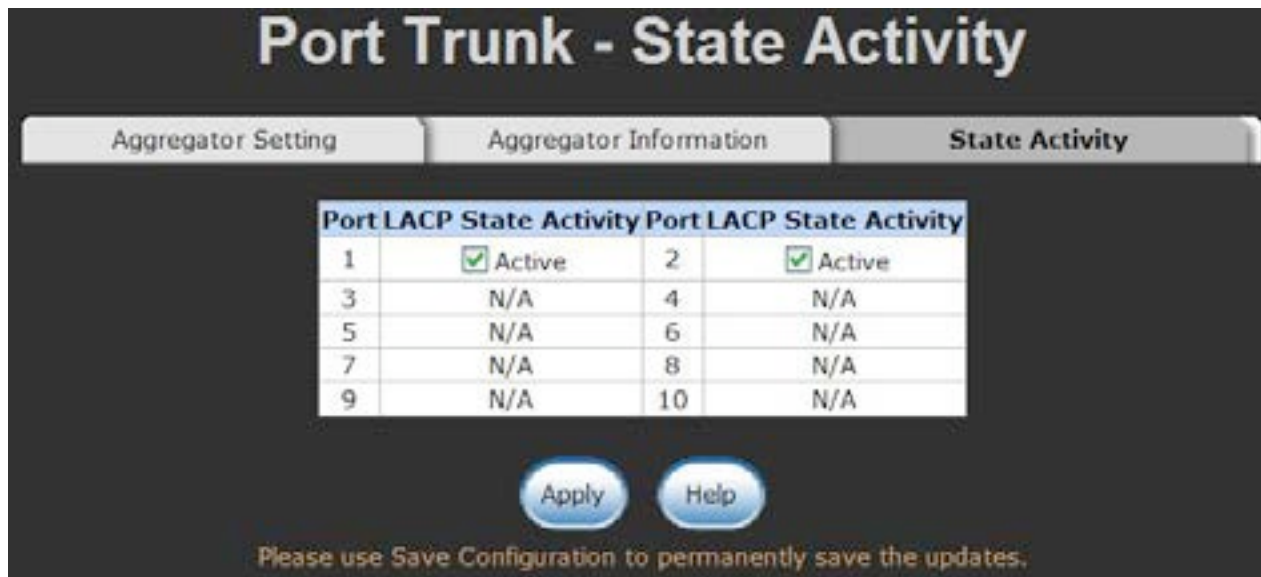

Port	LACP State Activity	Port	LACP State Activity
1	<input checked="" type="checkbox"/> Active	2	<input checked="" type="checkbox"/> Active
3	N/A	4	N/A
5	N/A	6	N/A
7	N/A	8	N/A
9	N/A	10	N/A

Apply Help

Please use Save Configuration to permanently save the updates.

State Activity of Switch 1

# Port Trunk - State Activity

Aggregator Setting

Aggregator Information

**State Activity**

Port	LACP	State	Activity	Port	LACP	State	Activity
1			N/A	2			N/A
3	<input checked="" type="checkbox"/>	Active		4			N/A
5	<input checked="" type="checkbox"/>	Active		6			N/A
7			N/A	8			N/A
9			N/A	10			N/A

Apply

Help


Please use Save Configuration to permanently save the updates.

State Activity of Switch 2



## 6.16 Port Mirroring

The Port mirroring is a method for monitor traffic in switched networks. Traffic through ports can be monitored by one specific port, which means traffic goes in or out monitored (source) ports will be duplicated into mirror (destination) port.

- **Destination Port:** There is only one port can be selected to be destination (mirror) port for monitoring both RX and TX traffic which come from source port. Or, use one of two ports for monitoring RX traffic only and the other one for TX traffic only. User can connect mirror port to LAN analyzer or Netxray.
- **Source Port:** The ports that user wants to monitor. All monitored port traffic will be copied to mirror (destination) port. User can select multiple source ports by checking the **RX** or **TX** check boxes to be monitored.
- And then, click  button.



The image shows a 'Port Mirroring' configuration window. It features a table with columns for 'Destination Port' (RX, TX) and 'Source Port' (RX, TX). The rows represent ports from Port.01 to Port.10. Port.01 is selected as the destination for both RX and TX traffic. Ports 02 through 10 are selected as source ports for both RX and TX traffic. At the bottom, there are 'Apply' and 'Help' buttons, and a note: 'Please use Save Configuration to permanently save the updates.'

	Destination Port		Source Port	
	RX	TX	RX	TX
Port.01	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Port.02	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Port.03	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port.04	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Port.05	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Port.06	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Port.07	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Port.08	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Port.09	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Port.10	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>

Apply Help

Please use Save Configuration to permanently save the updates.

Port Trunk – Port Mirroring interface

## 6.17 Rate Limiting

You can set up every port's bandwidth rate and frame limitation type.

- **Ingress Limit Frame type:** select the frame type that wants to filter. There are four frame types for selecting:

- **All**
- **Broadcast/Multicast/Flooded Unicast**
- **Broadcast/Multicast**
- **Broadcast only**

**Broadcast/Multicast/Flooded Unicast**, **Broadcast/Multicast** and **Broadcast only** types are only for ingress frames. The egress rate only supports **All** type.

**Rate Limiting**

	Ingress Limit Frame Type	Ingress	Egress
Port.01	All	0 kbps	0 kbps
Port.02	All	0 kbps	0 kbps
Port.03	Broadcast/Multicast/Flooded Unicast	0 kbps	0 kbps
Port.04	Broadcast/Multicast	0 kbps	0 kbps
Port.05	Broadcast only	0 kbps	0 kbps
Port.06	All	0 kbps	0 kbps
Port.07	All	0 kbps	0 kbps
Port.08	All	0 kbps	0 kbps
Port.09	All	0 kbps	0 kbps
Port.10	All	0 kbps	0 kbps

Rate Range is from 100 kbps to 102400 kbps or to 256000 kbps for giga ports, and zero means no limit.

[Apply](#) [Help](#)

Please use Save Configuration to permanently save the updates.

Rate Limiting interface

- All the ports support port ingress and egress rate control. For example, assume port 1

is 10Mbps, users can set its effective egress rate is 1Mbps, ingress rate is 500Kbps.  
The switch performs the ingress rate by packet counter to meet the specified rate


- **Ingress:** Enter the port effective ingress rate (The default value is “0”).
- **Egress:** Enter the port effective egress rate (The default value is “0”).

- And then, click  to apply the settings

## 6.18 VLAN configuration

A Virtual LAN (VLAN) is a logical network grouping that limits the broadcast domain, which would allow you to isolate network traffic, so only the members of the same VLAN will receive traffic from the ones of the same VLAN. Basically, creating a VLAN on a switch is logically equivalent of reconnecting a group of network devices to another Layer 2 switch. However, all the network devices are still plugged into the same switch physically.

This switch supports **Port-based** and **802.1Q** (tagged-based) VLAN. The default configuration of VLAN operation mode is “**Disable**”.

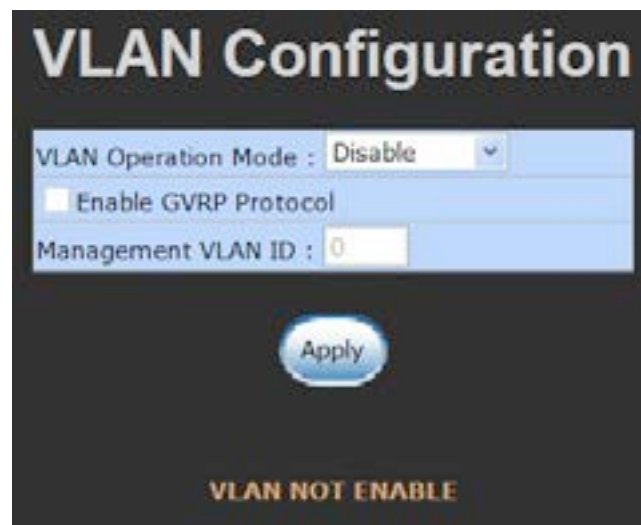



VLAN Configuration interface


### 6.18.1 Port-based VLAN

A port-based VLAN basically consists of its members—ports, which means the VLAN is created by grouping the selected ports. This method provides the convenience for users to configure a simple VLAN easily without complicated steps. Packets can go among only members of the same VLAN group. Note all unselected ports are treated as belonging to another single VLAN. If the port-based VLAN enabled, the VLAN-tagging is ignored. The port-based VLAN function allows the user to create separate VLANs to limit the unnecessary packet flooding; however, for the purpose of sharing resource, a single port called a common port can belongs to different VLANs, which all the member devices (ports) in different VLANs have the permission to access the common port while they still cannot communicate with each other in different VLANs.

The image shows a 'VLAN Configuration' window with a dark background. At the top, the title 'VLAN Configuration' is displayed in a large, bold, white font. Below the title, there is a configuration area with a light blue background. This area contains a dropdown menu labeled 'VLAN Operation Mode' with 'Port Based' selected, a checkbox labeled 'Enable GVRP Protocol' which is currently unchecked, and a text input field labeled 'Management VLAN ID' containing the number '0'. Below this configuration area is a large, vertical, light blue button labeled 'Apply'. At the bottom of the window, there are four smaller, light blue buttons labeled 'Add', 'Edit', 'Delete', and 'Help'. At the very bottom, a line of text in a smaller font reads: 'Please use Save Configuration to permanently save the updates.'

VLAN – Port Based interface

- Pull down the selection item and focus on **Port Based** then press  to set the VLAN Operation Mode in **Port Based** mode.
- Click  to add a new VLAN group (The maximum VLAN groups are up to 64).

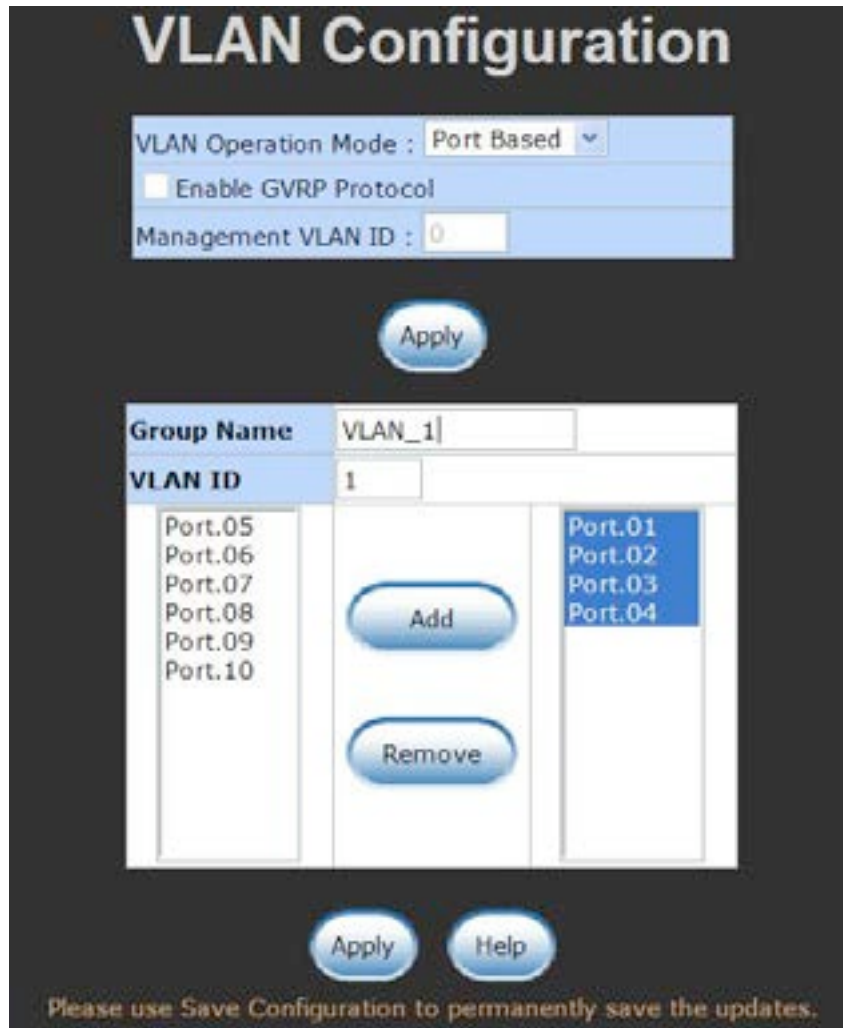




**VLAN Configuration**



VLAN Operation Mode : **Port Based** ▼

☐ Enable GVRP Protocol

Management VLAN ID : 0




Group Name	VLAN ID	Members
VLAN_1	1	<div> <div> Port.05 Port.06 Port.07 Port.08 Port.09 Port.10 </div> <div>    </div> <div> Port.01 Port.02 Port.03 Port.04 </div> </div>


 

Please use Save Configuration to permanently save the updates.

VLAN—Port Based Add interface



- Enter the group name and VLAN ID. Add the selected port number into the right field to group these members to be a VLAN group, or remove any of them listed in the right field from the VLAN.
- And then, click  to have the configuration take effect.

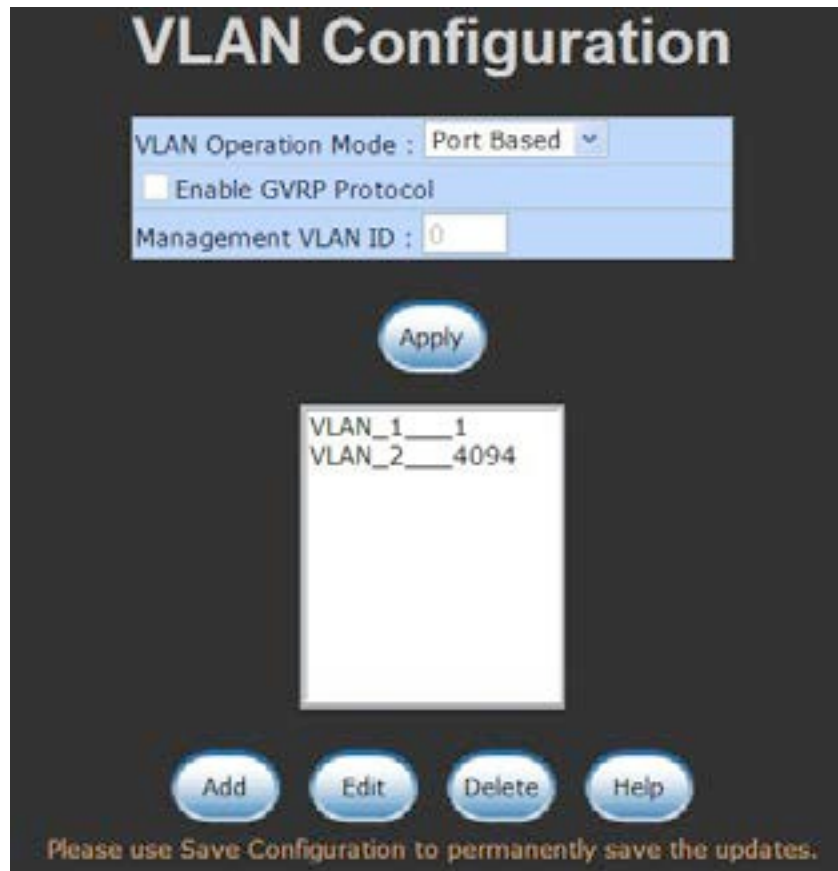- You will see the VLAN list displays.



The screenshot shows the 'VLAN Configuration' interface. At the top, it says 'VLAN Configuration'. Below that, there's a section with 'VLAN Operation Mode : Port Based' (a dropdown menu), an unchecked checkbox for 'Enable GVRP Protocol', and a text field for 'Management VLAN ID : 0'. An 'Apply' button is below this section. In the center, there's a white box containing a list of VLANs: 'VLAN\_1\_\_1' and 'VLAN\_2\_\_4094'. At the bottom, there are four buttons: 'Add', 'Edit', 'Delete', and 'Help'. Below the buttons, a message reads: 'Please use Save Configuration to permanently save the updates.'

VLAN—Port Based Edit/Delete interface

- Use  to delete the VLAN.
- Use  to modify group name, VLAN ID, or add/remove the members of the existing VLAN group.

---

**[NOTE]** Remember to execute the “Save Configuration” action, otherwise the new configuration will lose when switch power off.

---

## 6.18.2 802.1Q VLAN


Virtual Local Area Network (VLAN) can be implemented on the switch to logically create different broadcast domain.

When the 802.1Q VLAN function is enabled, all ports on the switch belong to default VLAN of VID 1, which means they logically are regarded as members of the same broadcast domain. The valid VLAN ID is in the range of number between 1 and 4094. The amount of VLAN groups is up to 256 including default VLAN that cannot be deleted. Each member port of 802.1Q is on either an Access Link (VLAN-tagged) or a Trunk Link (no VLAN-tagged). All frames on an Access Link carry no VLAN identification. Conversely, all frames on a Trunk Link are VLAN-tagged. Besides, there is the third mode—Hybrid. A Hybrid Link can carry both VLAN-tagged frames and untagged frames. A single port is supposed to belong to one VLAN group, except it is on a Trunk/Hybrid Link.

The technique of 802.1Q tagging inserts a 4-byte tag, including VLAN ID of the destination port—PVID, in the frame. With the combination of Access/Trunk/Hybrid Links, the communication across switches also can make the packet sent through tagged and untagged ports.



## 802.1Q Configuration

- Pull down the selection item and focus on **802.1Q** then press  to set the VLAN Operation Mode in **802.1Q** mode.
- **Enable GVRP Protocol:** GVRP (GARP VLAN Registration Protocol) is a protocol that facilitates control of virtual local area networks (VLANs) within a larger network. GVRP conforms to the IEEE 802.1Q specification, which defines a method of tagging frames with VLAN configuration data. This allows network devices to dynamically exchange VLAN configuration information with other devices. For example, having enabled GVRP on two switches, they are able to automatically exchange the information of their VLAN database. Therefore, the user doesn't need to manually configure whether the link is trunk or hybrid, the packets belonging to the same VLAN can communicate across switches. Tick this checkbox to enable GVRP protocol. This checkbox is available while the VLAN Operation Mode is in **802.1Q** mode.
- **Management VLAN ID:** Only when the VLAN members, whose Untagged VID (PVID) equals to the value in this column, will have the permission to access the switch. The default value is '0' that means this limit is not enabled (all members in different VLANs can access this switch).
- Select the port you want to configure.
- **Link Type:** There are 3 types of link type.
  - **Access Link:** A segment which provides the link path for one or more stations to the VLAN-aware device. An Access Port (untagged port), connected to the access link, has an untagged VID (also called PVID). After an untagged frame gets into the access port, the switch will insert a four-byte tag in the frame. The contents of the last 12-bit of the tag is untagged VID. When this frame is sent out through any of the access port of the same PVID, the switch will remove the tag from the frame to recover it to what it was. Those ports of the same untagged VID are regarded as the same VLAN group members.

*Note: Because the access port doesn't have an understanding of tagged frame, the column field of Tagged VID is not available.*

- **Trunk Link:** A segment which provides the link path for one or more VLAN-aware devices (switches). A Trunk Port, connected to the trunk link, has an understanding of tagged frame, which is used for the communication among VLANs across switches. Which frames of the specified VIDs will be forwarded depends on the values filled in the Tagged VID column field. Please insert a comma between two VIDs.


*Note:*

1. *A trunk port doesn't insert tag into an untagged frame, and therefore the untagged VID column field is not available.*
2. *It's not necessary to type '1' in the tagged VID. The trunk port will forward the frames of VLAN 1.*
3. *The trunk port has to be connected to a trunk/hybrid port of the other switch. Both the tagged VID of the two ports have to be the same.*

- **Hybrid Link:** A segment which consists of Access and Trunk links. The hybrid port has both the features of access and trunk ports. A hybrid port has a PVID belonging to a particular VLAN, and it also forwards the specified tagged-frames for the purpose of VLAN communication across switches.

*Note:*

1. *It's not necessary to type '1' in the tagged VID. The hybrid port will forward the frames of VLAN 1.*
2. *The trunk port has to be connected to a trunk/hybrid port of the other switch. Both the tagged VID of the two ports have to be the same.*

- **Untagged VID:** This column field is available when Link Type is set as Access Link and Hybrid Link. Assign a number in the range between 1 and 4094.
- **Tagged VID:** This column field is available when Link Type is set as Trunk Link and Hybrid Link. Assign a number in the range between 1 and 4094.
- Click  to have the configuration take effect.
- You can see the link type, untagged VID, and tagged VID information of each port in the table below on the screen.

# VLAN Configuration

VLAN Operation Mode : 802.1Q

☒ Enable GVRP Protocol

Management VLAN ID : 0

Apply

## 802.1Q Configuration

## Group Configuration

Port	Link Type	Untagged Vid	Tagged Vid
Port.01	Access Link	1	

Apply

Help


Please use Save Configuration to permanently save the updates.

Port	Link Type	Untagged Vid	Tagged Vid
Port.01	Access Link	2	
Port.02	Access Link	3	
Port.03	Access Link	1	
Port.04	Hybrid Link	4	2-3
Port.05	Access Link	5	
Port.06	Access Link	1	
Port.07	Access Link	1	
Port.08	Access Link	1	
Port.09	Access Link	1	
Port.10	Access Link	1	

802.1Q VLAN interface

## Group Configuration

Edit the existing VLAN Group.

- Select the VLAN group in the table list.
- Click .

## VLAN Configuration

VLAN Operation Mode : 802.1Q  
☒ Enable GVRP Protocol  
 Management VLAN ID : 0

Apply

802.1Q Configuration
Group Configuration

Default\_\_1  
 VLAN\_2\_\_2  
 VLAN\_3\_\_3  
 VLAN\_4\_\_4  
 VLAN\_5\_\_5

Edit
Delete

Please use Save Configuration to permanently save the updates.

Group Configuration interface

- You can modify the VLAN group name and VLAN ID.

## VLAN Configuration

VLAN Operation Mode : 802.1Q  
☒ Enable GVRP Protocol  
 Management VLAN ID : 0

Apply

802.1Q Configuration
Group Configuration

Group Name	VLAN_3
VLAN ID	3

Apply

Please use Save Configuration to permanently save the updates.


Group Configuration interface

- Click Apply.

## 6.19 Rapid Spanning Tree

The Rapid Spanning Tree Protocol (RSTP) is an evolution of the Spanning Tree Protocol and provides for faster spanning tree convergence after a topology change. The system also supports STP and the system will auto-detect the connected device that is running STP or RSTP protocol.

### 6.19.1 RSTP System Configuration

- The user can view spanning tree information of Root Bridge.
- The user can modify RSTP state. After modification, click  .
  - **RSTP mode:** The user must enable the RSTP function first before configuring the related parameters.
  - **Priority (0-61440):** The switch with the lowest value has the highest priority and is selected as the root. If the value is changed, the user must reboot the switch. The value must be a multiple of 4096 according to the protocol standard rule.
  - **Max Age (6-40):** The number of seconds a switch waits without receiving Spanning-tree Protocol configuration messages before attempting a reconfiguration. Enter a value between 6 through 40.
  - **Hello Time (1-10):** The time that controls the switch to send out the BPDU packet to check RSTP current status. Enter a value between 1 through 10.
  - **Forward Delay Time (4-30):** The number of seconds a port waits before changing from its Rapid Spanning-Tree Protocol learning and listening states to the forwarding state. Enter a value between 4 through 30.

---

**[NOTE]** Follow the rule as below to configure the MAX Age, Hello Time, and Forward Delay Time.

**$2 \times (\text{Forward Delay Time value} - 1) \geq \text{Max Age value} \geq 2 \times (\text{Hello Time value} + 1)$**

---

# RSTP - System Configuration

## System Configuration

## Port Configuration

RSTP Mode	Enable <input type="button" value="v"/>
Priority (0-61440)	<input type="text" value="32768"/>
Max Age (6-40)	<input type="text" value="20"/>
Hello Time (1-10)	<input type="text" value="2"/>
Forward Delay Time (4-30)	<input type="text" value="15"/>

Priority must be a multiple of 4096  
 $2 * (\text{Forward Delay Time} - 1)$  should be greater than or equal to the Max Age.  
The Max Age should be greater than or equal to  $2 * (\text{Hello Time} + 1)$ .

Apply

Help

Please use Save Configuration to permanently save the updates.


### Root Bridge Information

Bridge ID	008000223B030676
Root Priority	32768
Root Port	Root
Root Path Cost	0
Max Age	20
Hello Time	2
Forward Delay	15

RSTP System Configuration interface

## 6.19.2 Port Configuration

This web page provides the port configuration interface for RSTP. You can assign higher or lower priority to each port. Rapid spanning tree will have the port with the higher priority in forwarding state and block other ports to make certain that there is no loop in the LAN.

- Select the port in the port column field.
- **Path Cost:** The cost of the path to the other bridge from this transmitting bridge at the specified port. Enter a number 1 through 200,000,000.
- **Priority:** Decide which port should be blocked by setting its priority as the lowest. Enter a number between 0 and 240. The value of priority must be the multiple of 16.
- **Admin P2P:** The rapid state transitions possible within RSTP are dependent upon whether the port concerned can only be connected to exactly another bridge (i.e. it is served by a point-to-point LAN segment), or can be connected to two or more bridges (i.e. it is served by a shared medium LAN segment). This function allows the P2P status of the link to be manipulated administratively. **True** means the port is regarded as a point-to-point link. **False** means the port is regarded as a shared link. **Auto** means the link type is determined by the auto-negotiation between the two peers.
- **Admin Edge:** The port directly connected to end stations won't create bridging loop in the network. To configure the port as an edge port, set the port to "**True**" status.
- **Admin Non Stp:** The port includes the STP mathematic calculation. **True** is not including STP mathematic calculation. **False** is including the STP mathematic calculation.
- Click  .



# RSTP - Port Configuration

System Configuration

Port Configuration

Port	Path Cost (1-20000000)	Priority (0-240)	Admin P2P	Admin Edge	Admin Non STP
Port.01					
Port.02					
Port.03	200000	128	Auto	true	false
Port.04					
Port.05					

priority must be a multiple of 16

Apply

Help

Please use Save Configuration to permanently save the updates.

## RSTP Port Status

Port	Path Cost	Port Priority	Oper P2P	Oper Edge	STP Neighbor	State	Role
Port.01	200000	128	True	True	False	Disabled	Disabled
Port.02	200000	128	True	True	False	Disabled	Disabled
Port.03	200000	128	True	True	False	Disabled	Disabled
Port.04	200000	128	True	True	False	Disabled	Disabled
Port.05	200000	128	True	True	False	Disabled	Disabled
Port.06	200000	128	True	True	False	Disabled	Disabled
Port.07	200000	128	True	True	False	Forwarding	Designated
Port.08	200000	128	True	True	False	Disabled	Disabled
Port.09	200000	128	True	True	False	Disabled	Disabled
Port.10	200000	128	True	True	False	Disabled	Disabled

RSTP Port Configuration interface





## 6.20 SNMP Configuration

Simple Network Management Protocol (SNMP) is the protocol developed to manage nodes (servers, workstations, routers, switches and hubs etc.) on an IP network. SNMP enables network administrators to manage network performance, find and solve network problems, and plan for network growth. Network management systems learn of problems by receiving traps or change notices from network devices implementing SNMP.

### 6.20.1 System Configuration

#### ■ Community Strings

Here you can define the new community string set and remove the unwanted community string.

- **String:** Fill the name string.
- **RO:** Read only. Enables requests accompanied by this community string to display MIB-object information.
- **RW:** Read/write. Enables requests accompanied by this community string to display MIB-object information and to set MIB objects.
- Click .
- To remove the community string, select the community string that you defined before and click . The strings of Public\_RO and Private\_RW are default strings. You can remove them but after resetting the switch to default, the two strings show up again.

- **Agent Mode:** Select the SNMP version that you want to use it. And then click



to switch to the selected SNMP version mode.

# SNMP - System Configuration

System Configuration

Trap Configuration

SNMPv3 Configuration

## Community Strings

Remove

Current Strings :

public\_\_RO  
private\_\_RW  
PSting1\_\_RW  
PSting2\_\_RW

Add

New Community String :

String : PSting3  
☒ RO ☐ RW

## Community Strings

Current Mode:  
SNMP v1/v2c only

☒ SNMP V1/V2C only  
☐ SNMP V3 only  
☐ SNMP V1/V2C/V3  

Change



Help


SNMP System Configuration interface

91

## 6.20.2 Trap Configuration

A trap manager is a management station that receives the trap messages generated by the switch. If no trap manager is defined, no traps will be issued. To define a management station as a trap manager, assign an IP address, enter the SNMP community strings, and select the SNMP trap version.

- **IP Address:** Enter the IP address of the trap manager.
- **Community:** Enter the community string for the trap station.
- **Trap Version:** Select the SNMP trap version type—v1 or v2c.
- Click .
- To remove the community string, select the community string listed in the current managers field and click .




The image shows the 'SNMP - Trap Configuration' web interface. At the top, there are three tabs: 'System Configuration', 'Trap Configuration' (which is active), and 'SNMPv3 Configuration'. Below the tabs, the title 'Trap Managers' is displayed in orange. The interface is divided into two main sections: 'Current Managers' and 'New Manager'. The 'Current Managers' section has a 'Remove' button and a list of two entries: '192.168.10.23: TrapHost, v1' and '192.168.10.21: TrapHost2, v2'. The 'New Manager' section has an 'Add' button and fields for 'IP Address' (192.168.10.22), 'Community' (TrapHost3), and 'Trap version' (with radio buttons for v1 and v2c, where v1 is selected). At the bottom, there is a message: 'Please use Save Configuration to permanently save the updates.' and a 'Help' button.

Trap Managers interface

## 6.20.3 SNMPV3 Configuration



Configure the SNMP V3 function.

### Context Table

Configure SNMP v3 context table. Assign the context name of context table. Click  to add context name.



### User Table

Configure SNMP v3 user table..

- **User ID:** set up the user name.
- **Authentication Password:** set up the authentication password.
- **Privacy Password:** set up the private password.
- Click  to add context name.
- Click  to remove unwanted context name.

### Group Table

Configure SNMP v3 group table.



- **Security Name (User ID):** assign the user name that you have set up in user table.
- **Group Name:** set up the group name.
- Click  to add context name.
- Click  to remove unwanted context name.

The image shows the 'SNMP - SNMPv3 Configuration' interface. It has a top navigation bar with 'System Configuration', 'User Configuration', and 'SNMPv3 Configuration'. The main area is divided into five sections: Context Table, User Table, Group Table, Access Table, and MIBView Table. Each section has a 'Current' table on the left and a 'New' table on the right. The 'Context Table' has a 'Context Name' field. The 'User Table' has 'User ID', 'Authentication Password', and 'Privacy Password' fields. The 'Group Table' has 'Group Name (User ID)' and 'Group Name' fields. The 'Access Table' has 'Context Prefix', 'Group Name', 'Security Level' (with radio buttons for 'NoAuthNoPriv', 'AuthNoPriv', and 'AuthPriv'), 'Context Match Rule' (with radio buttons for 'Exact' and 'Prefix'), 'Read View Name', 'Write View Name', and 'Notify View Name' fields. The 'MIBView Table' has 'MIB Name', 'MIB Object Name', and 'Type' (with radio buttons for 'Included' and 'Excluded') fields. At the bottom, there is a red warning message: 'Please pay attention to the security level of the SNMPv3 configuration. If the security level is set to 'NoAuthNoPriv', the security will be weakened.' and a 'Save' button.

SNMP V3 configuration interface



## Access Table

Configure SNMP v3 access table.

- **Context Prefix:** set up the context name.
- **Group Name:** set up the group.
- **Security Level:** select the access level.
- **Context Match Rule:** select the context match rule.
- **Read View Name:** set up the read view.
- **Write View Name:** set up the write view.
- **Notify View Name:** set up the notify view.
- Click  to add context name.
- Click  to remove unwanted context name.

## MIBview Table

Configure MIB view table.


- **ViewName:** set up the name.
- **Sub-Oid Tree:** fill the Sub OID.
- **Type:** select the type – exclude or included.
- Click  to add context name.
- Click  to remove unwanted context name.

## 6.21 QoS Configuration

Quality of Service (QoS) is the ability to provide different priority to different applications, users or data flows, or to guarantee a certain level of performance to a data flow. QoS guarantees are important if the network capacity is insufficient, especially for real-time streaming multimedia applications such as voice over IP or Video Teleconferencing, since these often require fixed bit rate and are delay sensitive, and in networks where the capacity is a limited resource, for example in cellular data communication. In the absence of network congestion, QoS mechanisms are not required.

### 6.21.1 QoS Policy and Priority Type

Here you can choose to use an 8-4-2-1 queuing scheme or a strict priority scheme, or select the priority type to configure QoS policy.

- **Qos Policy:** Select the QoS policy rule.
  - **Using the 8,4,2,1 weight fair queue scheme:** The switch will follow 8:4:2:1 rate to process priority queue from High to lowest queue. For example, while the system processing, 1 frame of the lowest queue, 2 frames of the low queue, 4 frames of the middle queue, and 8 frames of the high queue will be processed at the same time in accordance with the 8,4,2,1 policy rule.
  - **Use a strict priority scheme:** Always the higher queue will be processed first, except the higher queue is empty.
  - **Priority Type:** There are 5 priority type selections available—**Port-based**, **TOS only**, **COS only**, **TOS first**, and **COS first**. Disable means no priority type is selected.
- Click  to have the configuration take effect.

## QoS Configuration

### QoS Policy:

☒ Use an 8,4,2,1 weighted fair queuing scheme  
☐ Use a strict priority scheme  
 Priority Type: Disable

Apply Help

---

### Port-based Priority:

Port.01	Port.02	Port.03	Port.04	Port.05	Port.06	Port.07	Port.08	Port.09	Port.10
Lowest	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest

Apply Help

---

### CoS:

Priority	0	1	2	3	4	5	6	7
	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest

Apply Help

---

### ToS:

Priority	0	1	2	3	4	5	6	7
	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest
Priority	8	9	10	11	12	13	14	15
	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest
Priority	16	17	18	19	20	21	22	23
	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest
Priority	24	25	26	27	28	29	30	31
	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest
Priority	32	33	34	35	36	37	38	39
	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest
Priority	40	41	42	43	44	45	46	47
	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest
Priority	48	49	50	51	52	53	54	55
	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest
Priority	56	57	58	59	60	61	62	63
	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest	Lowest


Apply Help

QoS Configuration interface




## 6.21.2 Port-based Priority

Configure the priority level for each port. With the drop-down selection item of **Priority Type** above being selected as Port-based, this control item will then be available to set the queuing policy for each port.

- **Port x:** Each port has 4 priority levels—High, Middle, Low, and Lowest—to be chosen.
- Click  to have the configuration take effect.

## 6.21.3 COS Configuration

Set up the COS priority level. With the drop-down selection item of **Priority Type** above being selected as COS only/COS first, this control item will then be available to set the queuing policy for each port.


- **COS priority:** Set up the COS priority level 0~7—High, Middle, Low, Lowest.
- Click  .

## 6.21.4 TOS Configuration

Set up the TOS priority. With the drop-down selection item of **Priority Type** above being selected as TOS only/TOS first, this control item will then be available to set the queuing policy for each port.

- **TOS priority:** The system provides 0~63 TOS priority level. Each level has 4 types of priority—High, Middle, Low, and Lowest. The default value is 'Lowest' priority for each level.

When the IP packet is received, the system will check the TOS level value in the IP packet that has received. For example, the user sets the TOS level 25 as high, the system will check the TOS value of the received IP packet. If the TOS value of received IP packet is 25 (priority = high), and then the packet priority will have highest priority.


- Click  to have the configuration take effect.

## 6.22 IGMP Configuration

The Internet Group Management Protocol (IGMP) is an internal protocol of the Internet Protocol (IP) suite. IP manages multicast traffic by using switches, routers, and hosts that support IGMP. Enabling IGMP allows the ports to detect IGMP queries, report packets, and manage IP multicast traffic through the switch. IGMP have three fundamental types of message shown as follows:

Message	Description
Query	A message sent from the querier (IGMP router or switch) asking for a response from each host belonging to the multicast group.
Report	A message sent by a host to the querier to indicate that the host wants to be or is a member of a given group indicated in the report message.
Leave Group	A message sent by a host to the querier to indicate that the host has quit being a member of a specific multicast group.

The switch support IP multicast, you can enable IGMP protocol on web management's switch setting advanced page, then the IGMP snooping information displays. IP multicast addresses range are from 224.0.0.0 through 239.255.255.255.

- **IGMP Protocol:** enable or disable the IGMP protocol.
- **IGMP Query:** enable or disable the IGMP query function. The IGMP query information will be displayed in IGMP status section.
- Click  .

## IGMP Configuration

IP Address	VLAN ID	Member Port
239.255.255.253	1	***4***
224.000.000.251	1	***4***
239.255.255.250	1	***4***

IGMP Snooping:

IGMP Query:

IGMP Configuration interface

## 6.23 X-Ring


X-Ring provides a faster redundant recovery than Spanning Tree topology. The action is similar to STP or RSTP, but the algorithms between them are not the same. In the X-Ring topology, every switch should be enabled with X-Ring function and two ports should be assigned as the member ports in the ring. Only one switch in the X-Ring group would be set as the master switch that one of its two member ports would be blocked, called backup port, and another port is called working port. Other switches in the X-Ring group are called working switches and their two member ports are called working ports. When the failure of network connection occurs, the backup port of the master switch (Ring Master) will automatically become a working port to recover from the failure.

The switch supports the function and interface for setting the switch as the ring master or not. The ring master can negotiate and place command to other switches in the X-Ring group. If there are 2 or more switches in master mode, the software will select the switch with lowest MAC address number as the ring master. The X-Ring master ring mode can be enabled by setting the X-Ring configuration interface. Also, the user can identify whether the switch is the ring master by checking the R.M. LED indicator on the panel of the switch.

The system also supports the **Couple Ring** that can connect 2 or more X-Ring group for the redundant backup function; **Dual Homing** function that can prevent connection lose between X-Ring group and upper level/core switch.

- **Enable Ring:** To enable the X-Ring function, tick the checkbox beside the **Enable Ring** string label. If this checkbox is not ticked, all the ring functions are unavailable.
  - **Enable Ring Master:** Tick the checkbox to enable this switch to be the ring master.
  - **1<sup>st</sup> & 2<sup>nd</sup> Ring Ports:** Pull down the selection menu to assign the ports as the member ports. **1<sup>st</sup> Ring Port** is the working port and **2<sup>nd</sup> Ring Port** is the backup port. When **1<sup>st</sup> Ring Port** fails, the system will automatically upgrade the **2<sup>nd</sup> Ring Port** to be the working port.
- **Enable Couple Ring:** To enable the couple ring function, tick the checkbox beside the

**Enable Couple Ring** string label.

- **Couple Port:** Assign the member port which is connected to the other ring group.
- **Control Port:** When the **Enable Couple Ring** checkbox is ticked, you have to assign the control port to form a couple-ring group between the two X-rings.
- **Enable Dual Homing:** Set up one of the ports on the switch to be the Dual Homing port. For a switch, there is only one Dual Homing port. Dual Homing function works only when the X-Ring function enabled.
- And then, click  to have the configuration take effect.



The image shows a web-based configuration interface titled "X-Ring Configuration". It contains several settings:

- ☒ **Enable Ring**
- ☒ **Enable Ring Master**
- 1st Ring Port:** Port.01 (dropdown)
- 2nd Ring Port:** Port.02 (dropdown)
- ☐ **Enable Couple Ring**
- Coupling Port:** Port.03 (dropdown)
- Control Port:** Port.04 (dropdown)
- ☐ **Enable Dual Homing**
- Homing Port:** Port.05 (dropdown)

Below these settings is a table showing the status of the ports:

1st Ring Port	2nd Ring Port	Coupling Port	Control Port	Homing Port
LINK DOWN	LINK DOWN	LINK DOWN	LINK DOWN	LINK DOWN


At the bottom, there are two buttons: "Apply" and "Help". A note at the very bottom says: "Please use Save Configuration to permanently save the updates."


X-ring Interface

- 
- [NOTE]**
1. When the X-Ring function enabled, the user must disable the RSTP. The X-Ring function and RSTP function cannot exist on a switch at the same time.
  2. Remember to execute the "Save Configuration" action, otherwise the new configuration will lose when switch powers off.
-

## 6.24 LLDP Configuration

Link Layer Discovery Protocol (LLDP) is defined in the IEEE 802.1AB, it is an emerging standard which provides a solution for the configuration issues caused by expanding LANs. LLDP specifically defines a standard method for Ethernet network devices such as switches, routers and wireless LAN access points to advertise information about themselves to other nodes on the network and store the information they discover. LLDP runs on all 802 media. The protocol runs over the data-link layer only, allowing two systems running different network layer protocols to learn about each other.

- **LLDP Protocol:** Pull down the selection menu to disable or enable LLDP function.
- **LLDP Interval:** Set the interval of advertising the switch's information to other nodes.
- Click  .

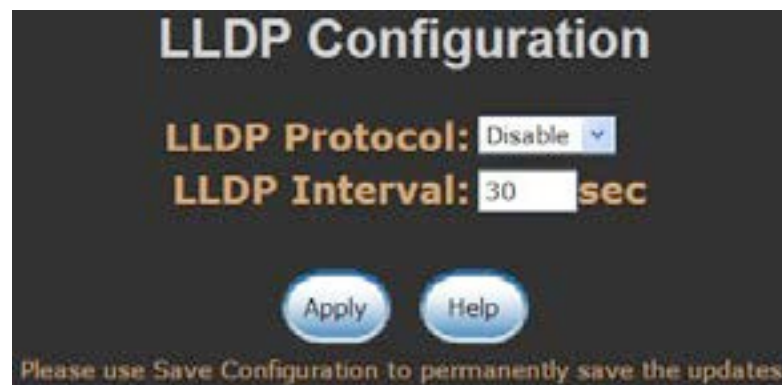


LLDP Interface

## 6.25 Security—802.1X/Radius Configuration

802.1x is an IEEE authentication specification which prevents the client from accessing a wireless access point or wired switch until it provides authority, like the user name and password that are verified by an authentication server (such as RADIUS server).

### 6.25.1 System Configuration

After enabling the IEEE 802.1X function, you can configure the parameters of this function.

- **IEEE 802.1x Protocol:** Enable or disable 802.1x protocol.
- **Radius Server IP:** Assign the RADIUS Server IP address.
- **Server Port:** Set the UDP destination port for authentication requests to the specified RADIUS Server.
- **Accounting Port:** Set the UDP destination port for accounting requests to the specified RADIUS Server.
- **Shared Key:** Set an encryption key for using during authentication sessions with the specified RADIUS server. This key must match the encryption key used on the RADIUS Server.
- **NAS, Identifier:** Set the identifier for the RADIUS client.
- Click  .



# 802.1x/Radius - System Configuration

System Configuration

Port Configuration

Misc Configuration

802.1x Protocol	Enable
Radius Server IP	192.168.10.200
Server Port	1812
Accounting Port	1813
Shared Key	12345678
NAS, Identifier	NAS_L2_SWITCH

Apply


Help

Please use Save Configuration to permanently save the updates.

802.1x System Configuration interface

## 6.25.2 Port Configuration

You can configure the 802.1x authentication state for each port. The state provides Disable, Accept, Reject, and Authorize.

- **Reject:** The specified port is required to be held in the unauthorized state.
- **Accept:** The specified port is required to be held in the authorized state.
- **Authorize:** The specified port is set to the Authorized or Unauthorized state in accordance with the outcome of an authentication exchange between the Supplicant and the authentication server.
- **Disable:** When disabled, the specified port works without complying with 802.1x protocol.
- Click  .

# 802.1x/RADIUS - Port Configuration

System Configuration

**Port Configuration**

Misc Configuration

Port	State
Port.01	Authorize
Port.02	Reject
Port.03	Accept
Port.04	Authorize
Port.05	Disable

Apply

Help


Please use Save Configuration to permanently save the updates.


## Port Authorization

Port	State
Port.01	Disable
Port.02	Disable
Port.03	Disable
Port.04	Disable
Port.05	Disable
Port.06	Disable
Port.07	Disable
Port.08	Disable
Port.09	Disable
Port.10	Disable

802.1x Per Port Setting interface

### 6.25.3 Misc Configuration

- **Quiet Period:** Set the period which the port doesn't try to acquire a supplicant.
- **TX Period:** Set the period the port waits for retransmit next EAPOL PDU during an authentication session.
- **Supplicant Timeout:** Set the period of time the switch waits for a supplicant response to an EAP request.
- **Server Timeout:** Set the period of time the switch waits for a server response to an authentication request.
- **Max Requests:** Set the number of authentication that must time-out before authentication fails and the authentication session ends.
- **Reauth period:** Set the period of time which clients connected must be re-authenticated.
- Click  .

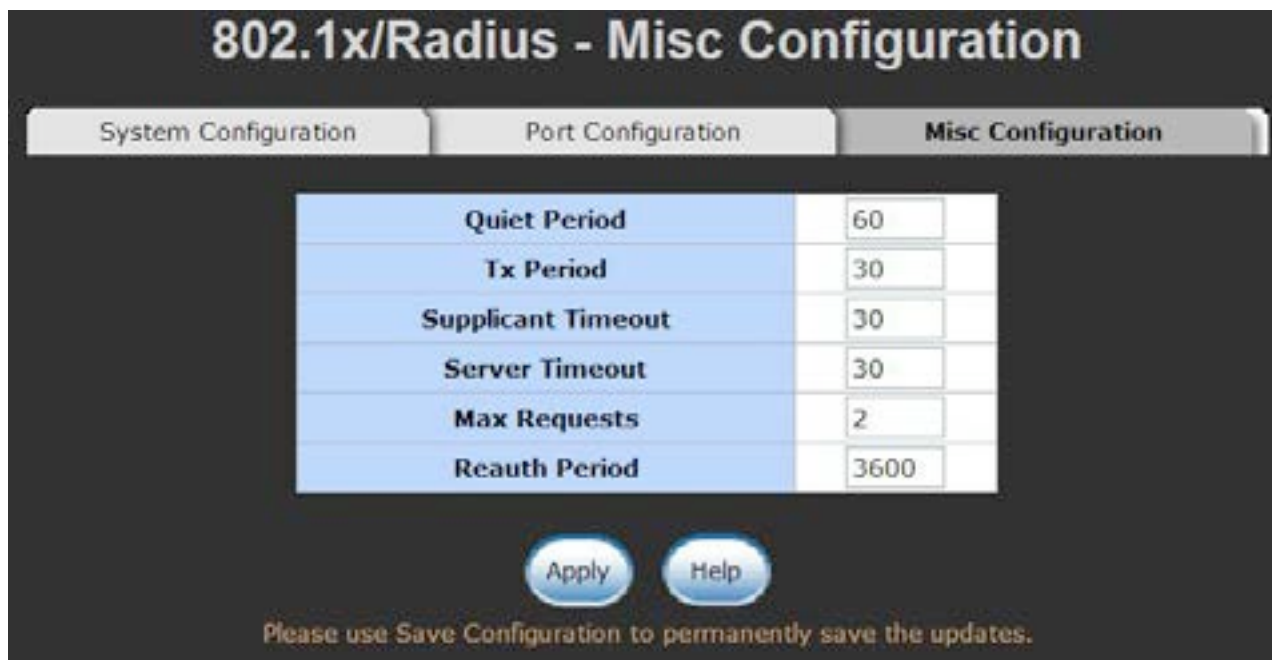

The image shows a screenshot of the '802.1x/RADIUS - Misc Configuration' interface. At the top, there are three tabs: 'System Configuration', 'Port Configuration', and 'Misc Configuration', with 'Misc Configuration' being the active tab. Below the tabs is a table with six rows, each representing a configuration parameter. The first column of the table lists the parameters: 'Quiet Period', 'Tx Period', 'Supplicant Timeout', 'Server Timeout', 'Max Requests', and 'Reauth Period'. The second column contains input fields with the following values: '60', '30', '30', '30', '2', and '3600'. Below the table are two buttons: 'Apply' and 'Help'. At the bottom of the interface, there is a message: 'Please use Save Configuration to permanently save the updates.'

Parameter	Value
Quiet Period	60
Tx Period	30
Supplicant Timeout	30
Server Timeout	30
Max Requests	2
Reauth Period	3600

802.1x Misc Configuration interface

## 6.26 MAC Address Table



Use the MAC address table to ensure the port security.

### 6.26.1 Static MAC Address

You can add a static MAC address that remains in the switch's address table regardless of whether the device is physically connected to the switch. This saves the switch from having to re-learn a device's MAC address when the disconnected or powered-off device is active on the network again. Via this interface, you can add / modify / delete a static MAC address.

#### Add the Static MAC Address

You can add static MAC address in the switch MAC table here.

- **MAC Address:** Enter the MAC address of the port that should permanently forward traffic, regardless of the device network activity.
- **Port No.:** Pull down the selection menu to select the port number.
- Click  .
- If you want to delete the MAC address from filtering table, select the MAC address and click  .

# MAC Address Table - Static MAC Addresses

Static MAC Addresses

MAC Filtering

All MAC Addresses

Multicast Filtering

AABBCCDDEEFF	Port.01
FF1122334455	Port.01

MAC Address

Port No.

Port.01

Add

Delete

Help

Please use Save Configuration to permanently save the updates.



Static MAC Addresses interface

## 6.26.2 MAC Filtering

By filtering MAC address, the switch can easily filter the pre-configured MAC address and reduce the un-safety. You can add and delete filtering MAC address.




MAC Filtering interface

- **MAC Address:** Enter the MAC address that you want to filter.
- Click .
- If you want to delete the MAC address from the filtering table, select the MAC address and click .

### 6.26.3 All MAC Addresses

You can view all of the MAC addresses learned by the selected port.

- Select the port number.
- The selected port of static & dynamic MAC address information will be displayed in here.
- Click  to clear the dynamic MAC addresses information of the current port shown on the screen.



The interface displays a title bar "MAC Address Table - All MAC Addresses" with four tabs: "Static MAC Addresses", "MAC Filtering", "All MAC Addresses" (selected), and "Multicast Filtering". Below the tabs is a "Port No:" dropdown menu set to "Port.01". A table shows two static MAC addresses: "AABBCCDDEEFF" and "FF1122334455", both labeled "STATIC". Below the table, it shows "Dynamic Address Count:0" and "Static Address Count:2". A "Clear" button is at the bottom.

MAC Address	Type
AABBCCDDEEFF	STATIC
FF1122334455	STATIC

Dynamic Address Count:0  
Static Address Count:2



Clear

All MAC Address interface



## 6.26.4 MAC Address Table—Multicast Filtering

Multicasts are similar to broadcasts, they are sent to all end stations on a LAN or VLAN. Multicast filtering is the function, which end stations can receive the multicast traffic if the connected ports had been included in the specific multicast groups. With multicast filtering, network devices only forward multicast traffic to the ports that are connected to the registered end stations.

- **IP Address:** Assign a multicast group IP address in the range of 224.0.0.0 ~ 239.255.255.255.
- **Member Ports:** Tick the check box beside the port number to include them as the member ports in the specific multicast group IP address.
- Click  to append a new filter of multicast to the field, or select the filter in the field and click  to remove it.
-

# MAC Address Table - Multicast Filtering

Static MAC Addresses

MAC Filtering

All MAC Addresses

**Multicast Filtering**

IP Address	Member Port
239.000.000.100	*****78**
239.000.001.100	**34*****
239.000.002.100	*****67***

IP Address	<input type="text"/>
Member Ports	<input type="checkbox"/> Port.01 <input type="checkbox"/> Port.02 <input type="checkbox"/> Port.03 <input type="checkbox"/> Port.04
	<input type="checkbox"/> Port.05 <input type="checkbox"/> Port.06 <input type="checkbox"/> Port.07 <input type="checkbox"/> Port.08
	<input type="checkbox"/> Port.09 <input type="checkbox"/> Port.10

Add

Delete

Help

Please use Save Configuration to permanently save the updates.

Multicast Filtering interface

## 6.27 Power over Ethernet

This segment shows the Power over Ethernet function.

**Power over Ethernet**

Actual Power Consumption: 0 W  
Main Supply Voltage: 480 dV

Firmware Version: 2.04  
Port Knockoff Disabled: ☒  
AC Disconnect: ☒  
Capacitive Detection: ☐

Apply

Please use Save Configuration to permanently save the updates.

Port	Enable state	Power Limit	From Classification	Legacy	Priority	Power Limit (<15400) (mW)	Mode	Current (mA)	Voltage (V)	Power (mW)	Determined Class
1	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Low	15400	Null	0	0.0	0	0:15.4W
2	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Low	15400	Null	0	0.0	0	0:15.4W
3	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Low	15400	Null	0	0.0	0	0:15.4W
4	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Low	15400	Null	0	0.0	0	0:15.4W
5	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Low	15400	Null	0	0.0	0	0:15.4W
6	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Low	15400	Null	0	0.0	0	0:15.4W
7	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Low	15400	Null	0	0.0	0	0:15.4W
8	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Low	15400	Null	0	0.0	0	0:15.4W



Apply

Please use Save Configuration to permanently save the updates.


PoE Status

- **Actual Power Consumption:** This column shows the real-time total power consumption.
- **Main Supply Voltage:** This column shows the output voltage of the system for PoE ports.
- **Firmware Version:** This column shows the PoE chip's firmware version.
- **Port Knockoff Disabled:** Power Management state where one or more PDs have been powered down so that a higher priority PD may be powered up and yet not exceed the maximum total power available for PDs.
- **AC Disconnect:** Tick this checkbox to monitor the AC impedance on the port terminals and removes power when the impedance rises above a certain value, for a certain period (for details, see the IEEE 802.3af specification).
- **Capacitive Detection:** If the port and capacitive detection are enabled, the capacitances state reads in the voltage result from the constant current. This is then

subtracted from the pre-capacitance voltage to get a charge rate. If this charge rate is within the window of the PD signatures, the device is considered to be discovered.

- And then, click  to carry into effect.
- **Port:** The index of PoE ports.
- **Enable State:** Check it to enable the PoE function to the port.
- **Power Limit From:** Check it to decide the power limit method.
  - **Classification:** When this check box is ticked, the system will limit the power supply to the powered device in accordance with the related class.
- **Legacy:** Check it to support the legacy power devices.
- **Priority:** Pull down the selection menu item to choose the priority of power supplying.
- **Port Limit (<15400) mW:** User can key in the power limit value which is under 15.4 Watts.
- **Mode:** Displays the operating mode of the port.
- **Current (mA):** Displays the operating current of the port.
- **Voltage (V):** Displays the operating voltage of the port.
- **Power (mW):** Displays the power consumption of the port.
- **Determined Class:** Displays the PD's class.
- And then, click  to carry into effect.


## 6.28 Factory Default

Reset switch to default configuration. Click  to reset all configurations to the default value.



Factory Default interface


## 6.29 Save Configuration

Save all configurations that you have made in the system. To ensure the all configuration will be saved. Click  to save the all configuration to the flash memory.



Save Configuration interface

## 6.30 System Reboot

Reboot the switch in software reset. Click  to reboot the system.



System Reboot interface

# Troubles shooting

---

- Verify that is using the right power cord/adaptor (DC 24-48V), please don't use the power adapter with DC output higher than 48V, or it may damage this device.
- Select the proper UTP/STP cable to construct the user network. Use unshielded twisted-pair (UTP) or shield twisted-pair (STP) cable for RJ45 connections that depend on the connector type the switch equipped: 100 $\Omega$  Category 3, 4 or 5 cable for 10Mbps connections, 100 $\Omega$  Category 5 cable for 100Mbps connections, or 100 $\Omega$  Category 5e/above cable for 1000Mbps connections. Also be sure that the length of any twisted-pair connection does not exceed 100 meters (328 feet).
- **Diagnosing LED Indicators:** To assist in identifying problems, the switch can be easily monitored through panel indicators, which describe common problems the user may encounter and where the user can find possible solutions.
- If the power indicator does not light on when the power cord is plugged in, you may have a problem with power cord. Then check for loose power connections, power losses or surges at power outlet. If you still cannot resolve the problem, contact the local dealer for assistance.
- If the LED indicators are normal and the connected cables are correct but the packets still cannot be transmitted. Please check the user system's Ethernet devices' configuration or status.



# Appendix A—RJ45 Pin Assignment

---

## RJ45 Pin Assignments

The UTP/STP ports will automatically sense for Fast Ethernet (10Base-T/100Base-TX connections), or Gigabit Ethernet (10Base-T/100Base-TX/1000Base-T connections). Auto MDI/MDIX means that the switch can connect to another switch or workstation without changing straight through or crossover cabling. See the figures below for straight through and crossover cable schematic.

### ■ 10 /100BASE-TX Pin outs

With 10/100BASE-TX cable, pins 1 and 2 are used for transmitting data, and pins 3 and 6 for receiving data.

### ■ RJ45 Pin Assignments

Pin Number	Assignment
1	Tx+
2	Tx-
3	Rx+
6	Rx-

---

**[NOTE]** “+” and “-” signs represent the polarity of the wires that make up each wire pair.

---


The table below shows the 10/100BASE-TX MDI and MDI-X port pin outs.

Pin Number	MDI-X Signal Name	MDI Signal Name
1	Receive Data plus (RD+)	Transmit Data plus (TD+)
2	Receive Data minus (RD-)	Transmit Data minus (TD-)


3	Transmit Data plus (TD+)	Receive Data plus (RD+)
6	Transmit Data minus (TD-)	Receive Data minus (RD-)

## ■ 10/100Base-TX Cable Schematic

The following two figures show the 10/100Base-TX cable schematic.

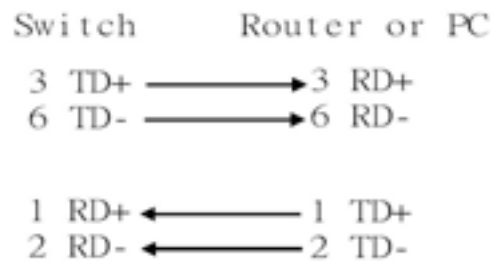


Straight-through cable schematic

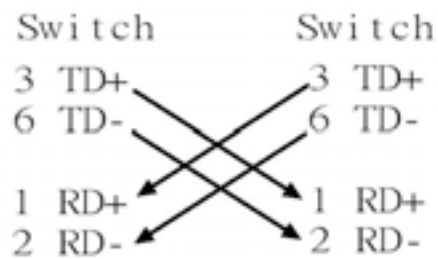


Cross over cable schematic

## ■ 10/100/1000Base-TX Pin outs


The following figure shows the 10/100/1000 Ethernet RJ45 pin outs.

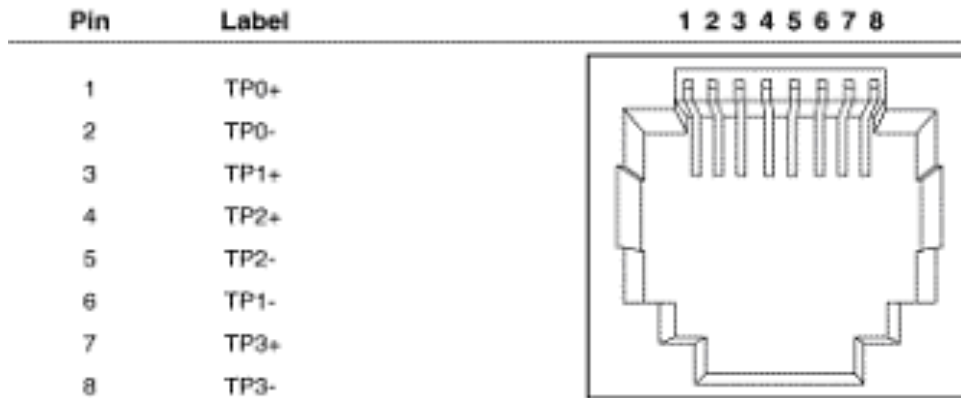

### ■ 10/100/1000Base-TX Cable Schematic

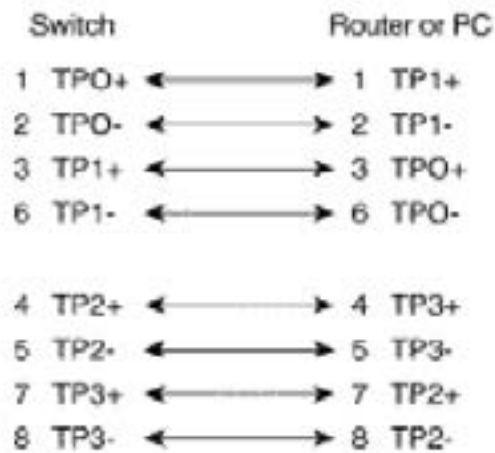

Straight through cables schematic

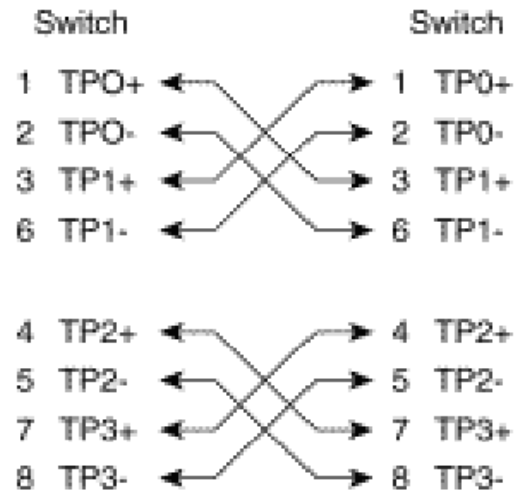

Cross over cables schematic

## RJ45 Pin Assignment of PoE

With 100BASE-TX/10BASE-T cable, pins 1 and 2 are used for transmitting data, and pins 3 and 6 for receiving data; pins 4, 5, 7 and 8 are used for power supplying.

### ■ Pin out of Cisco non-802.3af standard PD

Pin	Signal
1	RX+
2	RX-
3	TX+
4	VCC -
5	VCC -
6	TX-
7	VCC +
8	VCC +

### ■ Pin out of PoE Midspan Hub/Switch

Pin	Signal / Name
1	RX+
2	RX-
3	TX+
4	VCC+
5	VCC+
6	TX-
7	VCC-
8	VCC-

■ Pin out of PoE Endspan Hub/Switch

Pin	Signal / Name
1	TX+/VCC+
2	TX-/VCC+
3	TX+/VCC-
4	
5	
6	TX-/VCC-
7	
8	

---

**Note** '+' and '-' signs represent the polarity of the wires that make up each wire pair. Before you power PD, please check the RJ45 connector pin assignment follow IEEE802.3af standard; otherwise you may need to change one of the RJ45 connector pin assignment attached with the UTP cable.

---

# Appendix B—Command Sets

---

## Commands Set List

User EXEC	<b>E</b>
Privileged EXEC	<b>P</b>
Global configuration	<b>G</b>
VLAN database	<b>V</b>
Interface configuration	<b>I</b>

## System Commands Set

Netstar Commands	Level	Description	Example
<b>show config</b>	<b>E</b>	Show switch configuration	switch> <b>show config</b>
<b>show terminal</b>	<b>P</b>	Show console information	switch# <b>show terminal</b>
<b>write memory</b>	<b>P</b>	Save user configuration into permanent memory (flash rom)	switch# <b>write memory</b>
<b>system name</b> [System Name]	<b>G</b>	Configure system name	switch(config)# <b>system name xxx</b>
<b>system location</b> [System Location]	<b>G</b>	Set switch system location string	switch(config)# <b>system location xxx</b>
<b>system description</b> [System Description]	<b>G</b>	Set switch system description string	switch(config)# <b>system description xxx</b>
<b>system contact</b> [System Contact]	<b>G</b>	Set switch system contact window string	switch(config)# <b>system contact xxx</b>
<b>show system-info</b>	<b>E</b>	Show system information	switch> <b>show system-info</b>
<b>ip address</b>	<b>G</b>	Configure the IP	switch(config)# <b>ip address</b>

[Ip-address] [Subnet-mask] [Gateway]		address of switch	<b>192.168.1.1 255.255.255.0</b> <b>192.168.1.254</b>
<b>ip dhcp</b>	<b>G</b>	Enable DHCP client function of switch	switch(config)# <b>ip dhcp</b>
<b>show ip</b>	<b>P</b>	Show IP information of switch	switch# <b>show ip</b>
<b>no ip dhcp</b>	<b>G</b>	Disable DHCP client function of switch	switch(config)# <b>no ip dhcp</b>
<b>reload</b>	<b>G</b>	Halt and perform a cold restart	switch(config)# <b>reload</b>
<b>default</b>	<b>G</b>	Restore to default	switch(config)# <b>default</b>
<b>admin username</b> [Username]	<b>G</b>	Changes a login username. (maximum 10 words)	switch(config)# <b>admin username</b> <b>xxxxxxx</b>
<b>admin password</b> [Password]	<b>G</b>	Specifies a password (maximum 10 words)	switch(config)# <b>admin password</b> <b>xxxxxxx</b>
<b>show admin</b>	<b>P</b>	Show administrator information	switch# <b>show admin</b>
<b>dhcpserver enable</b>	<b>G</b>	Enable DHCP Server	switch(config)# <b>dhcpserver enable</b>
<b>Dhcpserver disable</b>	<b>G</b>	Disable DHCP Server	switch(config)# <b>no dhcpserver</b>
<b>dhcpserver lowip</b> [Low IP]	<b>G</b>	Configure low IP address for IP pool	switch(config)# <b>dhcpserver lowip</b> <b>192.168.1.100</b>
<b>dhcpserver highip</b> [High IP]	<b>G</b>	Configure high IP address for IP pool	switch(config)# <b>dhcpserver highip</b> <b>192.168.1.200</b>
<b>dhcpserver subnetmask</b> [Subnet mask]	<b>G</b>	Configure subnet mask for DHCP clients	switch(config)# <b>dhcpserver</b> <b>subnetmask 255.255.255.0</b>
<b>dhcpserver gateway</b> [Gateway]	<b>G</b>	Configure gateway for DHCP clients	switch(config)# <b>dhcpserver</b> <b>gateway 192.168.1.254</b>
<b>dhcpserver dnsip</b> [DNS IP]	<b>G</b>	Configure DNS IP for DHCP clients	switch(config)# <b>dhcpserver dnsip</b> <b>192.168.1.1</b>
<b>dhcpserver leasetime</b>	<b>G</b>	Configure lease time	switch(config)# <b>dhcpserver</b>



[Hours]		(in hour)	<b>leasetime 1</b>
<b>dhcpserver ipbinding</b> [IP address]	<b>I</b>	Set static IP for DHCP clients by port	switch(config)# <b>interface fastEthernet 2</b> switch(config)# <b>dhcpserver ipbinding 192.168.1.1</b>
<b>show dhcpserver configuration</b>	<b>P</b>	Show configuration of DHCP server	switch# <b>show dhcpserver configuration</b>
<b>show dhcpserver clients</b>	<b>P</b>	Show client entries of DHCP server	switch# <b>show dhcpserver clients</b>
<b>show dhcpserver ip-binding</b>	<b>P</b>	Show IP-Binding information of DHCP server	switch# <b>show dhcpserver ip-binding</b>
<b>no dhcpserver</b>	<b>G</b>	Disable DHCP server function	switch(config)# <b>no dhcpserver</b>
<b>security enable</b>	<b>G</b>	Enable IP security function	switch(config)# <b>security enable</b>
<b>security http</b>	<b>G</b>	Enable IP security of HTTP server	switch(config)# <b>security http</b>
<b>security telnet</b>	<b>G</b>	Enable IP security of telnet server	switch(config)# <b>security telnet</b>
<b>security ip</b> [Index(1..10)] [IP Address]	<b>G</b>	Set the IP security list	switch(config)# <b>security ip 1 192.168.1.55</b>
<b>show security</b>	<b>P</b>	Show the information of IP security	switch# <b>show security</b>
<b>no security</b>	<b>G</b>	Disable IP security function	switch(config)# <b>no security</b>
<b>no security http</b>	<b>G</b>	Disable IP security of HTTP server	switch(config)# <b>no security http</b>
<b>no security telnet</b>	<b>G</b>	Disable IP security of	switch(config)# <b>no security telnet</b>

		telnet server	
--	--	---------------	--

## Port Commands Set

Netstar Commands	Level	Description	Example
<b>interface fastEthernet</b> [Portid]	<b>G</b>	Choose the port for modification.	switch(config)# <b>interface fastEthernet 2</b>
<b>duplex</b> [full   half]	<b>I</b>	Use the duplex configuration command to specify the duplex mode of operation for Fast Ethernet.	switch(config)# <b>interface fastEthernet 2</b> switch(config-if)# <b>duplex full</b>
<b>speed</b> [10 100 1000 auto]	<b>I</b>	Use the speed configuration command to specify the speed mode of operation for Fast Ethernet., the speed can't be set to 1000 if the port isn't a giga port..	switch(config)# <b>interface fastEthernet 2</b> switch(config-if)# <b>speed 100</b>
<b>no flowcontrol</b>	<b>I</b>	Disable flow control of interface	switch(config-if)# <b>no flowcontrol</b>
<b>security enable</b>	<b>I</b>	Enable security of interface	switch(config)# <b>interface fastEthernet 2</b> switch(config-if)# <b>security enable</b>
<b>no security</b>	<b>I</b>	Disable security of interface	switch(config)# <b>interface fastEthernet 2</b> switch(config-if)# <b>no security</b>

<b>bandwidth type all</b>	<b>I</b>	Set interface ingress limit frame type to “accept all frame”	switch(config)# <b>interface fastEthernet 2</b> switch(config-if)# <b>bandwidth type all</b>
<b>bandwidth type broadcast-multicast-flooded-unicast</b>	<b>I</b>	Set interface ingress limit frame type to “accept broadcast, multicast, and flooded unicast frame”	switch(config)# <b>interface fastEthernet 2</b> switch(config-if)# <b>bandwidth type broadcast-multicast-flooded-unicast</b>
<b>bandwidth type broadcast-multicast</b>	<b>I</b>	Set interface ingress limit frame type to “accept broadcast and multicast frame”	switch(config)# <b>interface fastEthernet 2</b> switch(config-if)# <b>bandwidth type broadcast-multicast</b>
<b>bandwidth type broadcast-only</b>	<b>I</b>	Set interface ingress limit frame type to “only accept broadcast frame”	switch(config)# <b>interface fastEthernet 2</b> switch(config-if)# <b>bandwidth type broadcast-only</b>
<b>bandwidth in</b> [Value]	<b>I</b>	Set interface input bandwidth. Rate Range is from 100 kbps to 102400 kbps or to 256000 kbps for giga ports, and zero means no limit.	switch(config)# <b>interface fastEthernet 2</b> switch(config-if)# <b>bandwidth in 100</b>
<b>bandwidth out</b> [Value]		Set interface output bandwidth. Rate Range is from 100 kbps to 102400 kbps or to 256000 kbps for giga ports,	switch(config)# <b>interface fastEthernet 2</b> switch(config-if)# <b>bandwidth out 100</b>

		and zero means no limit.	
<b>show bandwidth</b>	I	Show interfaces bandwidth control	switch(config)# <b>interface fastEthernet 2</b> switch(config-if)# <b>show bandwidth</b>
<b>state</b> [Enable   Disable]	I	Use the state interface configuration command to specify the state mode of operation for Ethernet ports. Use the disable form of this command to disable the port.	switch(config)# <b>interface fastEthernet 2</b> switch(config-if)# <b>state Disable</b>
<b>show interface configuration</b>	I	show interface configuration status	switch(config)# <b>interface fastEthernet 2</b> switch(config-if)# <b>show interface configuration</b>
<b>show interface status</b>	I	show interface actual status	switch(config)# <b>interface fastEthernet 2</b> switch(config-if)# <b>show interface status</b>
<b>show interface accounting</b>	I	show interface statistic counter	switch(config)# <b>interface fastEthernet 2</b> switch(config-if)# <b>show interface accounting</b>
<b>no accounting</b>	I	Clear interface accounting information	switch(config)# <b>interface fastEthernet 2</b> switch(config-if)# <b>no accounting</b>

## Trunk Commands Set

Netstar Commands	Level	Description	Example
<b>aggregator priority</b> [1~65535]	<b>G</b>	Set port group system priority	switch(config)# <b>aggregator priority 22</b>
<b>aggregator activityport</b> [Group ID] [Port Numbers]	<b>G</b>	Set activity port	switch(config)# <b>aggregator activityport 2</b>
<b>aggregator group</b> [GroupID] [Port-list] <b>lacp</b> <b>workp</b> [Workport]	<b>G</b>	Assign a trunk group with LACP active. [GroupID] :1~3 [Port-list]:Member port list, This parameter could be a port range(ex.1-4) or a port list separate by a comma(ex.2, 3, 6) [Workport]: The amount of work ports, this value could not be less than zero or be large than the amount of member ports.	switch(config)# <b>aggregator group 1 1-4 lacp workp 2</b> or switch(config)# <b>aggregator group 2 1,4,3 lacp workp 3</b>
<b>aggregator group</b> [GroupID] [Port-list] <b>nolacp</b>	<b>G</b>	Assign a static trunk group. [GroupID] :1~3 [Port-list]:Member port list, This parameter could be a port range(ex.1-4) or a port list separate by a	switch(config)# <b>aggregator group 1 2-4 nolacp</b> or switch(config)# <b>aggregator group 1 3,1,2 nolacp</b>

		comma(ex.2, 3, 6)	
<b>show aggregator</b>	<b>P</b>	Show the information of trunk group	switch# <b>show aggregator 1</b> or switch# <b>show aggregator 2</b> or switch# <b>show aggregator 3</b>
<b>no aggregator lacp</b> [GroupID]	<b>G</b>	Disable the LACP function of trunk group	switch(config)# <b>no aggregator lacp 1</b>
<b>no aggregator group</b> [GroupID]	<b>G</b>	Remove a trunk group	switch(config)# <b>no aggregator group 2</b>

## VLAN Commands Set

Netstar Commands	Level	Description	Example
<b>vlan database</b>	<b>P</b>	Enter VLAN configure mode	switch# <b>vlan database</b>
<b>Vlanmode</b> [portbase  802.1q   gvrp]	<b>V</b>	To set switch VLAN mode.	switch(vlan)# <b>vlanmode portbase</b> or switch(vlan)# <b>vlanmode 802.1q</b> or switch(vlan)# <b>vlanmode gvrp</b>
<b>no vlan</b>	<b>V</b>	No VLAN	Switch(vlan)# <b>no vlan</b>
<b>Ported based VLAN configuration</b>			
<b>vlan port-based</b> <b>grpname</b> [Group Name] <b>grpid</b> [GroupID]	<b>V</b>	Add new port based VALN	switch(vlan)# <b>vlan port-based grpname test grpid 2 port 2-4</b> <b>or</b> switch(vlan)# <b>vlan port-based grpname test grpid 2 port 2,3,4</b>

<b>port</b> [PortNumbers]			
<b>show vlan</b> [GroupID] or <b>show vlan</b>	<b>V</b>	Show VLAN information	switch(vlan)# <b>show vlan 23</b>
<b>no vlan group</b> [GroupID]	<b>V</b>	Delete port base group ID	switch(vlan)# <b>no vlan group 2</b>
<b>IEEE 802.1Q VLAN</b>			
<b>vlan 8021q name</b> [GroupName] <b>vid</b> [VID]	<b>V</b>	Change the name of VLAN group, if the group didn't exist, this command can't be applied.	switch(vlan)# <b>vlan 8021q name test vid 22</b>
<b>vlan 8021q port</b> [PortNumber] <b>access-link untag</b> [UntaggedVID]	<b>V</b>	Assign a access link for VLAN by port, if the port belong to a trunk group, this command can't be applied.	switch(vlan)# <b>vlan 8021q port 3 access-link untag 33</b>
<b>vlan 8021q port</b> [PortNumber] <b>trunk-link tag</b> [TaggedVID List]	<b>V</b>	Assign a trunk link for VLAN by port, if the port belong to a trunk group, this command can't be applied.	switch(vlan)# <b>vlan 8021q port 3 trunk-link tag 2,3,6,99</b> or switch(vlan)# <b>vlan 8021q port 3 trunk-link tag 3-20</b>
<b>vlan 8021q port</b> [PortNumber] <b>hybrid-link untag tag</b> [UntaggedVID] <b>tag</b> [TaggedVID List]	<b>V</b>	Assign a hybrid link for VLAN by port, if the port belong to a trunk group, this command can't be applied.	switch(vlan)# <b>vlan 8021q port 3 hybrid-link untag 4 tag 3,6,8</b> or switch(vlan)# <b>vlan 8021q port 3 hybrid-link untag 5 tag 6-8</b>
<b>vlan 8021q trunk</b> [PortNumber] <b>access-link untag</b> [UntaggedVID]	<b>V</b>	Assign a access link for VLAN by trunk group	switch(vlan)# <b>vlan 8021q trunk 3 access-link untag 33</b>
<b>vlan 8021q trunk</b>	<b>V</b>	Assign a trunk link for	switch(vlan)# <b>vlan 8021q trunk 3</b>

<b>[PortNumber] trunk-link tag</b> [TaggedVID List]		VLAN by trunk group	<b>trunk-link tag 2,3,6,99</b> or switch(vlan)# <b>vlan 8021q trunk 3 trunk-link tag 3-20</b>
<b>vlan 8021q trunk</b> [PortNumber] <b>hybrid-link untag</b> [UntaggedVID] <b>tag</b> [TaggedVID List]	<b>V</b>	Assign a hybrid link for VLAN by trunk group	switch(vlan)# <b>vlan 8021q trunk 3 hybrid-link untag 4 tag 3,6,8</b> or switch(vlan)# <b>vlan 8021q trunk 3 hybrid-link untag 5 tag 6-8</b>
<b>show vlan</b> [GroupID] or <b>show vlan</b>	<b>V</b>	Show VLAN information	switch(vlan)# <b>show vlan 23</b>
<b>no vlan group</b> [GroupID]	<b>V</b>	Delete port base group ID	switch(vlan)# <b>no vlan group 2</b>

## Spanning Tree Commands Set

Netstar Commands	Level	Description	Example
<b>spanning-tree enable</b>	<b>G</b>	Enable spanning tree	switch(config)# <b>spanning-tree enable</b>
<b>spanning-tree priority</b> [0~61440]	<b>G</b>	Configure spanning tree priority parameter	switch(config)# <b>spanning-tree priority 32768</b>
<b>spanning-tree max-age</b> [seconds]	<b>G</b>	Use the spanning-tree max-age global configuration command to change the interval between messages the spanning tree receives from the root switch. If a switch does not receive a bridge	switch(config)# <b>spanning-tree max-age 15</b>



		protocol data unit (BPDU) message from the root switch within this interval, it recomputed the Spanning Tree Protocol (STP) topology.	
<b>spanning-tree hello-time</b> [seconds]	<b>G</b>	Use the spanning-tree hello-time global configuration command to specify the interval between hello bridge protocol data units (BPDUs).	switch(config)# <b>spanning-tree hello-time 3</b>
<b>spanning-tree forward-time</b> [seconds]	<b>G</b>	Use the spanning-tree forward-time global configuration command to set the forwarding-time for the specified spanning-tree instances. The forwarding time determines how long each of the listening and learning states last before the port begins forwarding.	switch(config)# <b>spanning-tree forward-time 20</b>
<b>stp-path-cost</b> [1~200000000]	<b>I</b>	Use the spanning-tree cost interface configuration	switch(config)# <b>interface fastEthernet 2</b> switch(config-if)# <b>stp-path-cost 20</b>

		command to set the path cost for Spanning Tree Protocol (STP) calculations. In the event of a loop, spanning tree considers the path cost when selecting an interface to place into the forwarding state.	
<b>stp-path-priority</b> <b>[Port Priority]</b>	I	Use the spanning-tree port-priority interface configuration command to configure a port priority that is used when two switches tie for position as the root switch.	switch(config)# <b>interface fastEthernet 2</b> switch(config-if)# <b>stp-path-priority 128</b>
<b>stp-admin-p2p</b> <b>[Auto True False]</b>	I	Admin P2P of STP priority on this interface.	switch(config)# <b>interface fastEthernet 2</b> switch(config-if)# <b>stp-admin-p2p Auto</b>
<b>stp-admin-edge</b> <b>[True False]</b>	I	Admin Edge of STP priority on this interface.	switch(config)# <b>interface fastEthernet 2</b> switch(config-if)# <b>stp-admin-edge True</b>
<b>stp-admin-non-stp</b> <b>[True False]</b>	I	Admin NonSTP of STP priority on this	switch(config)# <b>interface fastEthernet 2</b>

		interface.	switch(config-if)# <b>stp-admin-non-stp False</b>
<b>show spanning-tree</b>	<b>E</b>	Displays a summary of the spanning-tree states.	switch> <b>show spanning-tree</b>
<b>no spanning-tree</b>	<b>G</b>	Disable spanning-tree.	switch(config)# <b>no spanning-tree</b>

## QOS Commands Set

Netstar Commands	Level	Description	Example
<b>qos policy</b> [weighted-fair strict]	<b>G</b>	Select QOS policy scheduling	switch(config)# <b>qos policy weighted-fair</b>
<b>qos prioritytype</b> [port-based cos-only tos-only cos-first tos-first]	<b>G</b>	Setting of QOS priority type	switch(config)# <b>qos prioritytype</b>
<b>qos priority portbased</b> [Port] [lowest low middle high]	<b>G</b>	Configure Port-based Priority	switch(config)# <b>qos priority portbased 1 low</b>
<b>qos priority cos</b> [Priority][lowest low middle high]	<b>G</b>	Configure COS Priority	switch(config)# <b>qos priority cos 0 middle</b>
<b>qos priority tos</b> [Priority][lowest low middle high]	<b>G</b>	Configure TOS Priority	switch(config)# <b>qos priority tos 3 high</b>
<b>show qos</b>	<b>P</b>	Displays the information of QoS configuration	Switch# <b>show qos</b>
<b>no qos</b>	<b>G</b>	Disable QoS function	switch(config)# <b>no qos</b>

## IGMP Commands Set

Netstar Commands	Level	Description	Example
------------------	-------	-------------	---------

<b>igmp enable</b>	<b>G</b>	Enable IGMP snooping function	switch(config)# <b>igmp enable</b>
<b>igmp query auto</b>	<b>G</b>	Set IGMP query to auto mode	switch(config)# <b>igmp query auto</b>
<b>igmp query force</b>	<b>G</b>	Set IGMP query to force mode	switch(config)# <b>igmp query force</b>
<b>igmp unregister flooding</b>	<b>G</b>	Set unregister stream flooding	switch(config)# <b>igmp unregister flooding</b>
<b>igmp unregister blocking</b>	<b>G</b>	Set unregister stream blocking	switch(config)# <b>igmp unregister flooding</b>
<b>show igmp configuration</b>	<b>P</b>	Displays the details of an IGMP configuration.	switch# <b>show igmp configuration</b>
<b>no igmp</b>	<b>G</b>	Disable IGMP snooping function	switch(config)# <b>no igmp</b>
<b>no igmp query</b>	<b>G</b>	Disable IGMP query	switch# <b>no igmp query</b>

## Multicast Filtering Commands Set

Netstar Commands	Level	Description	Example
<b>multicast-filtering</b> [IP-Addr]	<b>I</b>	Configure multicast filtering entry of interface	Switch(config)# <b>interface fastEthernet 2</b> switch(config-if)# <b>multicast-filtering 228.1.1.1</b>
<b>no multicast-filtering</b> [IP-Addr]	<b>I</b>	Remove multicast filtering entry of interface	Switch(config)# <b>interface fastEthernet 2</b> switch(config-if)# <b>no multicast-filtering 228.1.1.1</b>

## LLDP Commands Set

Netstar Commands	Level	Description	Example
<b>lldp enable</b>	<b>G</b>	Enable LLDP function	switch(config)# <b>lldp enable</b>
<b>lldp interval</b> [Time sec]	<b>G</b>	Configure LLDP interval	switch(config)# <b>lldp interval 20</b>

## Mac / Filter Table Commands Set

Netstar Commands	Level	Description	Example
<b>mac-address-table static hwaddr</b> [MAC]	<b>I</b>	Configure MAC address table of interface (static).	Switch(config)# <b>interface fastEthernet 2</b> switch(config-if)# <b>mac-address-table static hwaddr 000012345678</b>
<b>mac-address-table filter hwaddr</b> [MAC]	<b>G</b>	Configure MAC address table(filter)	switch(config)# <b>mac-address-table filter hwaddr 000012348678</b>
<b>show mac-address-table</b>	<b>P</b>	Show all MAC address table	switch# <b>show mac-address-table</b>
<b>show mac-address-table static</b>	<b>P</b>	Show static MAC address table	switch# <b>show mac-address-table static</b>
<b>show mac-address-table filter</b>	<b>P</b>	Show filter MAC address table.	Switch# <b>show mac-address-table filter</b>
<b>no mac-address-table static hwaddr</b> [MAC]	<b>I</b>	Remove an entry of MAC address table of interface (static)	switch(config)# <b>interface fastEthernet 2</b> switch(config-if)# <b>no mac-address-table static hwaddr 000012345678</b>
<b>no mac-address-table filter hwaddr</b> [MAC]	<b>G</b>	Remove an entry of MAC address table (filter)	switch(config)# <b>no mac-address-table filter hwaddr 000012348678</b>

<b>no mac-address-table</b>	<b>G</b>	Remove dynamic entry of MAC address table	switch(config)# <b>no mac-address-table</b>
-----------------------------	----------	---	---

## SNMP Commands Set

Netstar Commands	Level	Description	Example
<b>snmp system-name</b> [System Name]	<b>G</b>	Set SNMP agent system name	switch(config)# <b>snmp system-name l2switch</b>
<b>snmp system-location</b> [System Location]	<b>G</b>	Set SNMP agent system location	switch(config)# <b>snmp system-location lab</b>
<b>snmp system-contact</b> [System Contact]	<b>G</b>	Set SNMP agent system contact	switch(config)# <b>snmp system-contact where</b>
<b>snmp agent-mode</b> [v1v2c v3 v1v2cv3]	<b>G</b>	Select the agent mode of SNMP	switch(config)# <b>snmp agent-mode v1v2cv3</b>
<b>snmp community-strings</b> [Community] <b>right</b> [RO/RW]	<b>G</b>	Add SNMP community string.	Switch(config)# <b>snmp community-strings public right rw</b>
<b>snmp-server host</b> [IP address] <b>community</b> [Community-string] <b>trap-version</b> [v1 v2c]	<b>G</b>	Configure SNMP server host information and community string	switch(config)# <b>snmp-server host 192.168.1.50 community public trap-version v1 (remove)</b> Switch(config)# <b>no snmp-server host 192.168.1.50</b>
<b>snmpv3 context-name</b> [Context Name ]	<b>G</b>	Configure the context name	switch(config)# <b>snmpv3 context-name Test</b>
<b>snmpv3 user</b> [User Name] <b>group</b>	<b>G</b>	Configure the userprofile for SNMPV3 agent.	Switch(config)# <b>snmpv3 user test01 group G1 password AuthPW PrivPW</b>

<b>[Group Name]</b> <b>password</b> <b>[Authentication Password]</b> <b>[Privacy Password]</b>		Privacy password could be empty.	
<b>snmpv3 access context-name</b> <b>[Context Name ]</b> <b>group</b> <b>[Group Name ]</b> <b>security-level</b> <b>[NoAuthNoPriv AuthNoPriv AuthPriv]</b> <b>match-rule</b> <b>[Exact Prifix]</b> <b>views</b> <b>[Read View Name]</b> <b>[Write View Name]</b> <b>[Notify View Name]</b>	<b>G</b>	Configure the access table of SNMPV3 agent	switch(config)# <b>snmpv3 access context-name Test group G1 security-level AuthPriv match-rule Exact views V1 V1 V1</b>
<b>snmpv3 mibview view</b> <b>[View Name]</b> <b>type</b> <b>[Excluded Included]</b> <b>sub-oid</b> <b>[OID]</b>	<b>G</b>	Configure the mibview table of SNMPV3 agent	switch(config)# <b>snmpv3 mibview view V1 type Excluded sub-oid 1.3.6.1</b>
<b>show snmp</b>	<b>P</b>	Show SNMP configuration	switch# <b>show snmp</b>
<b>no snmp community-strings</b> <b>[Community]</b>	<b>G</b>	Remove the specified community.	Switch(config)# <b>no snmp community-strings public</b>
<b>no snmp-server host</b> <b>[Host-address]</b>	<b>G</b>	Remove the SNMP server host.	Switch(config)# <b>no snmp-server host 192.168.1.50</b>
<b>no snmpv3 user</b>	<b>G</b>	Remove specified	Switch(config)# <b>no snmpv3 user</b>

[User Name]		user of SNMPv3 agent.	<b>Test</b>
<b>no snmpv3 access</b> <b>context-name</b> [Context Name ] <b>group</b> [Group Name ] <b>security-level</b> [NoAuthNoPriv AuthNoPriv AuthPriv] <b>match-rule</b> [Exact Prefix] <b>views</b> [Read View Name] [Write View Name] [Notify View Name]	<b>G</b>	Remove specified access table of SNMPv3 agent.	Switch(config)# <b>no snmpv3 access context-name Test group G1 security-level AuthPriv match-rule Exact views V1 V1 V1</b>
<b>no snmpv3 mibview</b> <b>view</b> [View Name] <b>type</b> [Excluded Included] <b>sub-oid</b> [OID]	<b>G</b>	Remove specified mibview table of SNMPV3 agent.	Switch(config)# <b>no snmpv3 mibview view V1 type Excluded sub-oid 1.3.6.1</b>

## Port Mirroring Commands Set

Netstar Commands	Level	Description	Example
<b>monitor</b> [RX TX Both]	<b>I</b>	Configure source port of monitor function	switch(config)# <b>interface fastEthernet 2</b> switch(config-if)# <b>monitor RX</b>
<b>monitor rx</b> [Port ID]	<b>G</b>	Set RX destination	switch(config)# <b>monitor rx 2</b>



		port of monitor function	
<b>monitor tx</b> [Port ID]	<b>G</b>	Set TX destination port of monitor function	switch(config)# <b>monitor tx 3</b>
<b>show monitor</b>	<b>P</b>	Show port monitor information	switch# <b>show monitor</b>
<b>show monitor</b>	<b>I</b>	Show port monitor information	switch(config)# <b>interface fastEthernet 2</b> switch(config-if)# <b>show monitor</b>
<b>no monitor</b>	<b>I</b>	Disable source port of monitor function	switch(config)# <b>interface fastEthernet 2</b> switch(config-if)# <b>no monitor</b>

## 802.1x Commands Set

Netstar Commands	Level	Description	Example
<b>8021x enable</b>	<b>G</b>	Use the 802.1x global configuration command to enable 802.1x protocols.	Switch(config)# <b>8021x enable</b>
<b>8021x system radiusip</b> [IP address]	<b>G</b>	Use the 802.1x system radius IP global configuration command to change the radius server IP.	Switch(config)# <b>8021x system radiusip 192.168.1.1</b>
<b>8021x system serverport</b> [port ID]	<b>G</b>	Use the 802.1x system server port global configuration command to change the radius server port	switch(config)# <b>8021x system serverport 1812</b>

<b>8021x system accountport</b> [port ID]	<b>G</b>	Use the 802.1x system account port global configuration command to change the accounting port	switch(config)# <b>8021x system accountport 1813</b>
<b>8021x system sharedkey</b> [ID]	<b>G</b>	Use the 802.1x system share key global configuration command to change the shared key value.	Switch(config)# <b>8021x system sharedkey 123456</b>
<b>8021x system nasid</b> [words]	<b>G</b>	Use the 802.1x system nasid global configuration command to change the NAS ID	switch(config)# <b>8021x system nasid test1</b>
<b>8021x misc quietperiod</b> [sec.]	<b>G</b>	Use the 802.1x misc quiet period global configuration command to specify the quiet period value of the switch.	Switch(config)# <b>8021x misc quietperiod 10</b>
<b>8021x misc txperiod</b> [sec.]	<b>G</b>	Use the 802.1x misc TX period global configuration command to set the TX period.	Switch(config)# <b>8021x misc txperiod 5</b>
<b>8021x misc supptimeout</b> [sec.]	<b>G</b>	Use the 802.1x misc supp timeout global configuration command to set the supplicant timeout.	Switch(config)# <b>8021x misc supptimeout 20</b>

<b>8021x misc</b> <b>servertimeout</b> [sec.]	<b>G</b>	Use the 802.1x misc server timeout global configuration command to set the server timeout.	Switch(config)# <b>8021x misc servertimeout 20</b>
<b>8021x misc maxrequest</b> [number]	<b>G</b>	Use the 802.1x misc max request global configuration command to set the MAX requests.	Switch(config)# <b>8021x misc maxrequest 3</b>
<b>8021x misc</b> <b>reauthperiod</b> [sec.]	<b>G</b>	Use the 802.1x misc reauth period global configuration command to set the reauth period.	Switch(config)# <b>8021x misc reauthperiod 3000</b>
<b>8021x portstate</b> [disable   reject   accept   authorize]	<b>I</b>	Use the 802.1x port state interface configuration command to set the state of the selected port.	Switch(config)# <b>interface fastethernet 3</b> switch(config-if)# <b>8021x portstate accept</b>
<b>show 8021x</b>	<b>E</b>	Displays a summary of the 802.1x properties and also the port sates.	Switch> <b>show 8021x</b>
<b>no 8021x</b>	<b>G</b>	Disable 802.1x function	switch(config)# <b>no 8021x</b>

## TFTP Commands Set

Netstar Commands	Level	Description	Defaults Example
------------------	-------	-------------	------------------

<b>backup</b> <b>flash:backup_cfg</b>	<b>G</b>	Save configuration to TFTP and need to specify the IP of TFTP server and the file name of image.	Switch(config)# <b>backup</b> <b>flash:backup_cfg</b>
<b>restore</b> <b>flash:restore_cfg</b>	<b>G</b>	Get configuration from TFTP server and need to specify the IP of TFTP server and the file name of image.	Switch(config)# <b>restore</b> <b>flash:restore_cfg</b>
<b>upgrade</b> <b>flash:upgrade_fw</b>	<b>G</b>	Upgrade firmware by TFTP and need to specify the IP of TFTP server and the file name of image.	Switch(config)# <b>upgrade</b> <b>flash:upgrade_fw</b>

## SystemLog, SMTP and Event Commands Set

Netstar Commands	Level	Description	Example
<b>systemlog ip</b> [IP address]	<b>G</b>	Set System log server IP address.	Switch(config)# <b>systemlog ip</b> <b>192.168.1.100</b>
<b>systemlog mode</b> [client server both]	<b>G</b>	Specified the log mode	switch(config)# <b>systemlog mode</b> <b>both</b>
<b>show systemlog</b>	<b>E</b>	Displays system log.	Switch> <b>show systemlog</b>
<b>show systemlog</b>	<b>P</b>	Show system log client & server information	switch# <b>show systemlog</b>
<b>no systemlog</b>	<b>G</b>	Disable systemlog function	switch(config)# <b>no systemlog</b>
<b>smtp enable</b>	<b>G</b>	Enable SMTP function	switch(config)# <b>smtp enable</b>
<b>smtp serverip</b>	<b>G</b>	Configure SMTP	switch(config)# <b>smtp serverip</b>

[IP address]		server IP	<b>192.168.1.5</b>
<b>smtp sender</b> [sendername]	<b>G</b>	Configure sender of mail	switch(config)# <b>smtp snder</b> <b>aaa@bbb.com</b>
<b>smtp authentication</b>	<b>G</b>	Enable SMTP authentication	switch(config)# <b>smtp authentication</b>
<b>smtp account</b> [account]	<b>G</b>	Configure authentication account	switch(config)# <b>smtp account</b> <b>John</b>
<b>smtp password</b> [password]	<b>G</b>	Configure authentication password	switch(config)# <b>smtp password</b> <b>1234</b>
<b>smtp rcptemail</b> [Index] [Email address]	<b>G</b>	Configure Rcpt e-mail Address	switch(config)# <b>smtp rcptemail 1</b> <a href="mailto:Alert@test.com">Alert@test.com</a>
<b>show smtp</b>	<b>P</b>	Show the information of SMTP	switch# <b>show smtp</b>
<b>no smtp</b>	<b>G</b>	Disable SMTP function	switch(config)# <b>no smtp</b>
<b>event device-cold-start</b> [Systemlog SMTP Both]	<b>G</b>	Set cold start event type	switch(config)# <b>event device-cold-start both</b>
<b>event authentication-failure</b> [Systemlog SMTP Both]	<b>G</b>	Set Authentication failure event type	switch(config)# <b>event authentication-failure both</b>
<b>event ring-topology-change</b> [Systemlog SMTP Both]	<b>G</b>	Set X-ring topology changed event type	switch(config)# <b>event ring-topology-change both</b>
<b>event systemlog</b> [Link-UP Link-Down Both]	<b>I</b>	Set port event for system log	switch(config)# <b>interface fastethernet 3</b> switch(config-if)# <b>event systemlog both</b>
<b>event smtp</b> [Link-UP Link-Down Both]	<b>I</b>	Set port event for SMTP	switch(config)# <b>interface fastethernet 3</b>

<b>Down Both]</b>			switch(config-if)# <b>event smtp both</b>
<b>show event</b>	<b>P</b>	Show event selection	switch# <b>show event</b>
<b>no event device-cold-start</b>	<b>G</b>	Disable cold start event type	switch(config)# <b>no event device-cold-start</b>
<b>no event authentication-failure</b>	<b>G</b>	Disable Authentication failure event typ	switch(config)# <b>no event authentication-failure</b>
<b>no event ring-topology-change</b>	<b>G</b>	Disable X-ring topology changed event type	switch(config)# <b>no event ring-topology-change</b>
<b>no event systemlog</b>	<b>I</b>	Disable port event for system log	switch(config)# <b>interface fastethernet 3</b> switch(config-if)# <b>no event systemlog</b>
<b>no event smtp</b>	<b>I</b>	Disable port event for SMTP	switch(config)# <b>interface fastethernet 3</b> switch(config-if)# <b>no event smtp</b>
<b>show systemlog</b>	<b>P</b>	Show system log client & server information	switch# <b>show systemlog</b>

## Fault Relay Alarm Commands Set

Netstar Commands	Level	Description	Example
<b>faultrelay power</b>	<b>G</b>	Configure Relay Alarm for Power Failure	switch(config)# <b>faultrelay power 1</b>
<b>faultrelay</b> [enable disable]	<b>I</b>	Configure Relay Alarm for Port Link Down/Broken	switch(config)# <b>interface fastethernet 3</b> switch(config-if)# <b>faultrelay enable</b>
<b>no faultrelay</b>	<b>G</b>	Disable Fault Relay Alarm Function	switch(config)# <b>no faultrelay</b>

## SNTP Commands Set

Netstar Commands	Level	Description	Example
<b>sntp enable</b>	<b>G</b>	Enable SNTP function	switch(config)# <b>sntp enable</b>
<b>sntp daylight</b>	<b>G</b>	Enable daylight saving time, if SNTP function is inactive, this command can't be applied.	switch(config)# <b>sntp daylight</b>
<b>sntp daylight-period</b> [Start time] [End time]	<b>G</b>	Set period of daylight saving time, if SNTP function is inactive, this command can't be applied. Parameter format: [yyyymmdd-hh:mm]	switch(config)# <b>sntp daylight-period 20060101-01:01 20060202-01:01</b>
<b>sntp daylight-offset</b> [Minute]	<b>G</b>	Set offset of daylight saving time, if SNTP function is inactive, this command can't be applied.	switch(config)# <b>sntp daylight-offset 3</b>
<b>sntp ip</b> [IP]	<b>G</b>	Set SNTP server IP, if SNTP function is inactive, this command can't be applied.	switch(config)# <b>sntp ip 192.169.1.1</b>
<b>sntp timezone</b> [Timezone]	<b>G</b>	Set timezone index, use "show sntp timezone" command to get more information of index	switch(config)# <b>sntp timezone 22</b>

		number	
<b>sntp sync-interval</b> [Secs]	<b>G</b>	Set synchronization interval	switch(config)# <b>sntp sync-interval 64</b>
<b>show sntp</b>	<b>P</b>	Show SNTP information	switch# <b>show sntp</b>
<b>show sntp timezone</b>	<b>P</b>	Show index number of time zone list	switch# <b>show sntp timezone</b>
<b>no sntp</b>	<b>G</b>	Disable SNTP function	switch(config)# <b>no sntp</b>
<b>no sntp daylight</b>	<b>G</b>	Disable daylight saving time	switch(config)# <b>no sntp daylight</b>

## X-ring Commands Set

Netstar Commands	Level	Description	Example
<b>ring enable</b>	<b>G</b>	Enable X-ring	switch(config)# <b>ring enable</b>
<b>ring master</b>	<b>G</b>	Enable ring master	switch(config)# <b>ring master</b>
<b>ring couplering</b>	<b>G</b>	Enable couple ring	switch(config)# <b>ring couplering</b>
<b>ring dualhoming</b>	<b>G</b>	Enable dual homing	switch(config)# <b>ring dualhoming</b>
<b>ring ringport</b> [1st Ring Port] [2nd Ring Port]	<b>G</b>	Configure 1st/2nd Ring Port	switch(config)# <b>ring ringport 7 8</b>
<b>ring couplingport</b> [Coupling Port]	<b>G</b>	Configure Coupling Port	switch(config)# <b>ring couplingport 1</b>
<b>ring controlport</b> [Control Port]	<b>G</b>	Configure Control Port	switch(config)# <b>ring controlport 2</b>
<b>ring homingport</b> [Dual Homing Port]	<b>G</b>	Configure Dual Homing Port	switch(config)# <b>ring homingport 3</b>
<b>show ring</b>	<b>P</b>	Show the information of X - Ring	switch# <b>show ring</b>
<b>no ring</b>	<b>G</b>	Disable X-ring	switch(config)# <b>no ring</b>
<b>no ring master</b>	<b>G</b>	Disable ring master	switch(config)# <b>no ring master</b>



<b>no ring couplering</b>	<b>G</b>	Disable couple ring	switch(config)# <b>no ring couplering</b>
<b>no ring dualhoming</b>	<b>G</b>	Disable dual homing	switch(config)# <b>no ring dualhoming</b>

## PoE Commands Set

Netstar Commands	Level	Description	Example
<b>poe</b>	<b>P</b>	Enter POE configure mode	switch# <b>poe</b>
<b>system knockoff-disabled</b> [Enable Disable]	<b>P</b>	Set PoE system Port Knockoff Disabled	switch(poe)# <b>system knockoff-disabled disable</b>
<b>system ac-disconnect</b> [Enable Disable]	<b>P</b>	Set PoE system AC Disconnect	switch(poe)# <b>system ac-disconnect disable</b>
<b>system capacitive-detect</b> [Enable Disable]	<b>P</b>	Set PoE system Capacitive Detection	switch(poe)# <b>system capacitive-detect enable</b>
<b>port [PortNumbers] state</b> [Enable Disable]	<b>P</b>	Set PoE port State	switch(poe)# <b>port 1 state disable</b>
<b>port [PortNumbers] plfc</b> [Enable Disable]	<b>P</b>	Set PoE port Power Limit from Classification	switch(poe)# <b>port 1 plfc enable</b>
<b>port [PortNumbers] legacy</b> [Enable Disable]	<b>P</b>	Set PoE port Legacy	switch(poe)# <b>port 1 legacy enable</b>
<b>port [PortNumbers] priority</b> [Low High Critical]	<b>P</b>	Set PoE port Priority	switch(poe)# <b>port 1 priority high</b>
<b>port [PortNumbers] powerlimit</b> [Value]	<b>P</b>	Set PoE port Power Limit Value	switch(poe)# <b>port 1 powerlimit 15300</b>
<b>show poe</b>	<b>P</b>	Show setting of PoE function	switch# <b>show poe</b>

## **ComNet Customer Service**

Customer Care is ComNet Technology's global service center, where our professional staff are ready to answer your questions at any time. Email address of ComNet Global Service Center:

[customercare@ComNet.net](mailto:customercare@ComNet.net)



### ***World Headquarters***

3 Corporate Drive  
Danbury, CT 06810 USA  
T 203 796-5300  
F 203 796-5303  
888 678-9427 Tech Support  
[info@ComNet.net](mailto:info@ComNet.net)  
[www.comnet.net](http://www.comnet.net)

### ***ComNet Europe Ltd***

8 Turnberry Park Road  
Gildersome, Morley  
Leeds, LS27 7LE, UK  
T +44 (0)113 307 6400  
F +44 (0)113 253 7462  
[info-europe@ComNet.net](mailto:info-europe@ComNet.net)

© 2010 Communication Networks, LLC

All rights reserved.

The COMNET logo is a registered trademark of Communication Networks Corporation. Additional Company and product names may be trademarks or registered trademarks of the individual companies and are respectfully acknowledged and do not imply endorsement.