

Pretium™ 4U Distribution Housing

Revision History

Issue	Date	Reason for Change
1	08/2007	Initial release

Table of Contents

Admonishments	2
1. General	2
2. Carton Contents	3
3. Tools and Materials Required	4
3.1 Tools	4
3.2 Materials	4
4. Installation	4
4.1 Unpacking Stubbed Units	4
4.2 Mount the Housing into a Rack	4
4.3 Remove the Front or Rear Doors	5
4.3.1 Removing Front Door	5
4.3.2 Removing Rear Door	5
4.4 Secure the Cable	5
4.4.1 Strain-relieve using the Universal Cable Clamp (UCC)	5
4.4.2 Strain-relieve using Cable Ties	6
4.4.3 Strain-relieving the Cable Central Member	7
4.4.4 Grounding Armored Cable	7
5. Managing Cable	8
5.1 Install Preconnectorized Cable into Adapter Panels	8
5.2 Install Cable Using Buffer Tube Fanout Kits	8
5.3 Install Connector Modules	9
5.4 Install Cable Using Splice Trays	9
5.5 Documentation	9
5.6 Reinstall Doors	10
5.7 Route Jumpers (Patch Cords)	10
6. Connector Care and Cleaning	10
7. Maintenance	10

Admonishments

The precautionary terms used by Corning Cable Systems in its standard recommended procedures conform to the guidelines expressed in the American National Standards Institute document (ANSI Z535) for hazard alert messages. Alerts are included in this instruction based on the following:



DANGER: indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



WARNING: indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION: indicates a hazardous situation which, if not avoided, may result in minor or moderate injury.

1. GENERAL

This document describes the recommended procedure for installing the Pretium™ 4U Distribution Housing (p/n PDH-04U) (Figure 1). The unit fits into 19-inch utility racks and occupies four rack spaces. Individual components of the housing are shown in Figure 2. A separate adapter bracket (purchased separately) is required to mount the unit into a 23-inch rack.


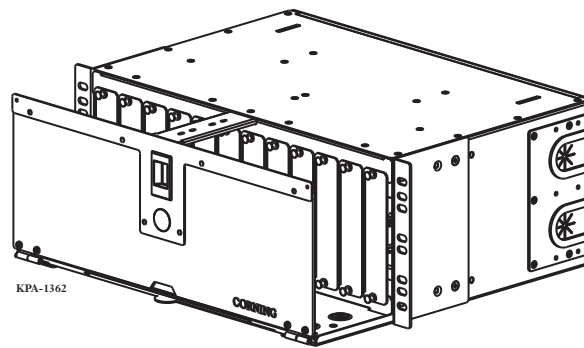


Figure 1 — PDH-04U Housing

If installing OSP (outside plant) cable in splicing or fanout applications, bring the cable into the housing using the entry grommets in the cable entry plate. If installing connectorized multi-fiber indoor cable, remove the cable entry plate to allow routing of preconnectrized cable or field termination of large quantities of four-fiber cables.

Factory-pigtailed units or stubbed units are available. Contact your customer service representative to order other configurations or to purchase accessories that are sold separately.

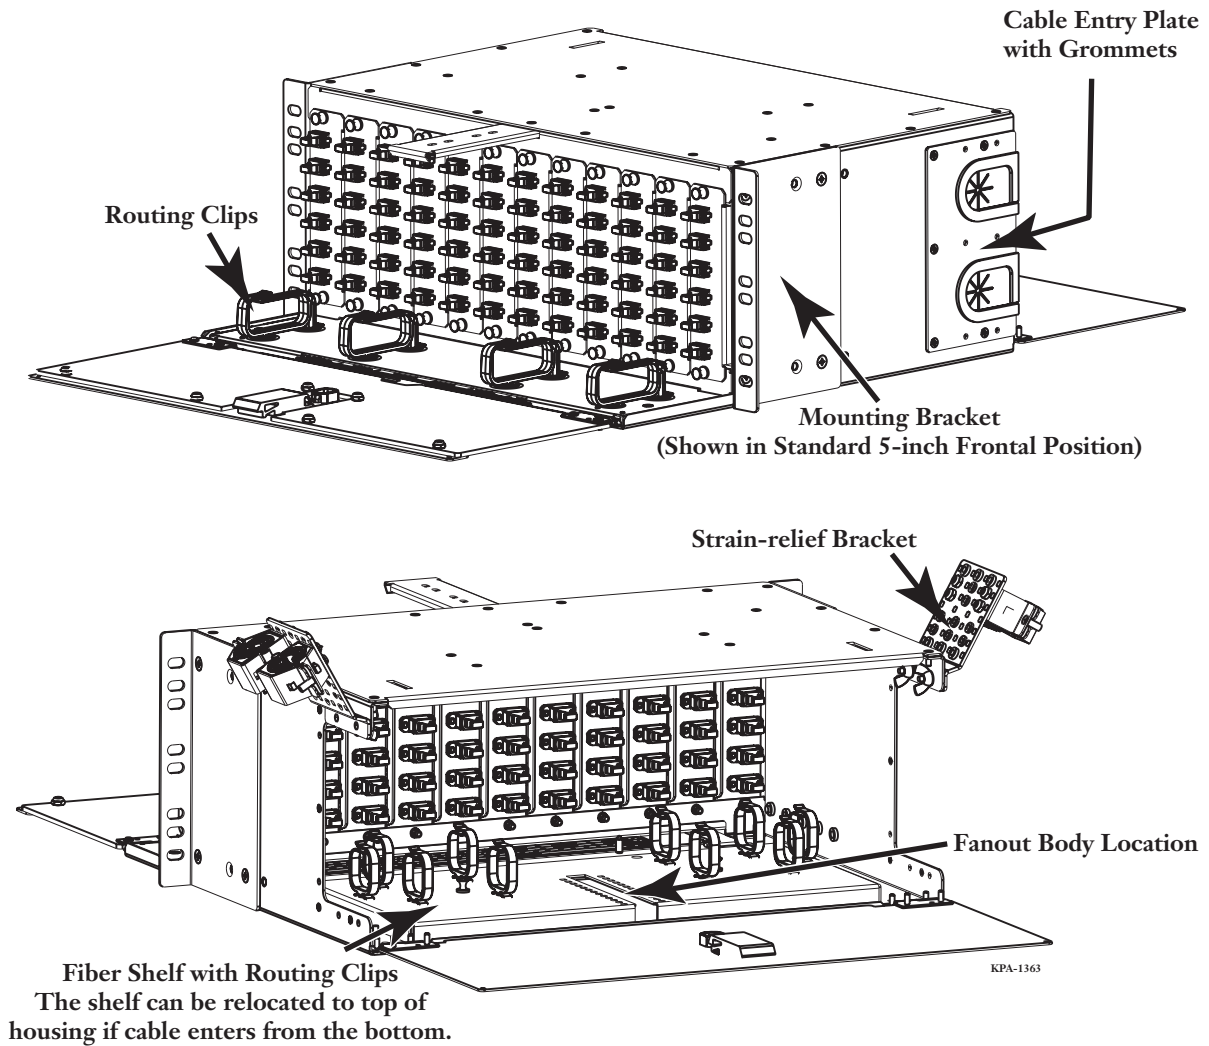

Part Number	Dimensions (H x W x D)	Weight
PDH-04U	7 x 17 x 16 in. (18 x 43 x 41 cm)	11 lb (5 kg)

KPA-1360

Figure 2 — Components and Dimensions of PDH-04U Housing

2. CARTON CONTENTS

- Pretium™ 04U Distribution Housing with two mounting brackets
- Hardware Kit containing:
 - (1) Unit Identification label
 - (1 ft) Double-sided hook-and-loop strap
 - (12) Cable ties
 - (3 ft) Spiral wrap

- (4) Routing clips
- (1) Universal Cable Clamp kit
- (1) Universal Cable Clamp bracket
- (2) 6-32 Wing nuts
- (8) #10-32 Phillips-head screws
- (4) #12-24 Phillips-head screws
- (1) 8-32 Phillips-head screw
- (1) M6 flat washer
- (1) U-shaped washer

3. TOOLS AND MATERIALS REQUIRED

3.1 Tools

- Phillips-head screwdriver
- Flat-tipped screwdriver
- 5/16-inch socket or wrench
- 11/32-inch socket or wrench
- Needle-nose pliers
- Cable stripping tools

3.2 Materials

Depending on your application, the following materials may be required:

- Preconnectorized Adapter Panels
- Universal Cable Clamp (UCC)
- Grounding kit (p/n FDC-CABLE-GRND) to ground armored cable
- Buffer tube fanout (BTF) kits
- Splice tray bracket kit (p/n PC4-SPLC-12SR)

4. INSTALLATION

4.1 Unpacking Stubbed Units

If you are installing a stubbed unit, follow the directions provided with the shipping container to remove the stubbed unit from its packaging. Place the unit on a work surface to perform the preliminary work before mounting the unit into a rack.

4.2 Mount the Housing into a Rack

Attach the unit to the equipment rack using the four screws provided. Two screws are required per each side of the housing. The mounting bracket position may be changed to adjust the frontal projection from the rack (Figure 3).

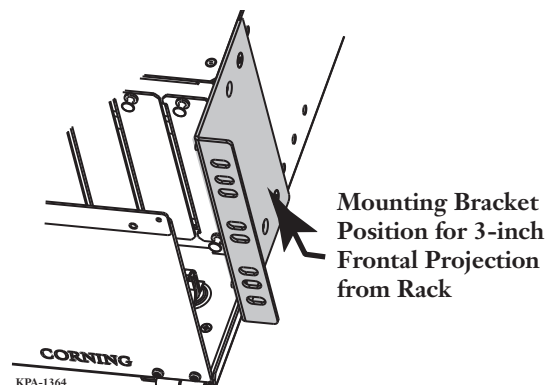


Figure 3 — Mounting Bracket

If installing into a 23-inch rack, attach the adapter bracket (Figure 4) to both sides of the housing using the screws provided before installing the unit into the rack.

4.3 Remove the Front or Rear Doors

The doors can be removed to facilitate cable installation.

4.3.1 Removing Front Door

Step 1: Loosen the screw on the left side of the housing.

Step 2: Slide the screw toward the rear of the housing (Figure 5).

Step 3: Slide the door off the hinge pin.

4.3.2 Removing Rear Door

Step 1: Open rear door of housing.

Step 2: Flex the door and slide the door off one of the hinge pins.

Step 3: Remove the door from the other hinge pin.

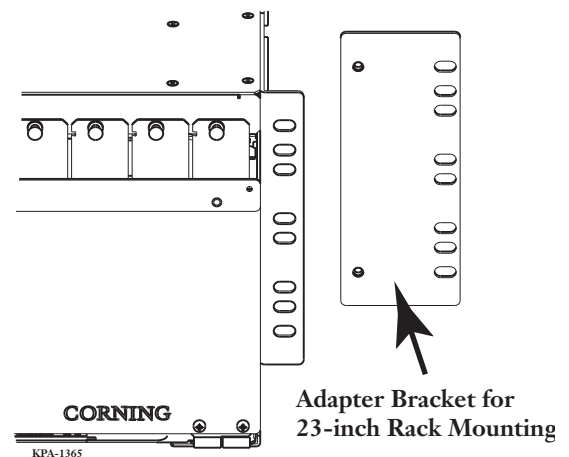


Figure 4 — Adapter Bracket for 23-inch Rack

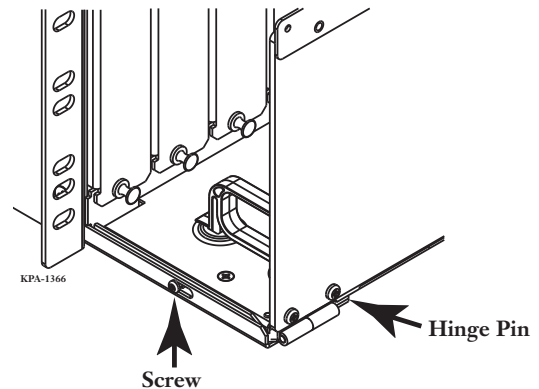


Figure 5 — Hinge Pin on Front Door

4.4 Secure the Cable

NOTE: *Fiber optic cable is sensitive to excessive pulling, bending, and crushing forces. Consult the cable specification sheet for the cable you are installing. Do not bend the cable more sharply than the minimum recommended bend radius. Do not apply more pulling force to the cable than specified. Do not crush the cable or allow it to kink. Doing so may cause damage that can alter the transmission characteristics of the cable; the cable may have to be replaced.*

IMPORTANT: *If you are installing outside plant cable or temperature fluctuates widely along any part of the cable, the central member must be strain-relieved. Failure to do so may result in damage to the cable as temperature varies. If the entire length of cable is located in a controlled environment where temperature fluctuation is minimal, it is not necessary to secure the central members. The cable can be strain-relieved by sheath retention alone.*


For cable sheath retention only, use the Universal Cable Clamp (UCC) or cable ties.

4.4.1 Strain-relieve using the Universal Cable Clamp (UCC)

Step 1: Determine the location for cable entry into the housing.

Step 2: If installing outside plant cable, remove the membrane from the appropriate entry grommet (Figure 7).

Bracket Orientation for Top Cable Entry

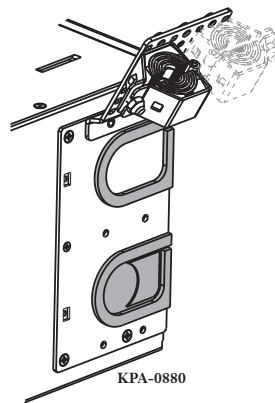

Bracket Orientation for Bottom Cable Entry


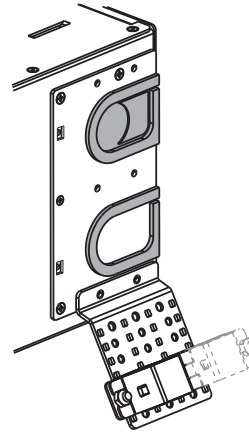


Figure 6 — Install Strain-relief

Step 3: If installing indoor cable, remove appropriate cable entry plate as shown in Figure 7.

Bracket Orientation for Top Cable Entry

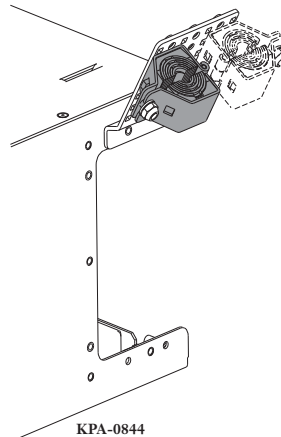

Bracket Orientation for Bottom Cable Entry

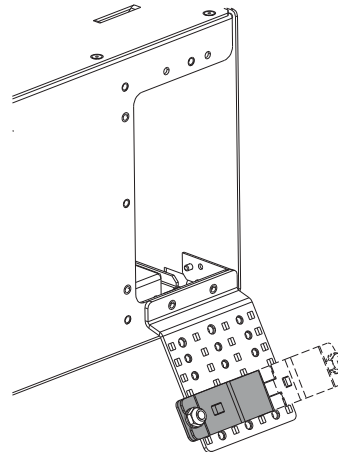


Figure 7 — Install Strain-relief Bracket Directly to Housing

Step 4: Attach the UCC clamshell to the strain-relief bracket as shown in Figure 6 and Figure 7 to allow installation of a second UCC if necessary.

Step 5: Attach the strain-relief bracket to the housing.

Step 6: Follow installation instructions provided with the UCC kit to secure the cable. Do not tighten yet to allow for cable adjustment if necessary.

4.4.2 Strain-relieve using Cable Ties

Step 1: Attach the cable tie to the strain-relief bracket in two places with cable ties as shown in Figure 8.

Step 2: Attach the strain-relief bracket to the housing.

Step 3: Allow room on the bracket to strain-relieve the cable strength member, if present.

4.4.3 Strain-relieving the Cable Central Member



CAUTION: *Wear safety glasses to protect your eyes from accidental injury when handling chemicals and cutting fiber. Pieces of glass fiber are very sharp and can damage the eye easily.*



CAUTION: *Wear safety gloves to protect hands from accidental injury when using sharp instruments.*

- Step 1:** Install the U-shaped washer and the flat washer on the strain-relief bracket in the orientation shown using the supplied Phillips-head machine screw (Figure 8).
- Step 2:** Place the central member and yarn, if present, between the U-shaped washer and the flat washer.
- Step 3:** Wrap yarn around the screw in a clockwise direction and under the U-shaped washer.
- Step 4:** Tighten the screw.
- Step 5:** Trim off the excess yarn and central member.

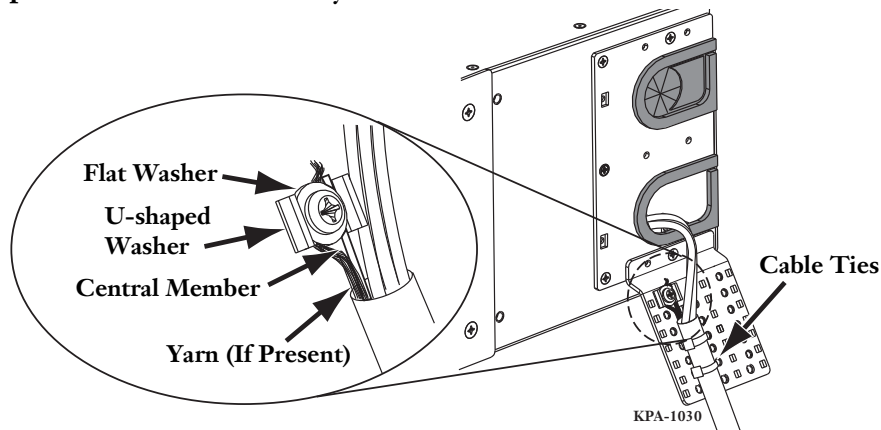


Figure 8 — Strain-relieve Central Member

4.4.4 Grounding Armored Cable

One grounding kit (p/n FDC-CABLE-GRND, purchased separately) is required to ground each armored cable. Follow instructions provided with the grounding kit to attach the hardware to the armored cable.

- Step 1:** Attach the other end of the ground wire from the armored cable to the equipment rack. The equipment rack must be grounded to the primary building ground.
- Step 2:** Remove the paint from the rack at the grounding location to ensure metal-to-metal contact. It is recommended to use an antioxidant on the bare metal to prevent corrosion.
- Step 3:** Or, attach the other end of the ground wire from the armored cable to a rack-mounted grounding bus bar that is grounded to the primary building ground.

5. MANAGING CABLE

5.1 Install Preconnectorized Cable into Adapter Panels



WARNING: *Never look directly into the end of a fiber that may be carrying laser light. Laser light is invisible and can damage your eyes. Viewing it directly does no cause pain. The iris of the eye will not close involuntarily as when viewing a bright light. Consequently, serious damage to the retina of the eye is possible. Should accidental eye exposure to laser light be suspected, arrange for an eye examination immediately.*



WARNING: *DO NOT use magnifiers in the presence of laser radiation. Diffused laser light can cause eye damage if focused with optical instruments. Should accidental eye exposure to laser light be suspected, arrange for an eye examination immediately.*

- Step 1:** Remove the blank panels from the front of the unit and replace with adapter panels (purchased separately).
- Step 2:** Clean connectors and adapters as described in Section 6.
- Step 3:** Install connectors into the adapters at the rear of the adapter panels (Figure 9).
- Step 4:** Route fiber slack through the routing clips on the fiber shelf.

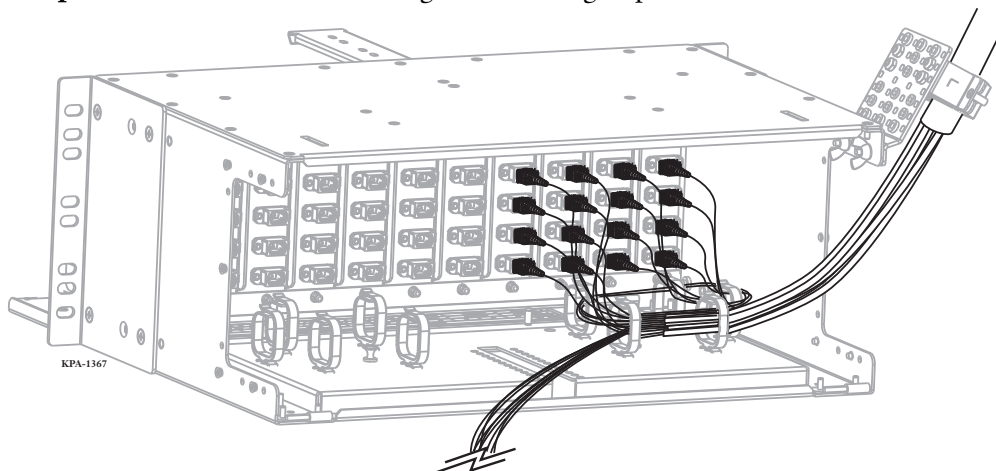


Figure 9 — Preconnectorized Cable Installation and Routing

5.2 Install Cable Using Buffer Tube Fanout Kits

- Step 1:** Terminate the fibers according to the instruction provided with the BTF kit (purchased separately).
- Step 2:** Feed the fanout body and connectors through the entry grommet (Figure 10).
- Step 3:** Slide the fanout body into the cut-out in the fiber shelf with the rings on the fanout body beneath the shelf. Secure fanout with a cable tie (Figure 10 inset).
- Step 4:** Remove the blank panels from the unit and replace with connector panels (purchased separately).
- Step 5:** Clean connectors and adapters as described in Section 6.
- Step 6:** Install connectors into the rear of the adapter panels.

Step 7: Route fiber slack through the routing clips on the fiber shelf.

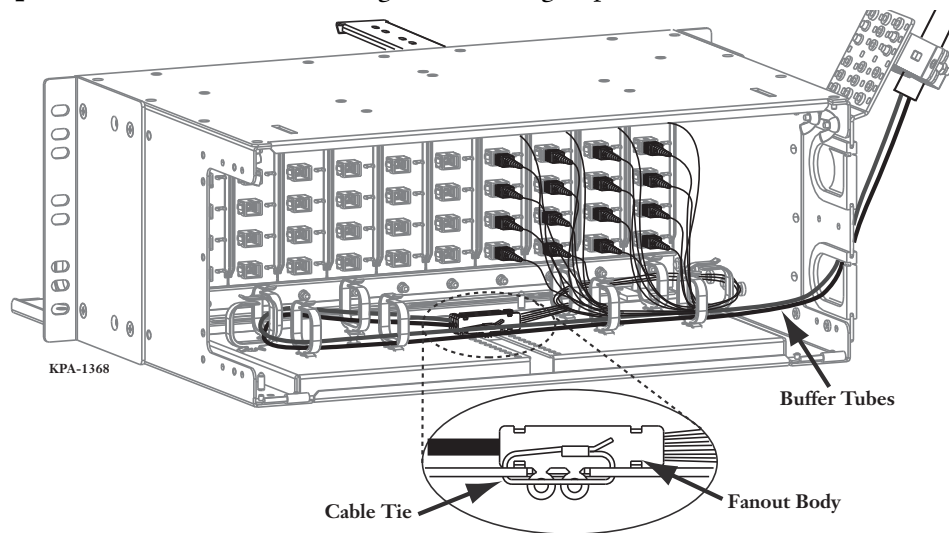


Figure 10 — Fanout Installation and Cable Routing

5.3 Install Connector Modules

Remove the blank panels from the front of the unit and replace with the connector modules (purchased separately).

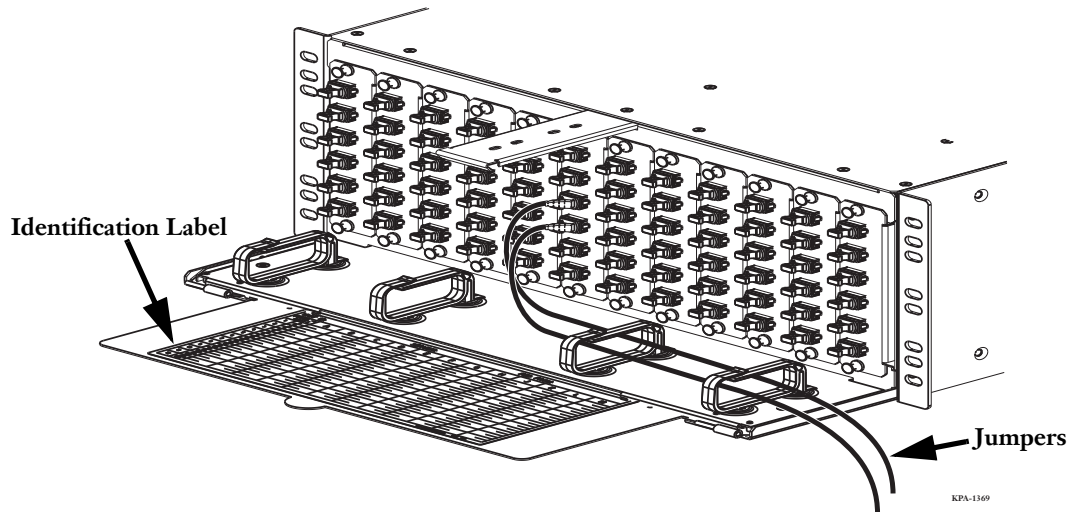


Figure 11 — Jumper Routing

5.4 Install Cable Using Splice Trays

A splice tray bracket kit (p/n PC4-SPLC-12SR, purchased separately) is required to install splice trays. Follow instructions provided with the splice tray bracket kit.

5.5 Documentation

Record fiber identification information appropriately on the provided identification label stored beneath the fiber routing plate (Figure 11). Accurate recordkeeping is imperative for an organized installation.

5.6 Reinstall Doors

If the front or rear doors were removed, reinstall them at this time.

5.7 Route Jumpers (Patch Cords)

Step 1: Remove dust caps from the connectors and adapters into which they will be mated. Refer to Section 6 for recommended cleaning instructions. Clean connector end-faces and adapters per standard company practices and insert connectors into adapters.

Step 2: Install jumpers as specified by company planning diagrams.

Step 3: Route jumpers through the clips at the front of the housing.

6. CONNECTOR CARE AND CLEANING

- Always keep dust caps on connectors and adapters when not in use.
- Ensure dust caps are clean before reuse.
- Use optical cleaning materials as standardized by your company.
- Clean the connector before every mating, especially for test equipment patch cords (jumpers).
- A minimum level of cleaning is listed below. Local procedures may require more rigorous cleaning methods.

Step 1: Remove plugs from the connector adapter.

Step 2: Wipe the connector ferrule twice with a lint-free wiping material moistened with isopropyl alcohol. Then wipe across the end of the ferrule.



CAUTION: *Isopropyl alcohol is flammable with a flashpoint at 54°F. It can cause irritation to eyes on contact. In case of eye contact, flush eyes with water for at least 15 minutes. Inhaling fumes may cause mild dizziness. In case of ingestion, consult a physician.*

Step 3: Repeat previous step with a dry wipe.

7. MAINTENANCE

The unit requires very little maintenance to ensure fibers and parts remain in good condition.

- External components may be cleaned occasionally with a damp, nonabrasive cloth.
- Check nuts, bolts, and screws; tighten as needed.
- Check fiber optic cable to make sure bends do not exceed the minimum bend radius.
- Check cables for unnecessary strain, for crimping or crushing at entries and exits, and for damage.
- Check unit record labels to make sure all are clear and accurate.